

Removal and Installation

General Equipment


Flat Headed Screw Driver

Materials

Name	Specification
Automatic Transmission Fluid	MERCON® LV WSS-M2C938-A

Removal

1. Refer to: [Transmission Range \(TR\) Sensor](#) (307-01 Automatic Transmission, Removal and Installation).
2.  **NOTICE:** Take extra care not to damage the mating faces.
Use the General Equipment: [Flat Headed Screw Driver](#)

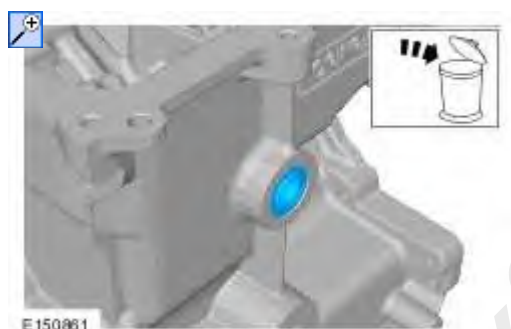

Installation

1. **NOTE:** Use a new seal.
Apply a thin coating.
Material: [MERCON® LV ; WSS-M2C938-A \(Automatic Transmission Fluid\)](#)
2. **NOTE:** Make sure that the component is correctly installed.
Use a suitable socket.



2. Refer to: [Transmission Range \(TR\) Sensor](#) (307-01 Automatic Transmission, Removal and Installation).

mcx30.com