


Removal and Installation

Special Tool(s)

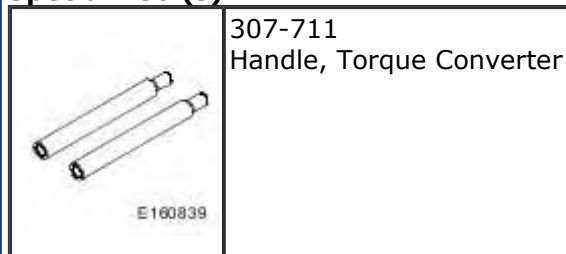

Removal

1. Refer to: [Transmission](#) (307-01 Automatic Transmission, Removal).




 **NOTICE:** Make sure that no component falls off during removal.
NOTE: Be prepared to collect escaping fluid.

Install Special Service Tool: 307-711.



Installation

1. **NOTE:** Install a new component if it is damaged or has excessive wear.

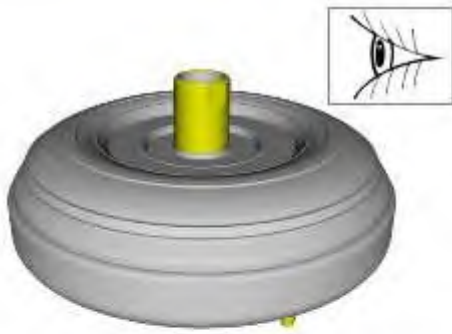

E150775



NOTICE: Take extra care not to damage the seal.
NOTE: Make sure that the component is correctly installed.

Remove Special Service Tool: 307-711.



E186599

3. Refer to: [Transmission](#) (307-01 Automatic Transmission, Installation).