

Removal and Installation

Special Tool(s) / General Equipment

	307-575 Converter Seal Installer
Slide Hammer Dent Puller	

Removal

1. Refer to: [Torque Converter](#) (307-01 Automatic Transmission, Removal and Installation).
2. Use the General Equipment: [Slide Hammer Dent Puller](#)



Installation

1. **NOTE:** Use a new seal.
Use Special Service Tool: [307-575](#).



2. **NOTE:** Make sure that the component is correctly installed.
Use Special Service Tool: [307-575](#).



3. Refer to: [Torque Converter](#) (307-01 Automatic Transmission, Removal and Installation).

mcx30.com