


## Removal and Installation

### General Equipment

Hot Air Gun


### Removal

1. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. Remove engine undershield - If equipped.
- 3.

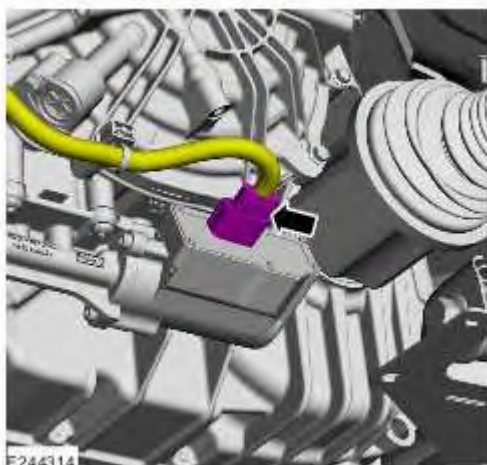


4. **NOTE:** Be prepared to collect escaping fluid.

Use the General Equipment: [Hot Air Gun](#)

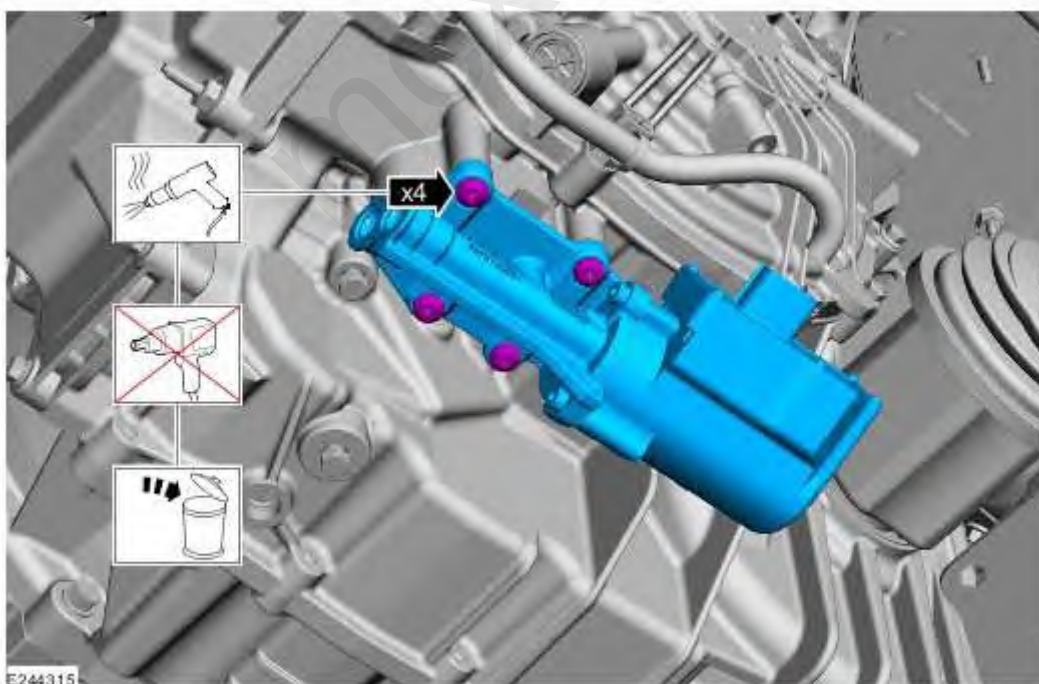


- 5.

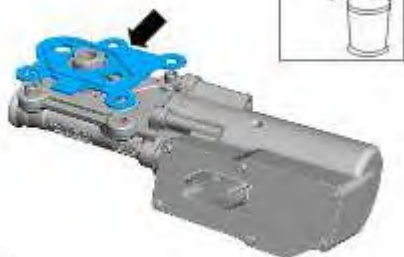

E244959

## Installation


1.

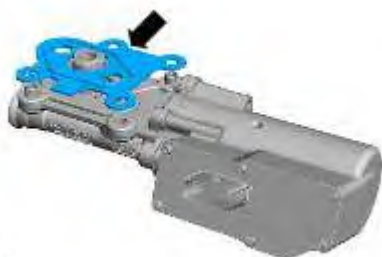

E244317


2. NOTE: Make sure that the mating faces are clean and free of foreign material.  
NOTE: Make sure that new bolts are installed.

*Torque: 13 Nm*

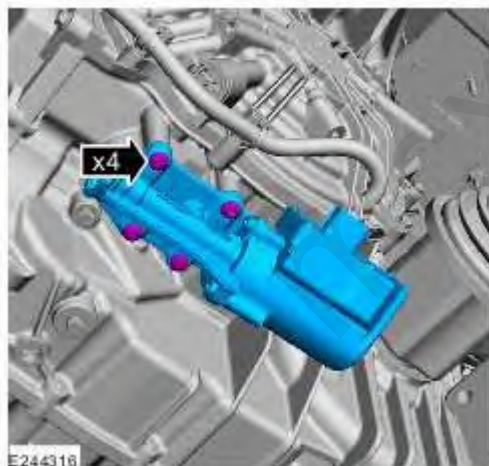

E244316

3.

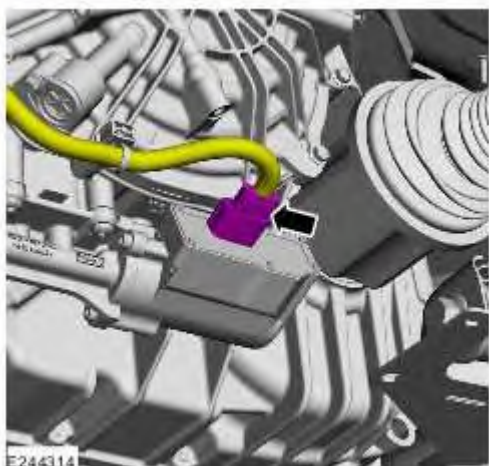

4. Refer to: [Transmission Fluid Level Check](#) (307-01 Automatic Transmission, General Procedures).

mcx30.com