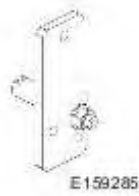



Removal and Installation

Special Tool(s) / General Equipment


 E159285	307-696 Remover, TRS Retaining Pin
Punch	

Removal


1. Refer to: [Main Control Valve Body](#) (307-01 Automatic Transmission, Removal and Installation).
- 2.

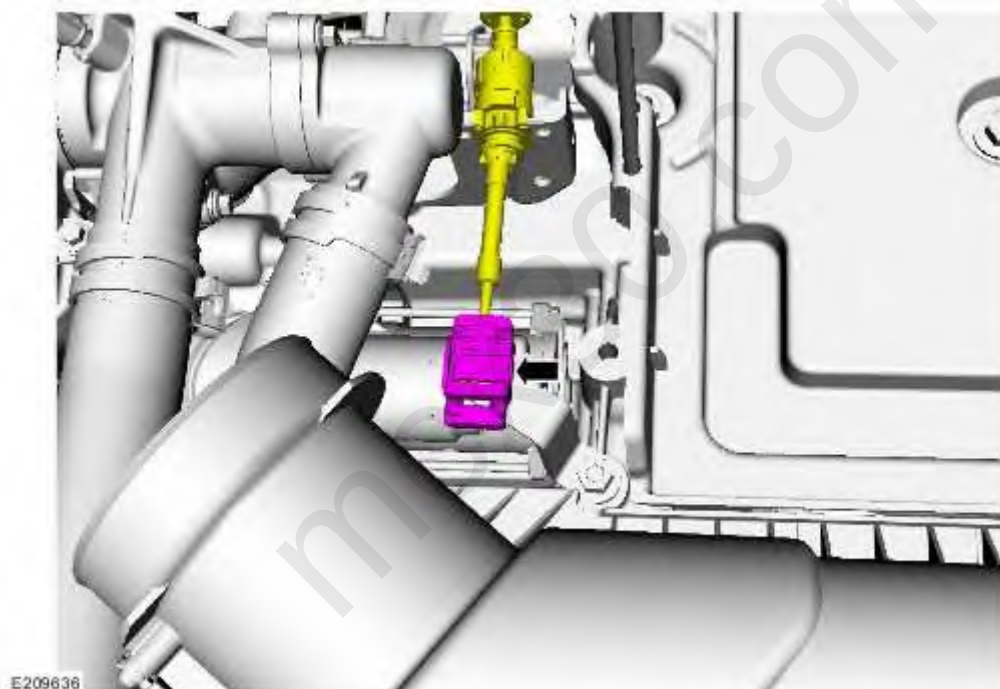

- 3.

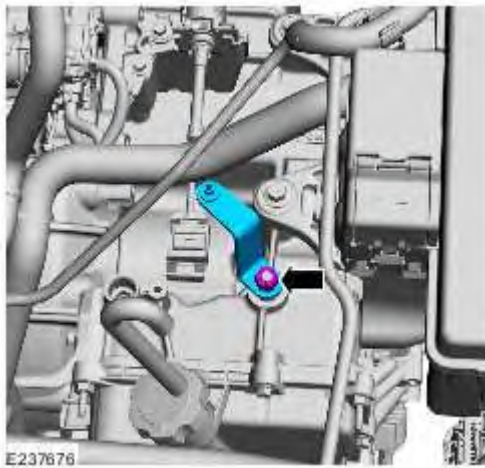


4. Install Special Service Tool: 307-696.

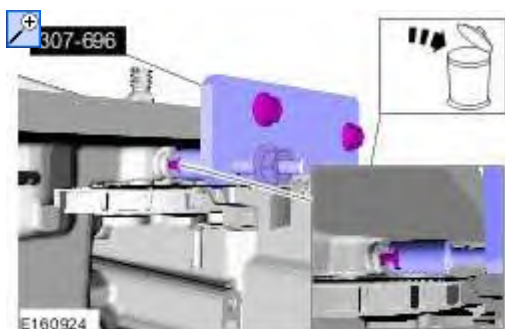


5. Remove Special Service Tool: 307-696.

6.  NOTICE: Take extra care when handling the component.

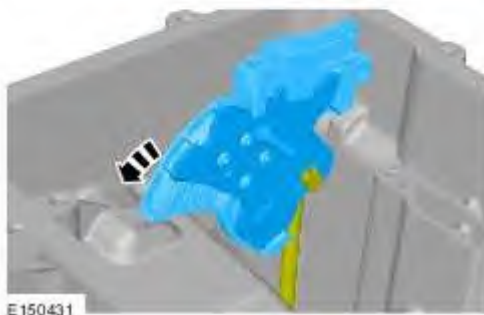


Installation

1. NOTE: Make sure that the component is correctly installed.

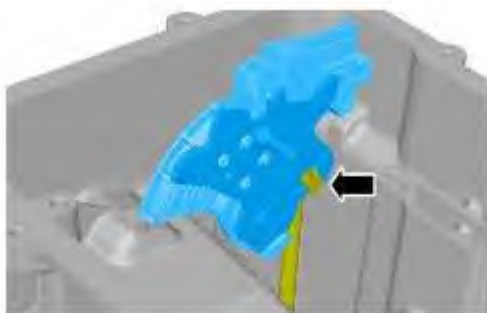


E 150825

2.  **NOTICE:** Take extra care not to damage the edges of the component.
Use the General Equipment: [Punch](#)

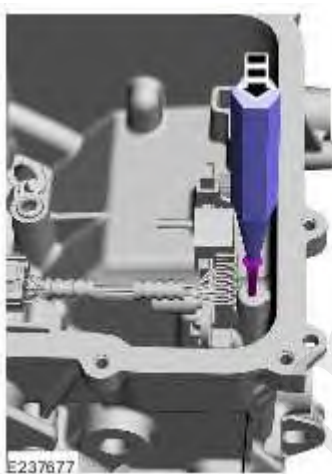


E237677

3. Torque: 17 Nm

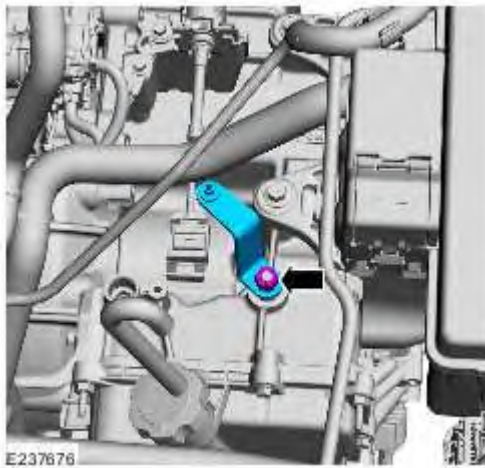

4.

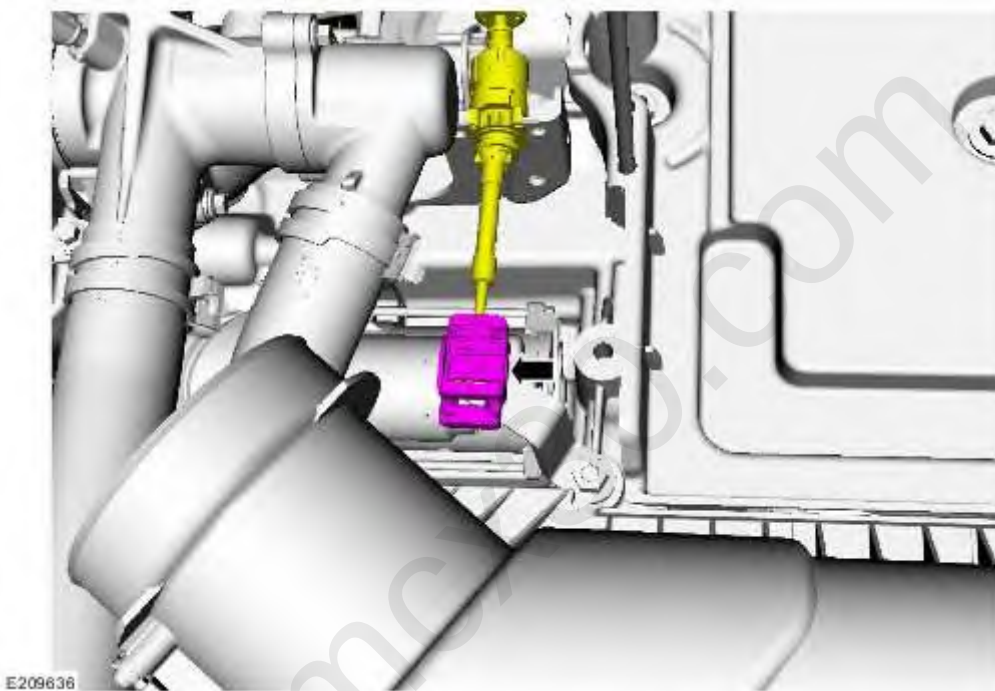

5. Refer to: [Main Control Valve Body](#) (307-01 Automatic Transmission, Removal and Installation).
6. Refer to: [Selector Lever Cable Adjustment](#) (307-05 Automatic Transmission External Controls, General Procedures).