



Removal and Installation

Removal



1. Refer to: [Front Bumper Cover](#) (501-19 Bumpers, Removal and Installation).
2.
 - 1.
 2. **NOTE:** Make sure that no component falls off during removal.

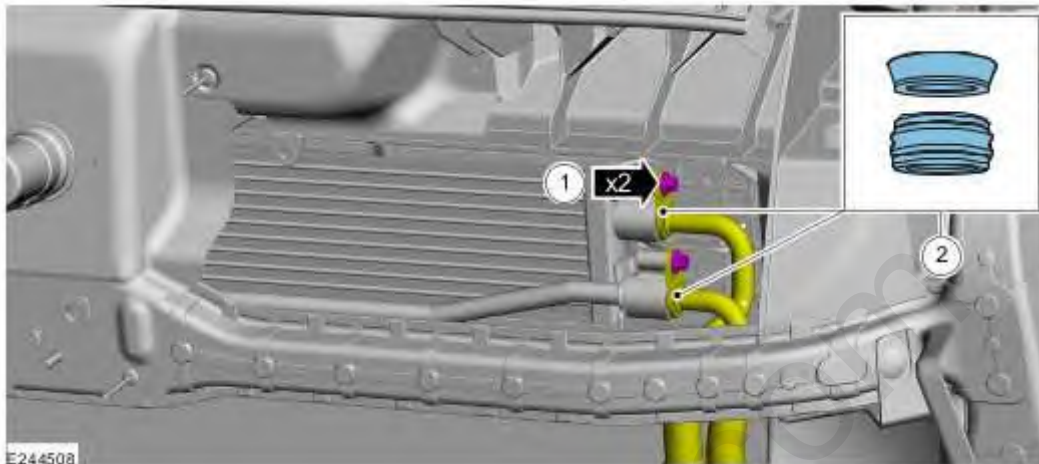

- 3.


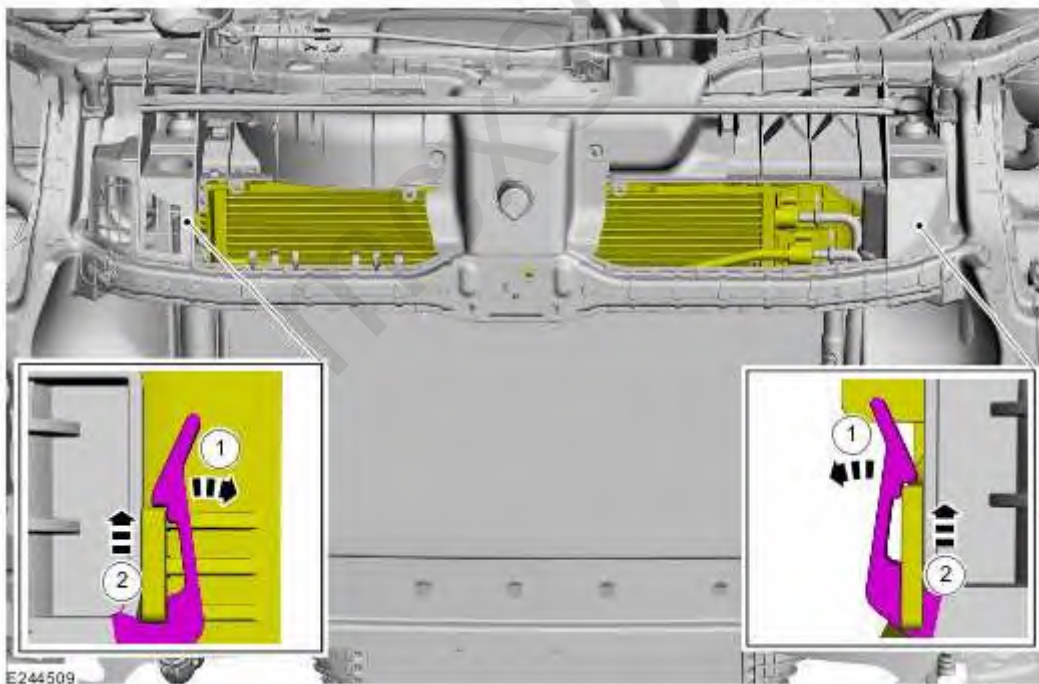


4.
 - 1.
 2. **NOTE:** Make sure that no components catch.
 - 3.

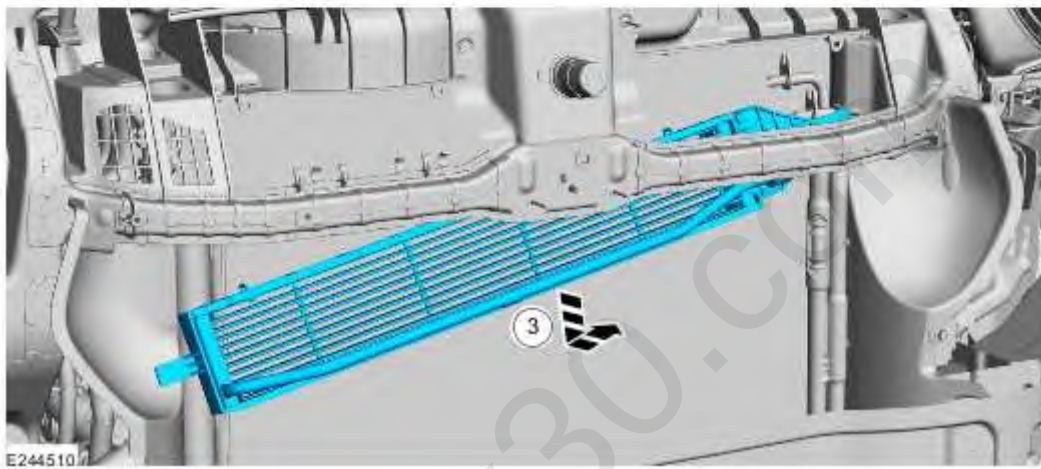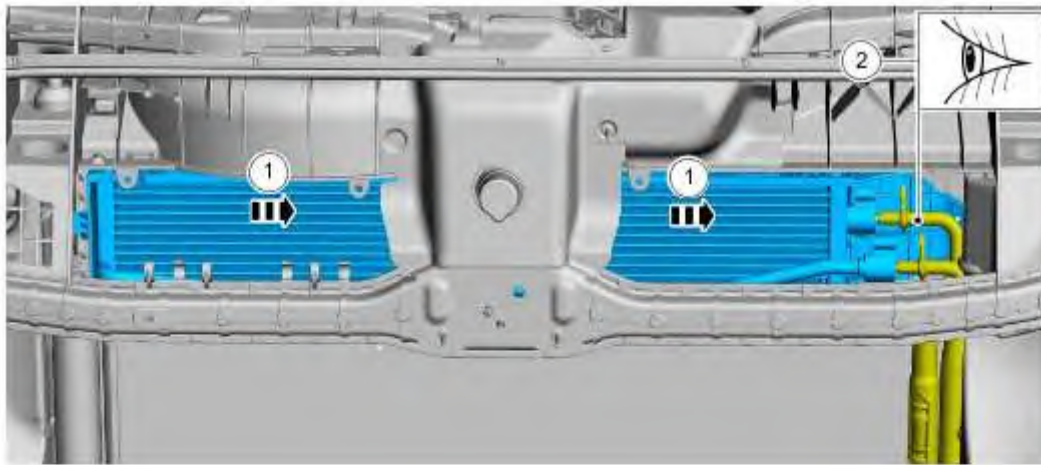


Installation

1.
 - 1.
 2. NOTE: Make sure that no components catch.
 - 3.

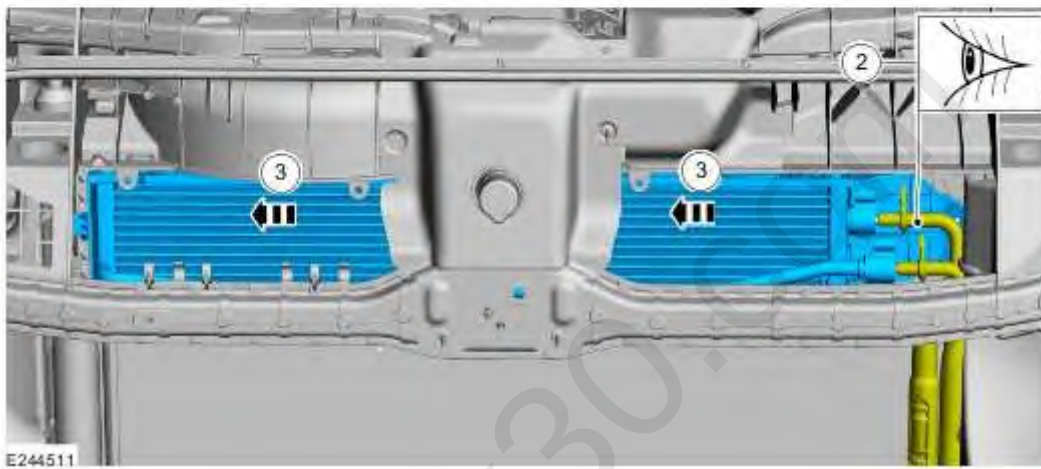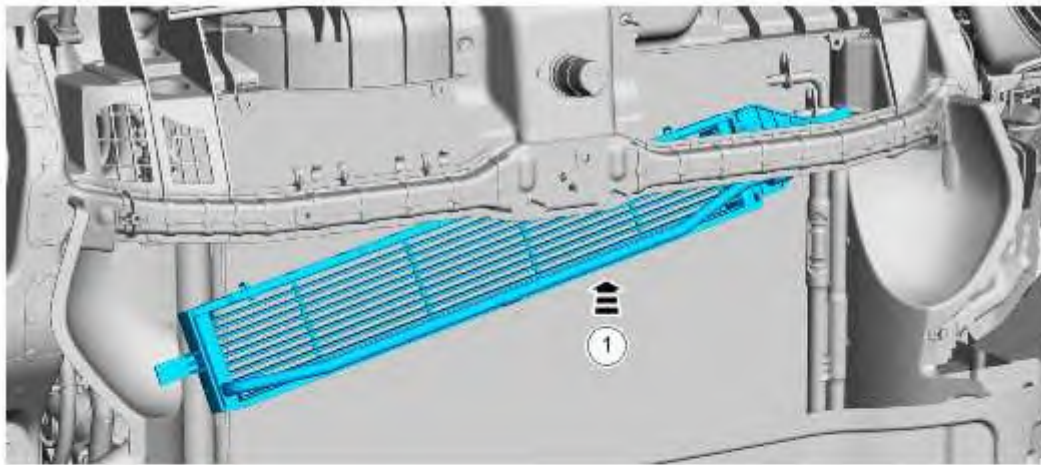

2. NOTE: Make sure that the component is correctly installed.

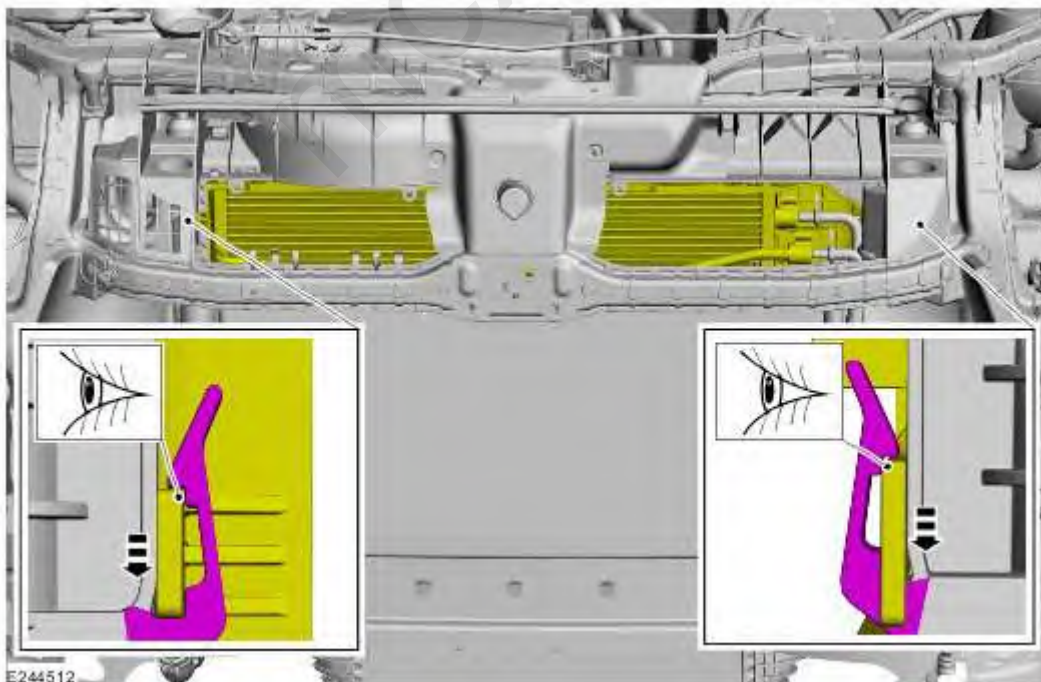


3. 1. NOTE: Make sure that the seal is correctly located.

Apply a thin coating.

Refer to: [Specifications](#) (307-01 Automatic Transmission, Specifications).

2. *Torque:* 11 Nm

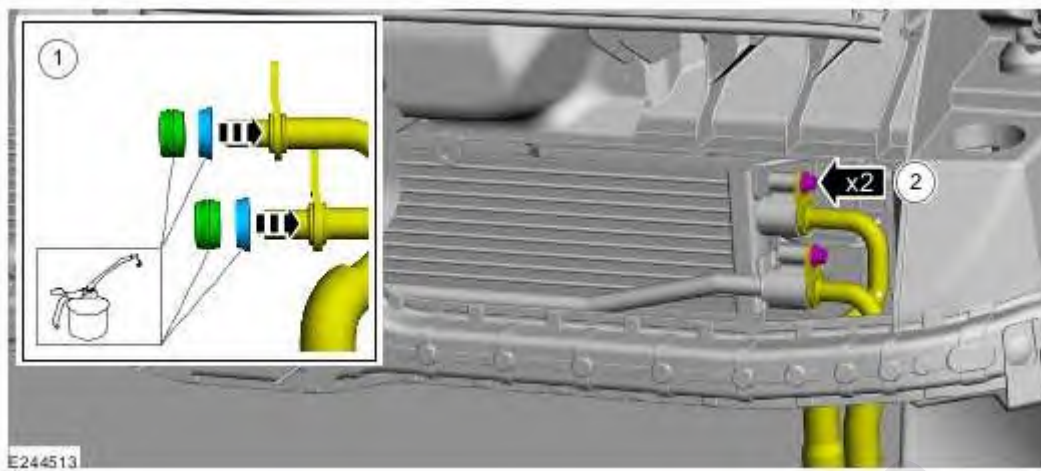

4. Refer to: [Front Bumper Cover](#) (501-19 Bumpers, Removal and Installation).

5. Refer to: [Transmission Fluid Level Check](#) (307-01 Automatic Transmission, General Procedures).