

Removal and Installation

Special Tool(s)

	307-569 Disconnect Tool TOC Line (1/2)
---	---

Removal




NOTICE: Make sure that all openings are sealed with clean blanking caps.
NOTE: Be prepared to collect escaping fluid.


1.




2. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
3. Remove engine undershield - If equipped.
- 4.

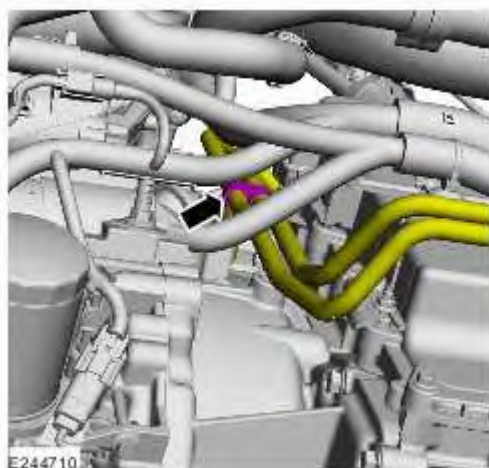



5.
 - 1.
 2. **NOTE:** Make sure that no component falls off during removal.

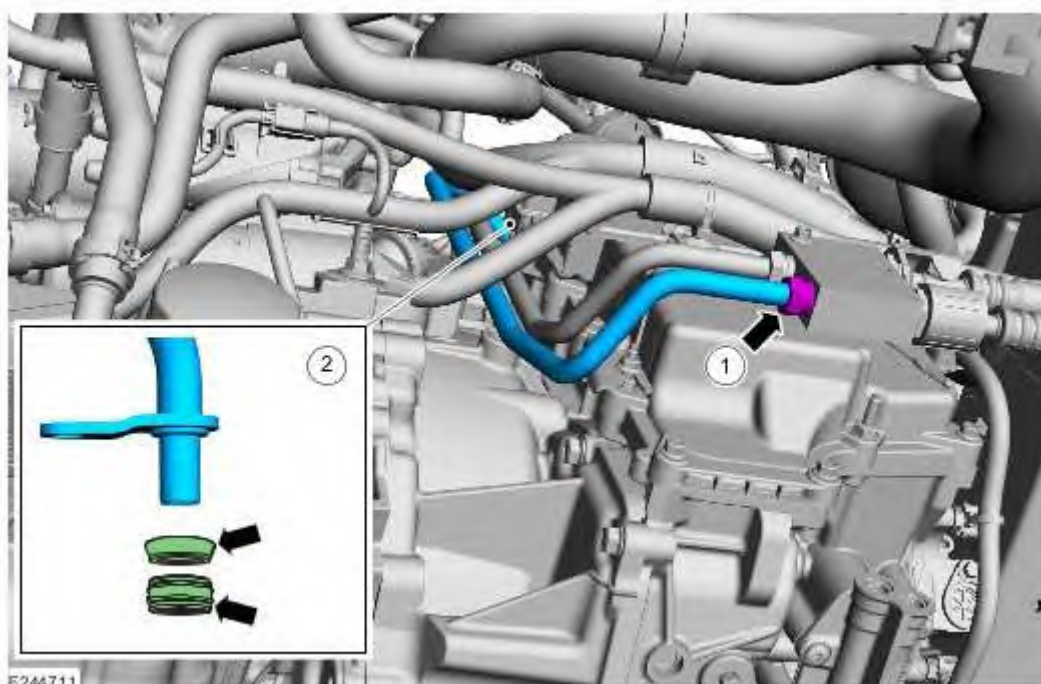


6.

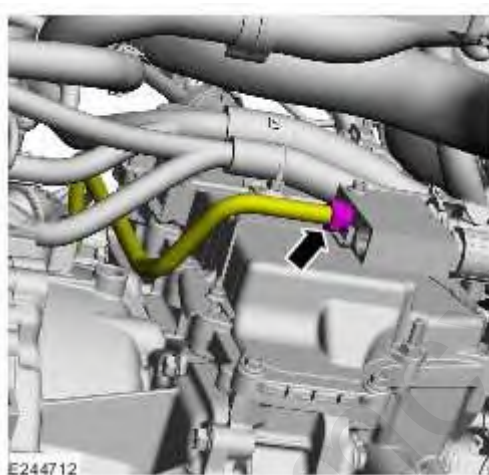


7.

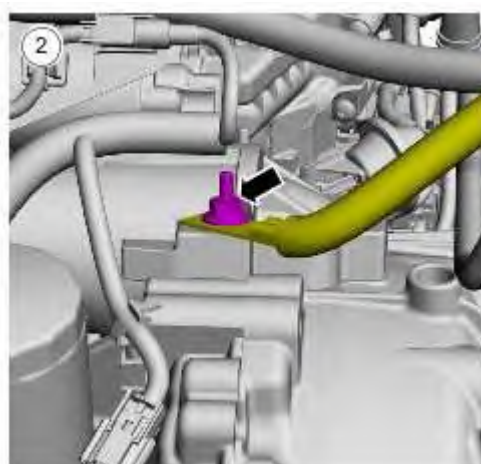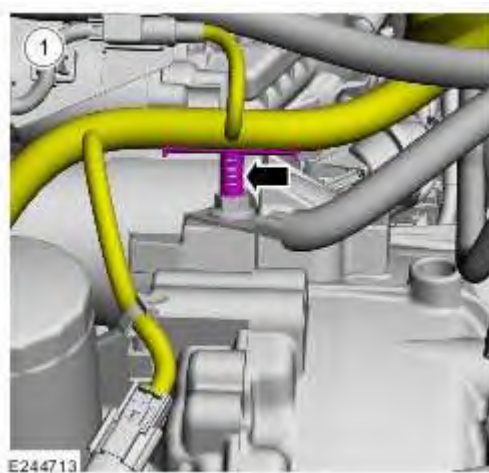

8. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

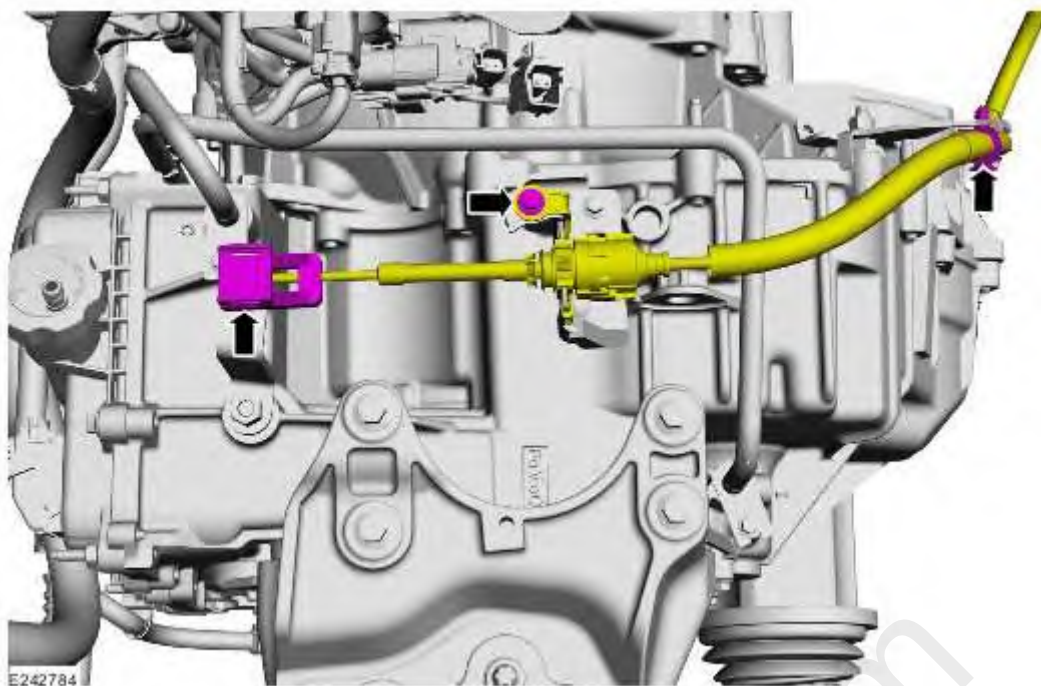


10.

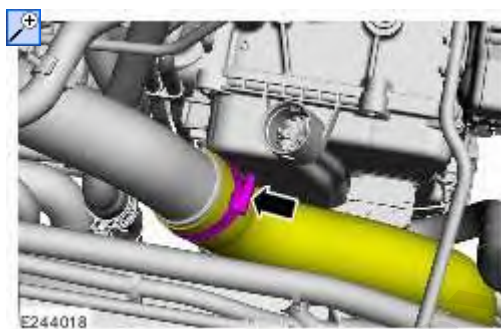


11.



- 1.
2. NOTE: Make sure that no component falls off during removal.

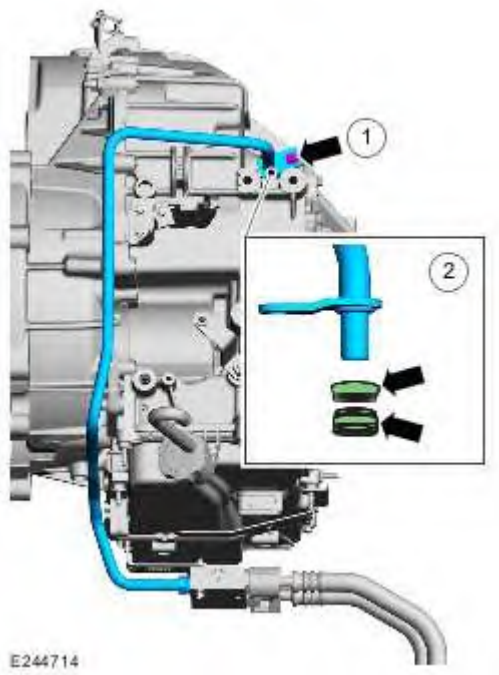



12. Refer to: [Front Bumper Cover](#) (501-19 Bumpers, Removal and Installation).
- 13.

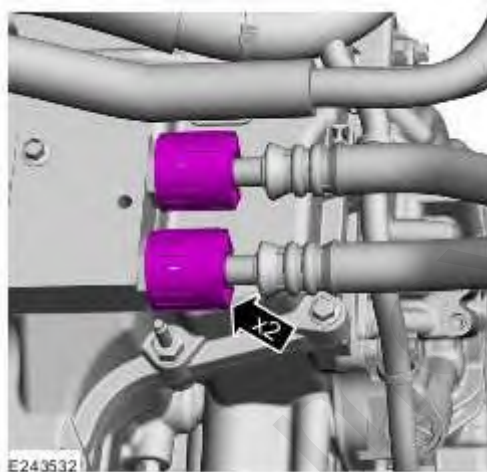


14.
 - 1.
 2. Use *Special Service Tool*: [307-569](#).
 3. **NOTE:** Be prepared to collect escaping fluid.
Remove *Special Service Tool*: [307-569](#).

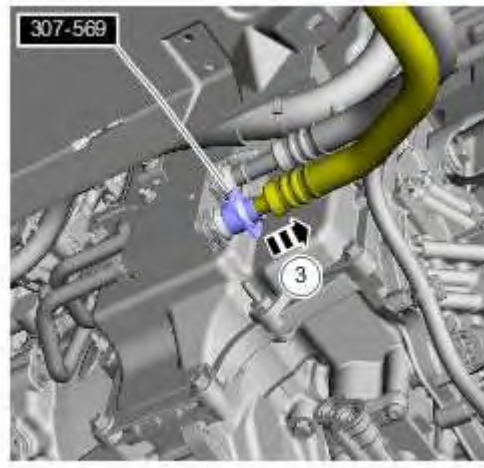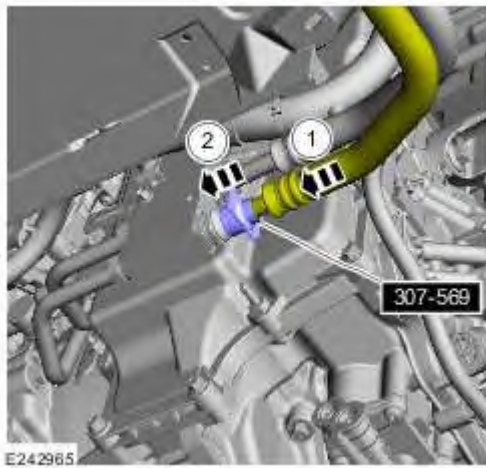


15. 1.
2. Use Special Service Tool: [307-569](#).
3. NOTE: Be prepared to collect escaping fluid.
Remove Special Service Tool: [307-569](#).

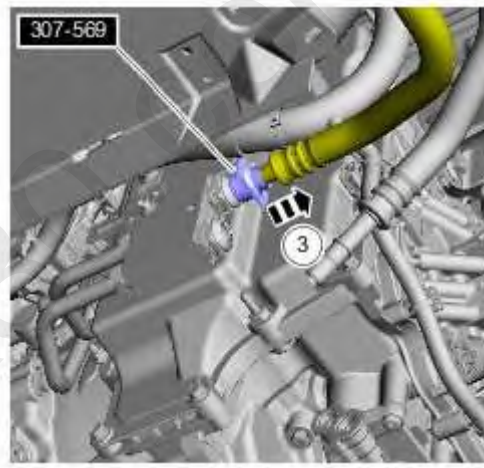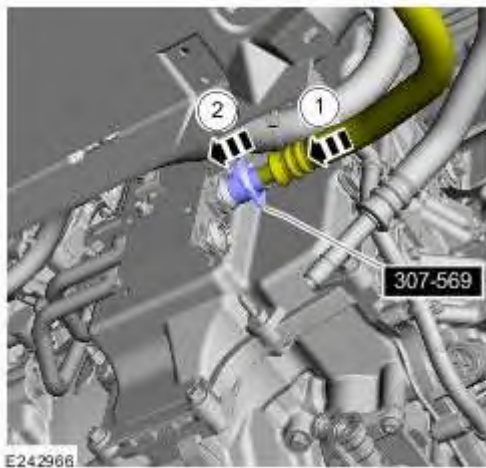


16.

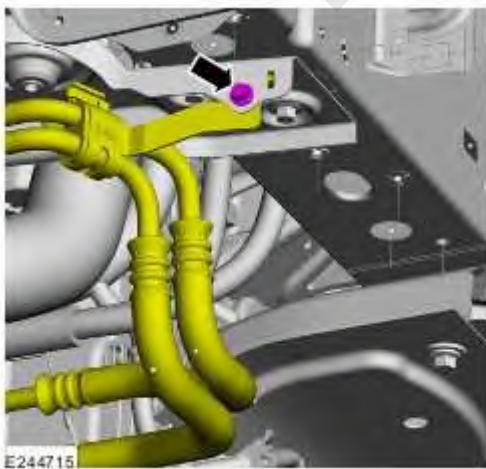

17. 1.
2. NOTE: Make sure that no component falls off during removal.

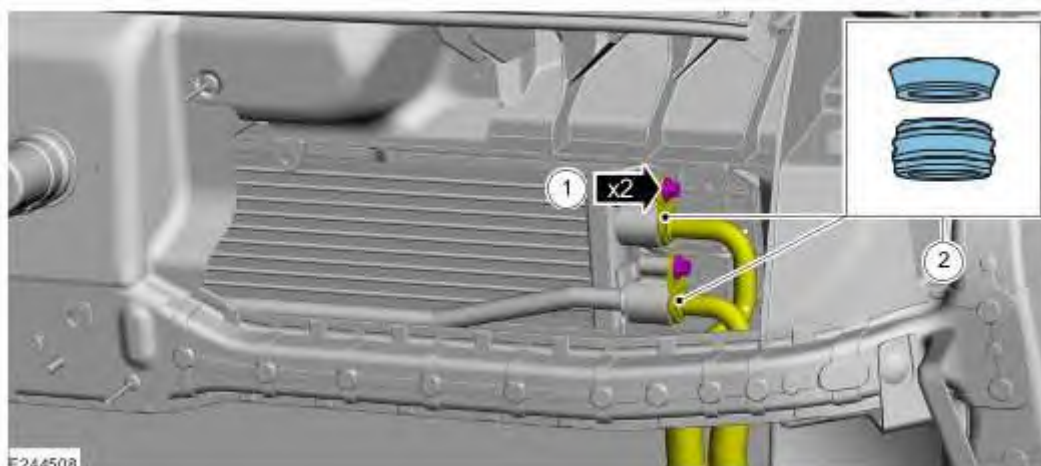


18. NOTE: Make sure that no components catch.

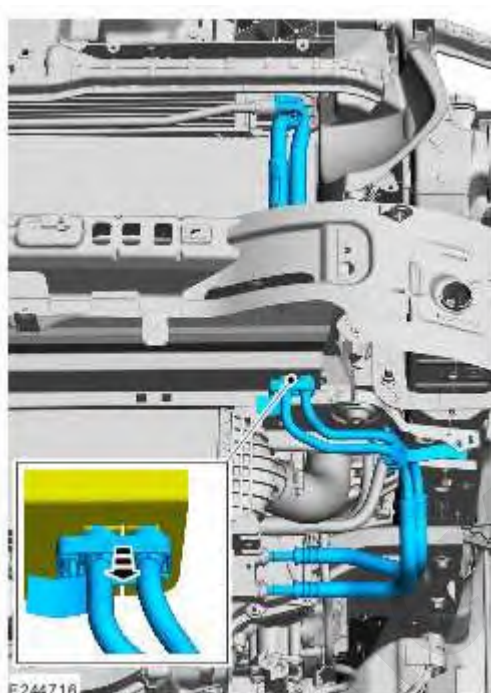

Installation


1. NOTE: Make sure that the components are correctly located.

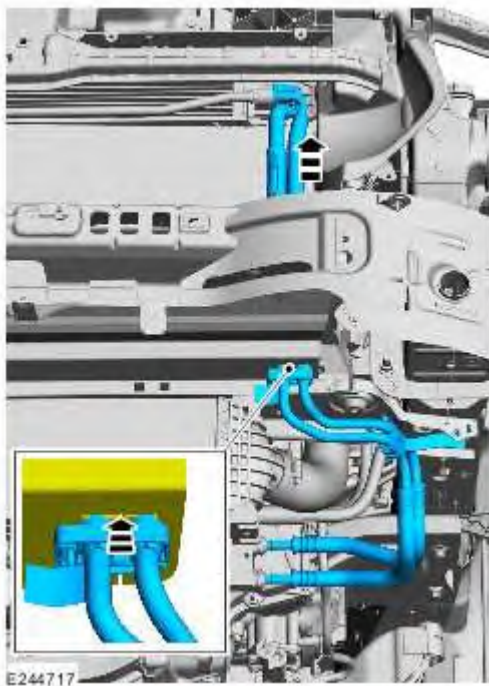


2. 1. **NOTE:** Make sure that the seal is correctly located.
Apply a thin coating.

Refer to: [Specifications](#) (307-01 Automatic Transmission, Specifications).

2. **Torque:** 11 Nm

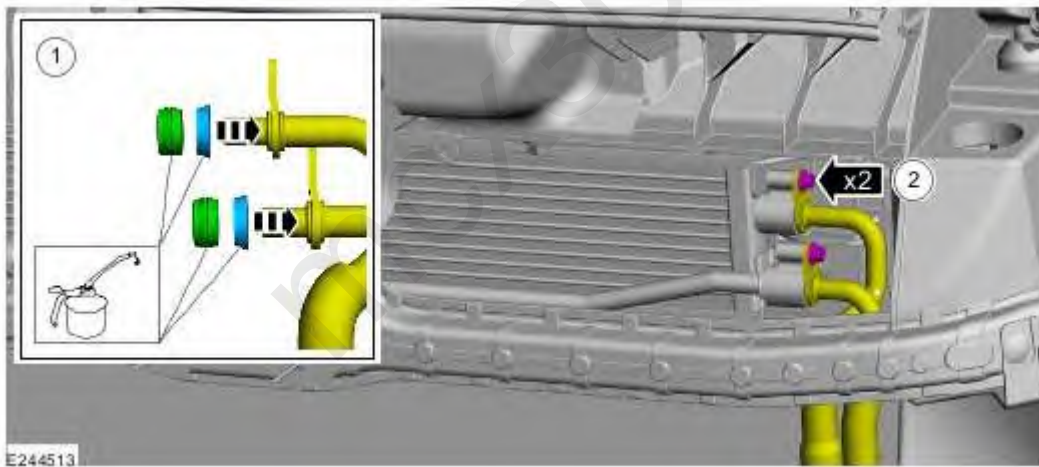


3. **Torque:** 11 Nm

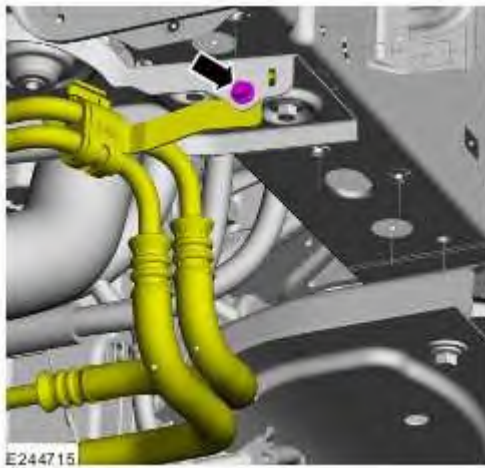


4.
 1. Apply a thin coating.

Refer to: [Specifications](#) (307-01 Automatic Transmission, Specifications).



2. *Torque:* 11 Nm

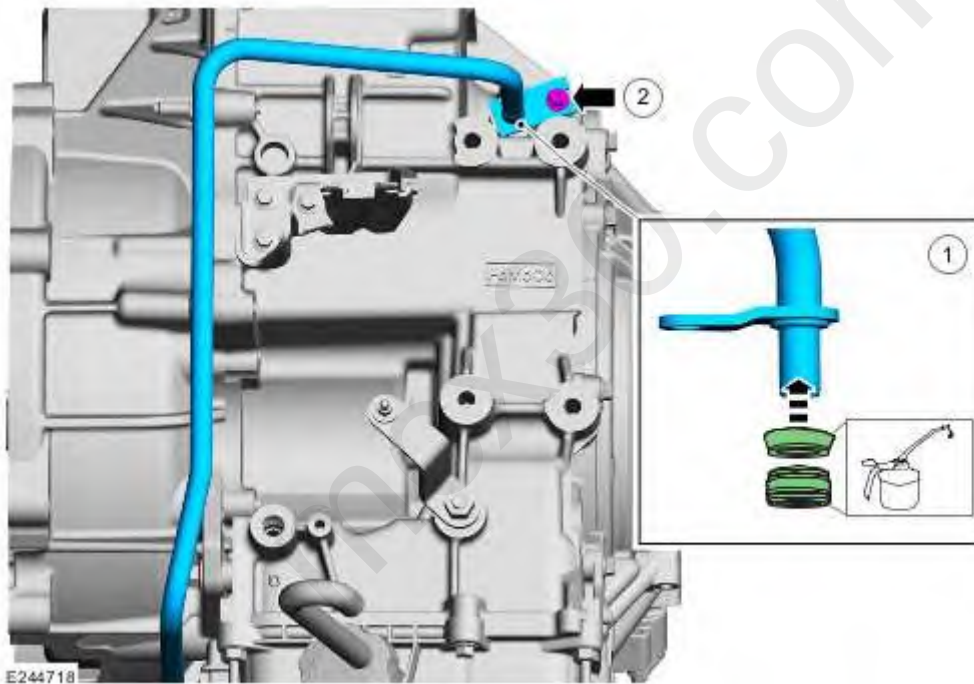


5. *Torque:* 30 Nm

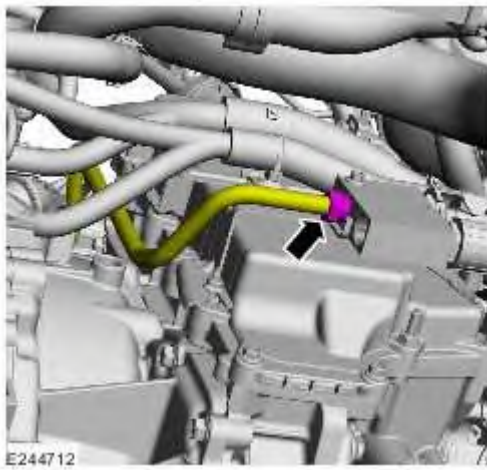


- 6.
1. Torque: 35 Nm

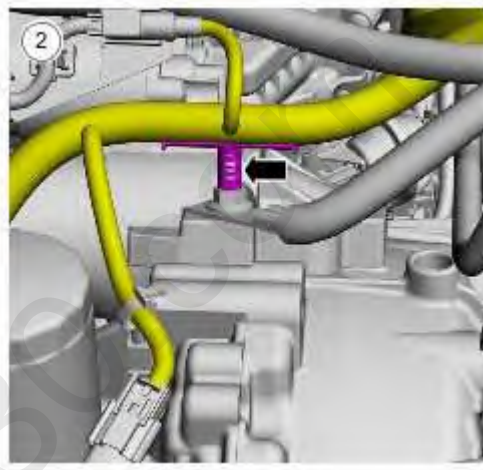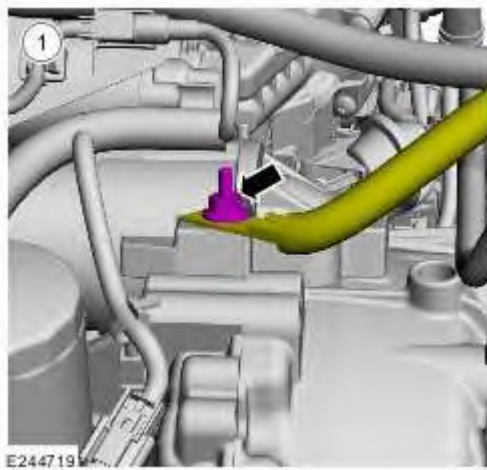


- 7.
1. Apply a thin coating.
Refer to: [Specifications](#) (307-01 Automatic Transmission, Specifications).
 2. Torque: 11 Nm
 3. Torque: 30 Nm

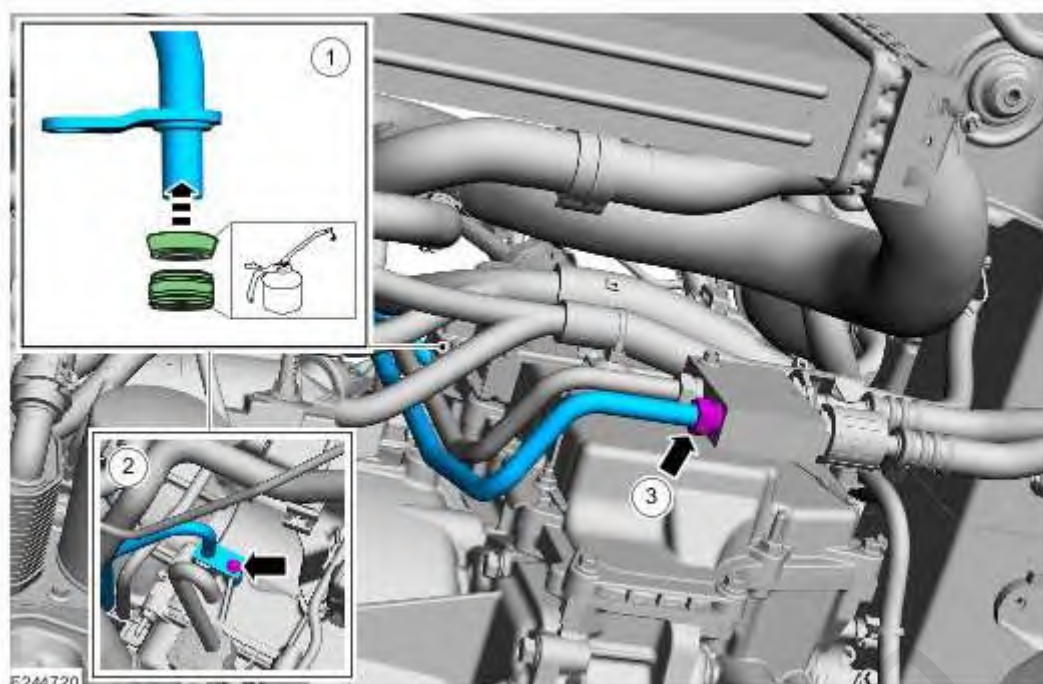


8.

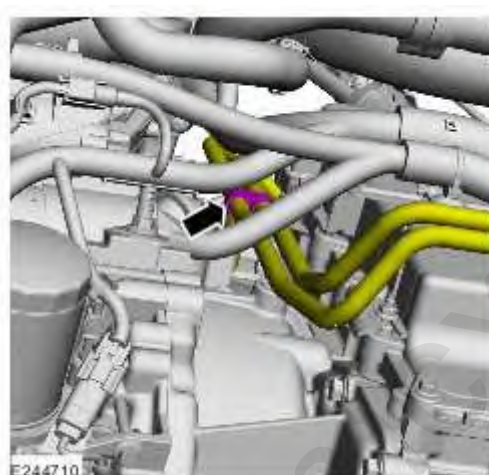

9. NOTE: Make sure that the components are correctly installed.

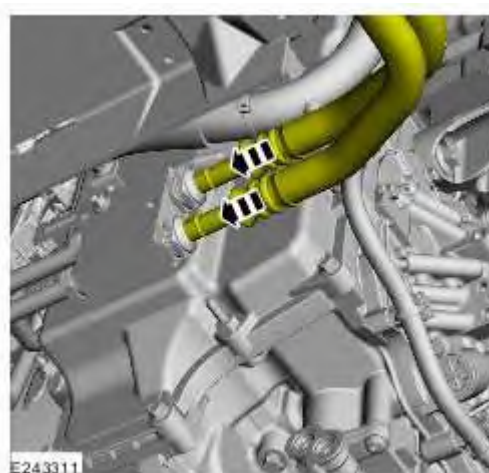


10.

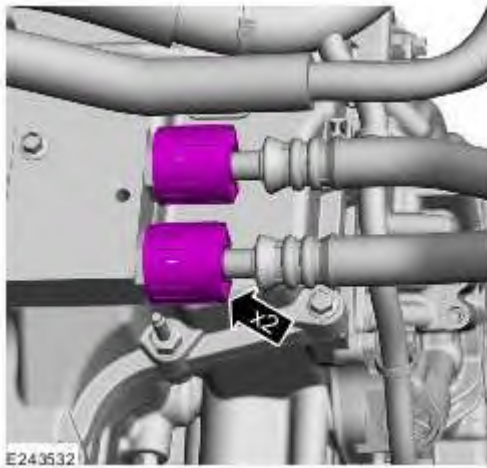


11. Refer to: [Front Bumper Cover](#) (501-19 Bumpers, Removal and Installation).

12. *Torque:* 8 Nm

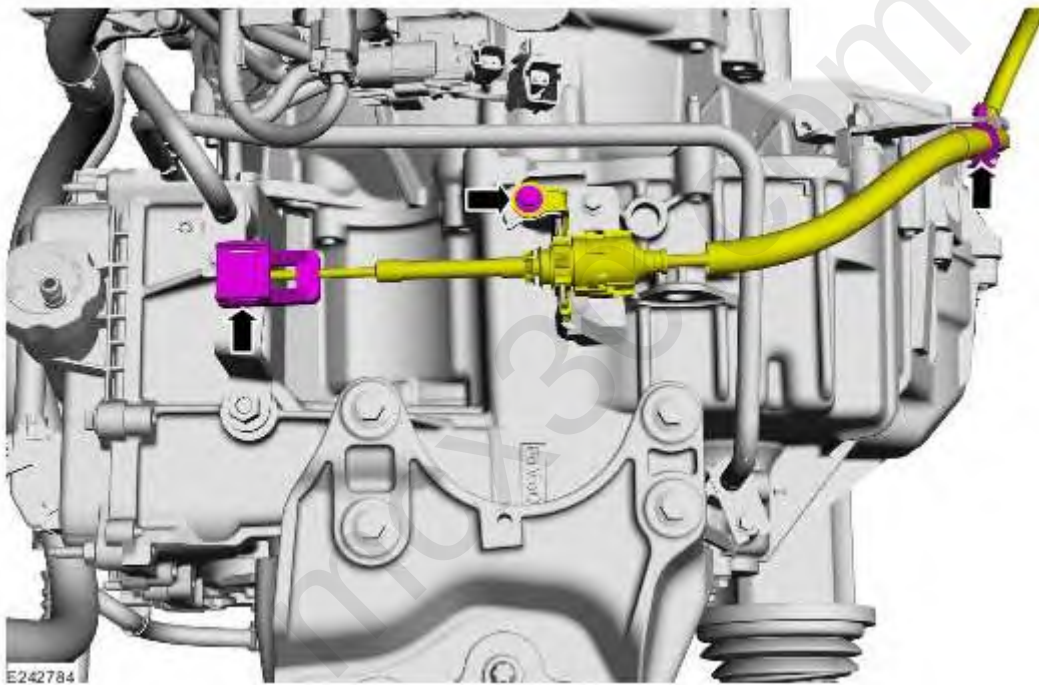

13.

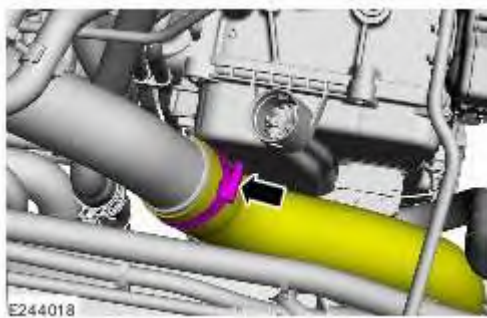

14. Refer to: [Transmission Fluid Level Check](#) (307-01 Automatic Transmission, General Procedures).