

## Description and Operation

### Overview

The transmission selector lever linkage consists of:

- a selector lever cable that connects the transmission manual control lever to the selector lever assembly.
- a brake shift interlock actuator that is integral to the selector lever assembly.

The selector lever assembly:

- locks the transmission selector lever in the **P (Park)** position when the ignition switch is in the LOCK position.
- requires the transmission selector lever to be in the **P** position to turn the ignition switch to the LOCK position.

mcx30.com