



General Procedures

Adjustment

1.

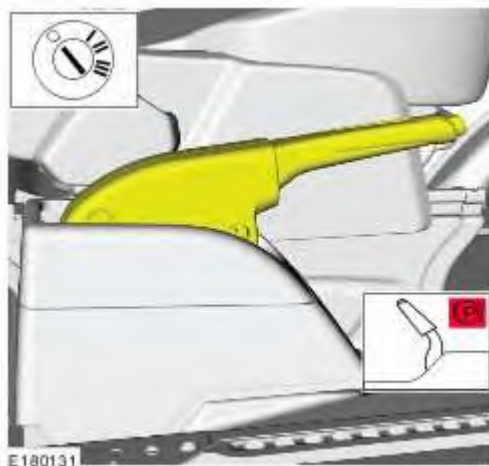


2. NOTE: Make sure that the ignition key is in the ON position.

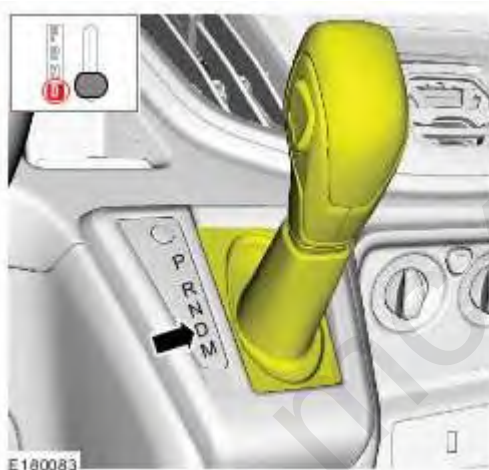


3.




4.

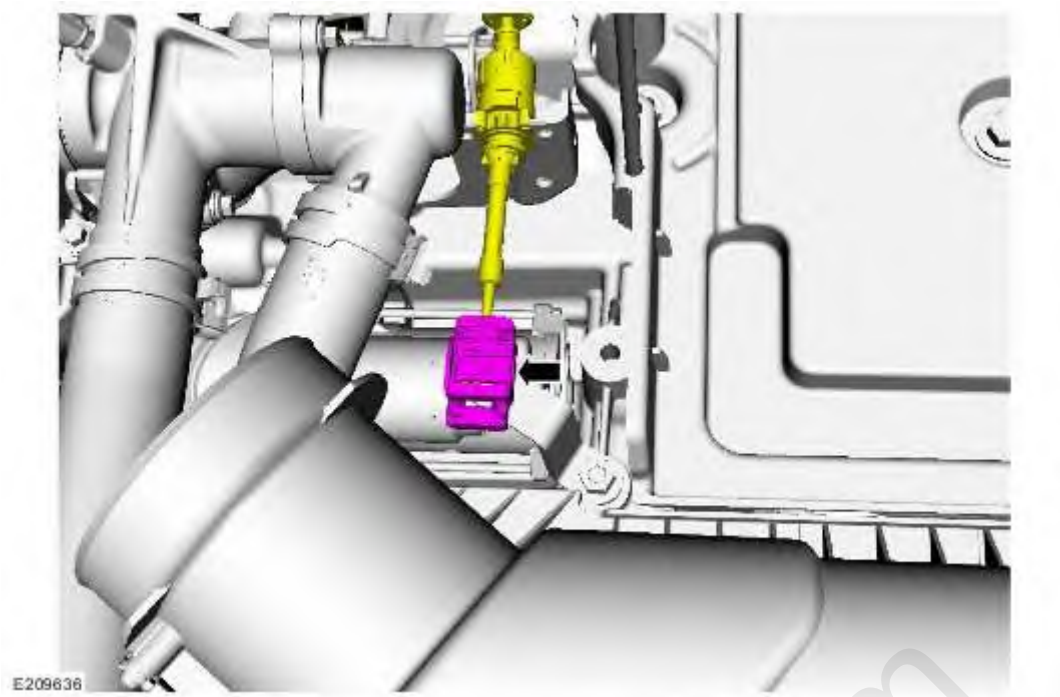


5.

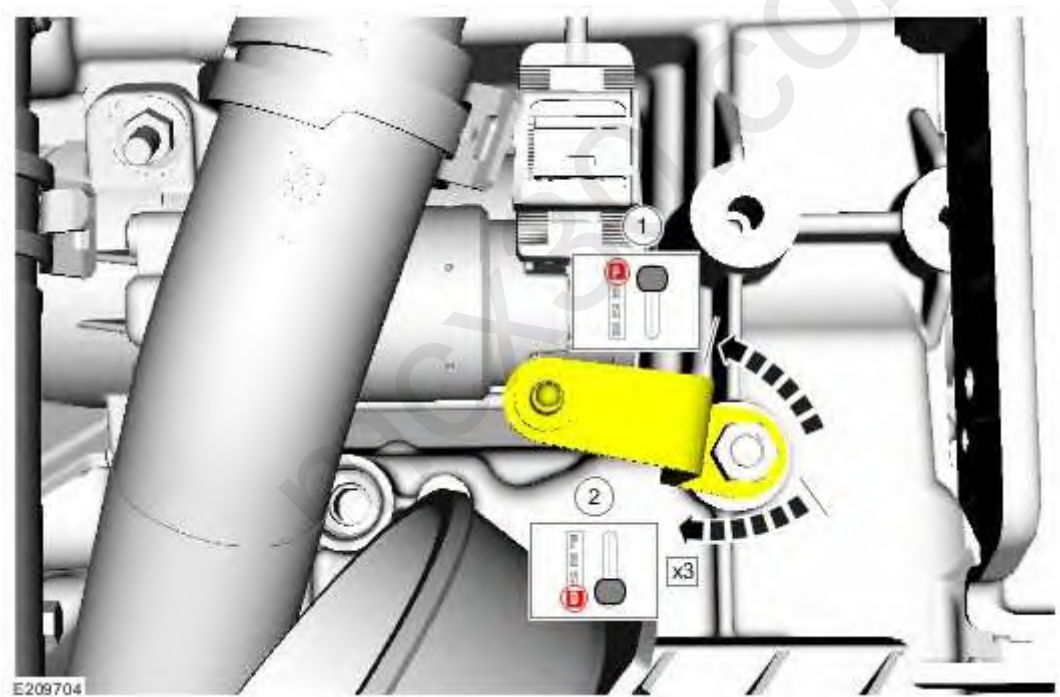


6.

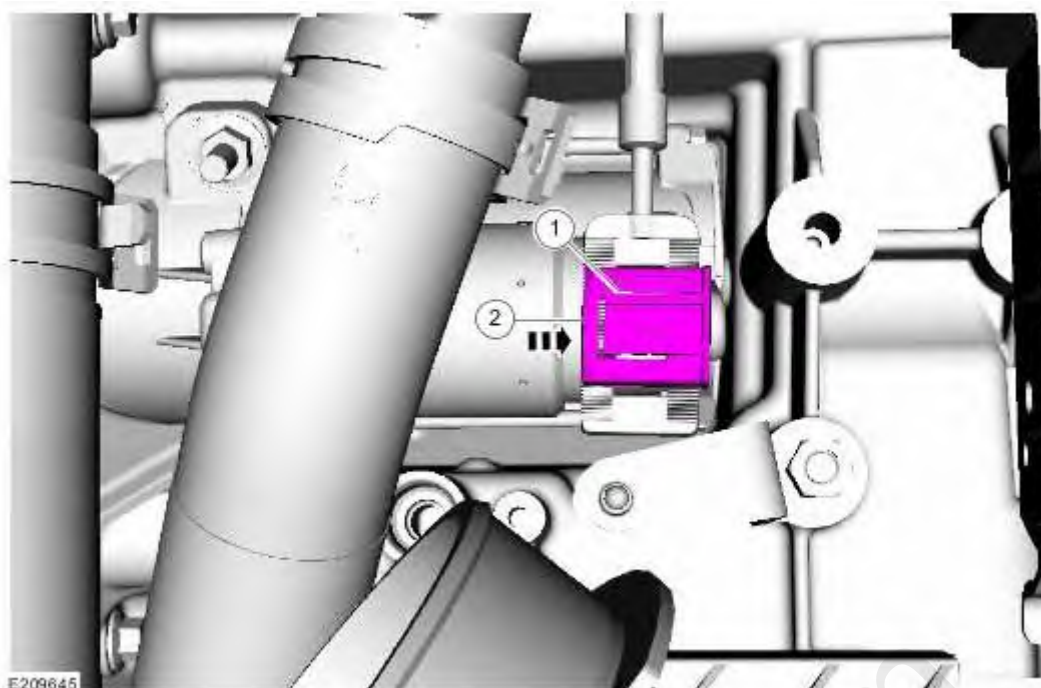

7.

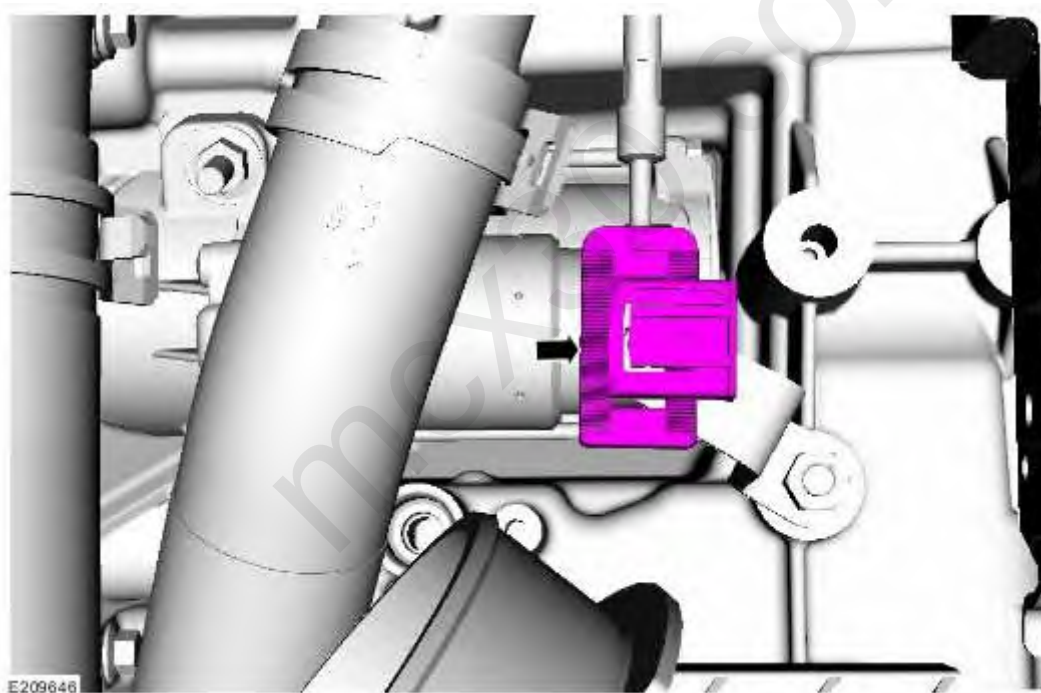

8.

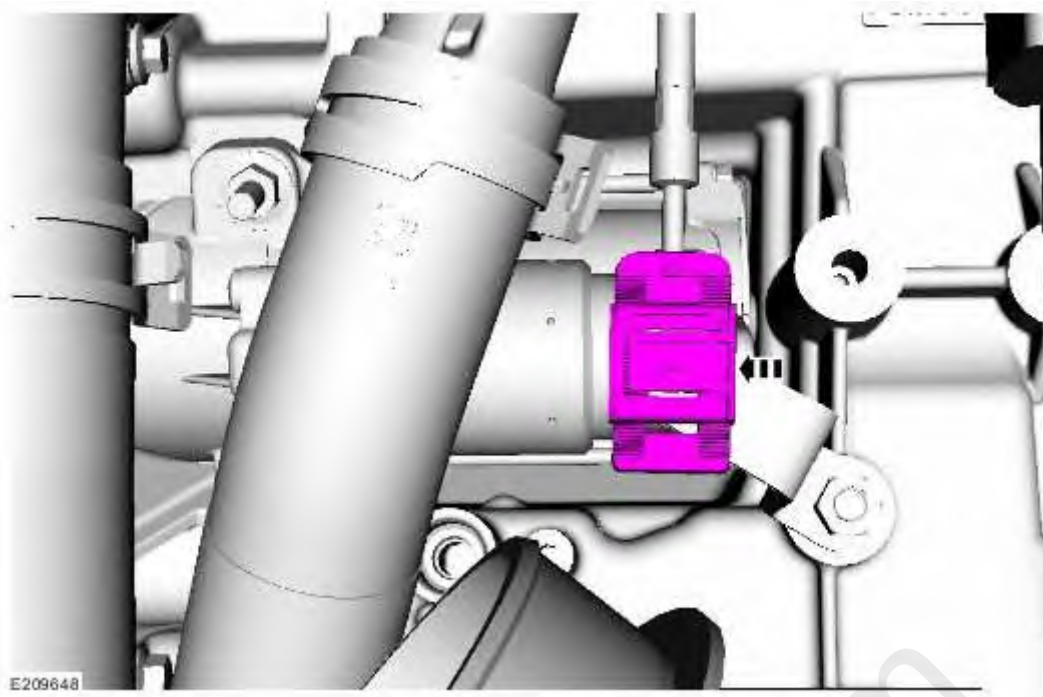

9. Verify the engine starts only in park (P) and neutral (N) and the reverse lamps illuminate only in reverse (R).