


Removal and Installation

Removal

1.

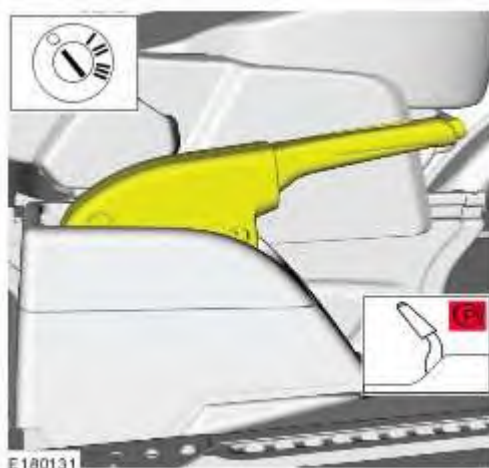


2. NOTE: Make sure that the ignition key is in the ON position.




3.




4.

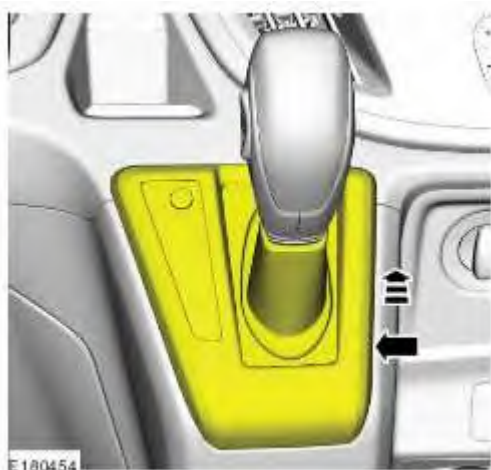

5.

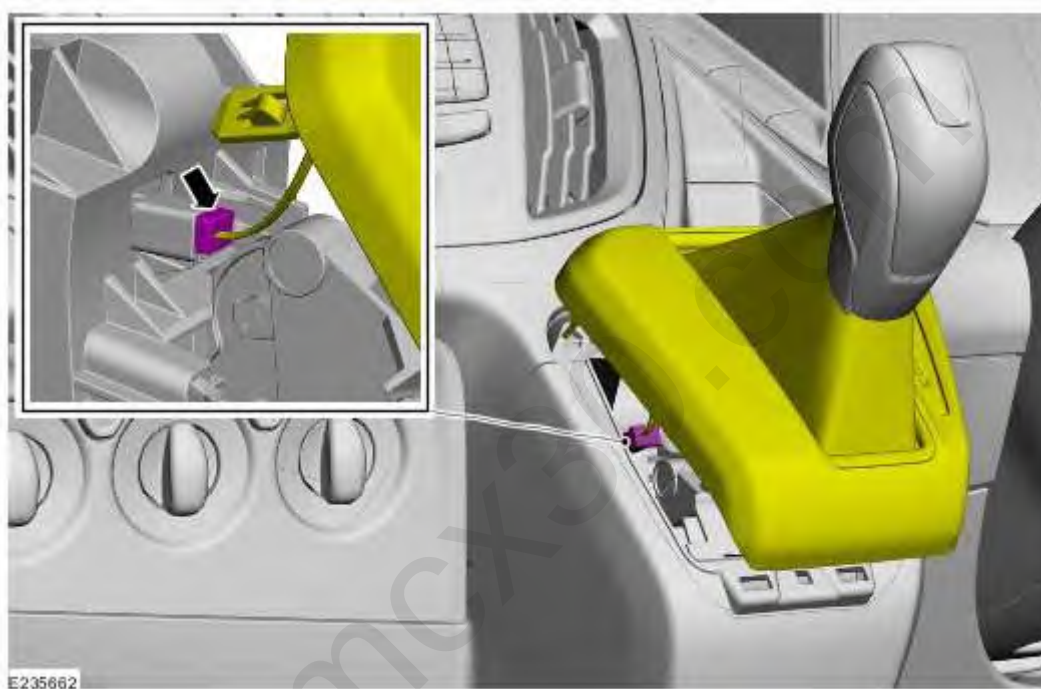

6.

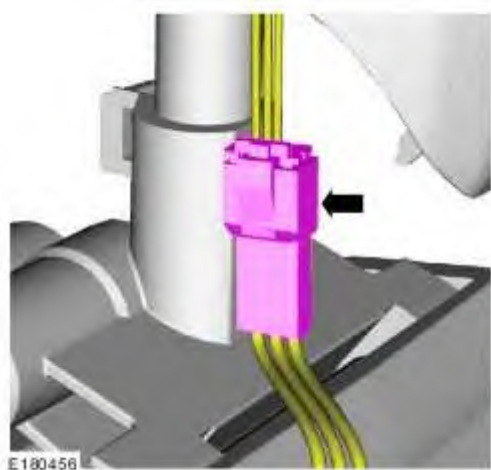

7.



8.



9.



Installation

1. To install, reverse the removal procedure.