


Removal and Installation

Removal

1.

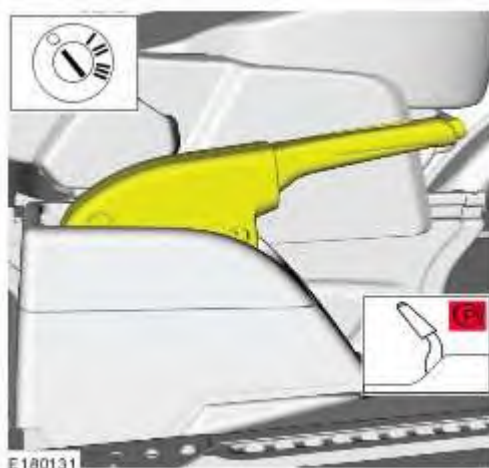


2. NOTE: Make sure that the ignition key is in the ON position.




3.




4.

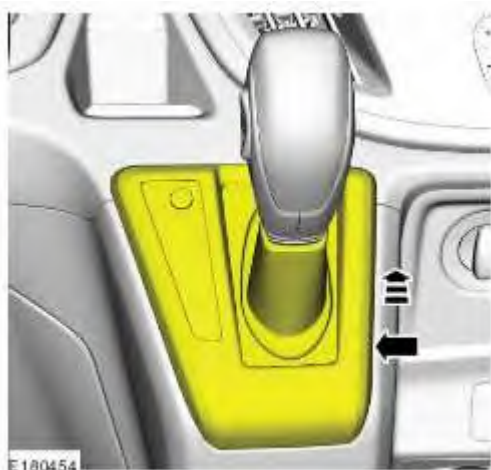

5.

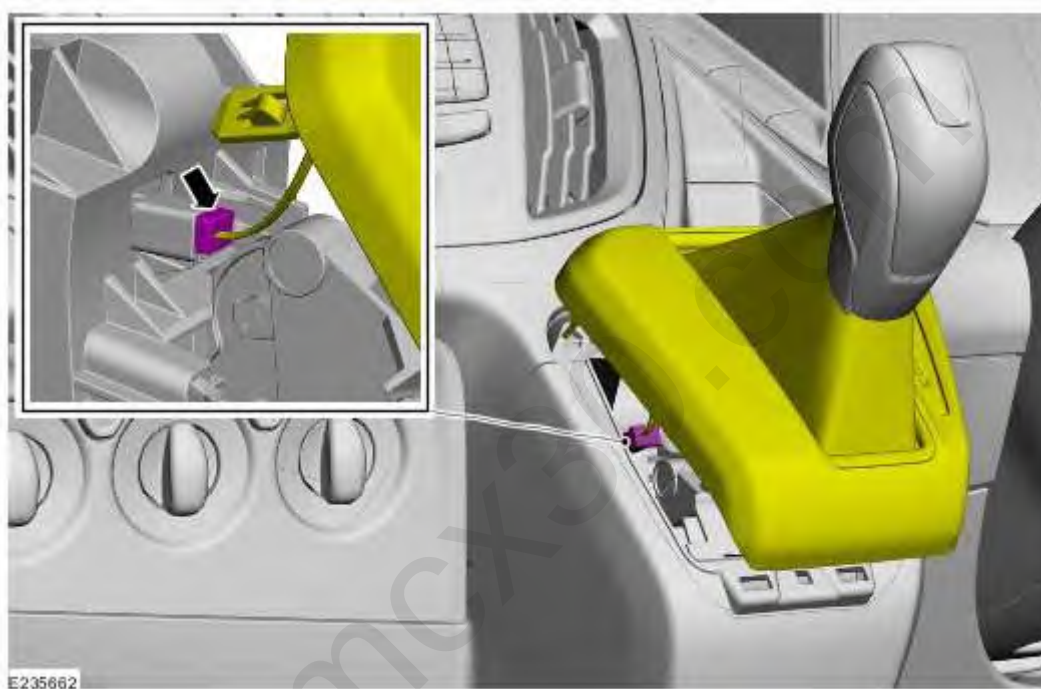

6.

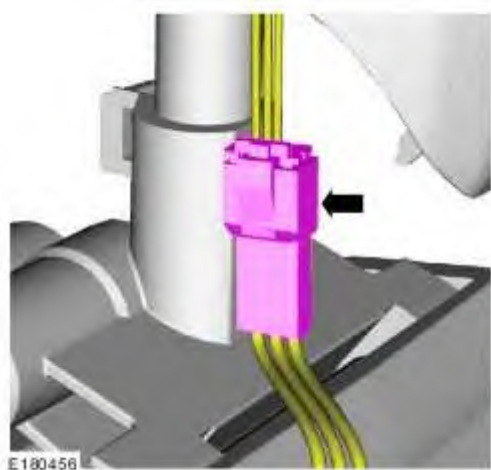

7.



E180457

8.



E153187

9.



E161741

Installation

1. To install, reverse the removal procedure.