


Removal and Installation

Removal


NOTE: Removal steps in this procedure may contain installation details.

All vehicles


1.

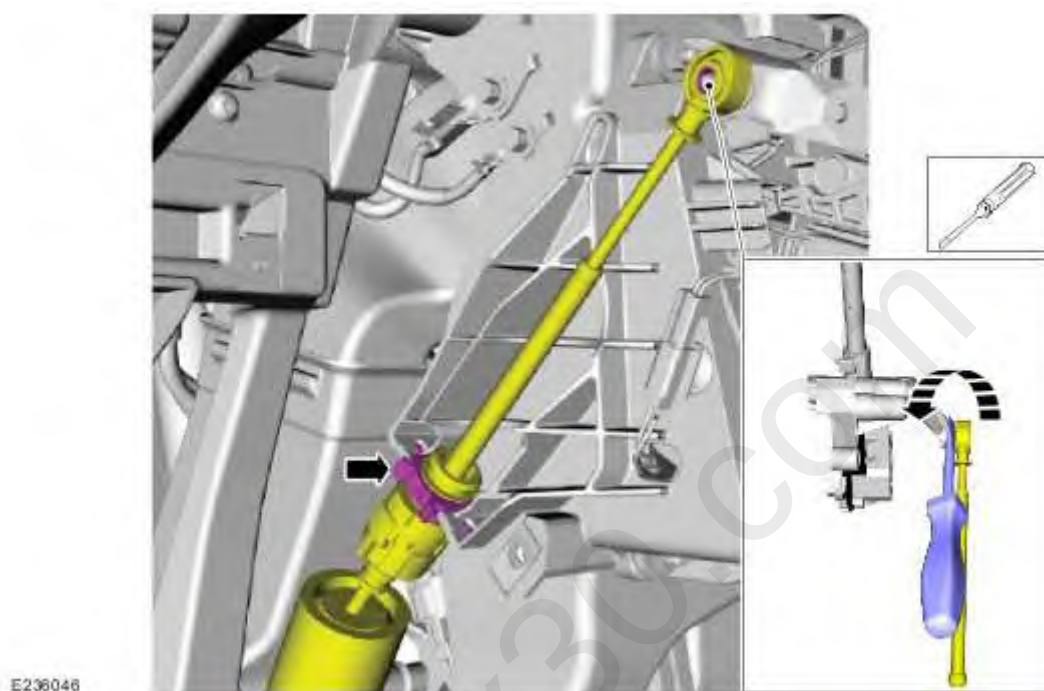

2.

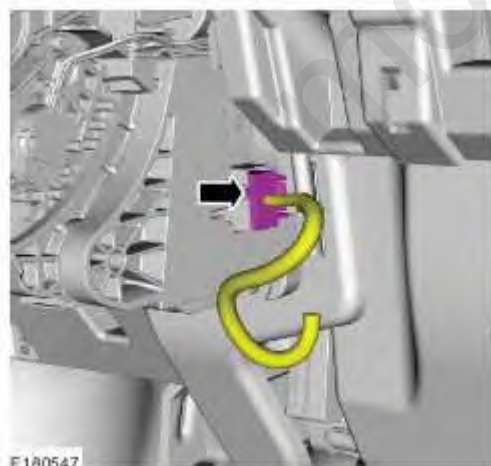

3. Torque: 9 Nm

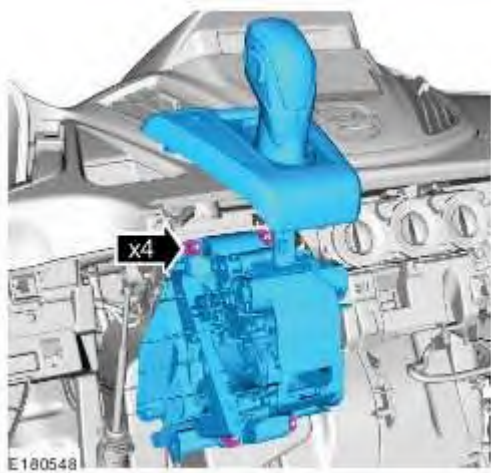

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** This step is only necessary when installing a new component.

Refer to: [Selector Lever Cable Adjustment](#) (307-05 Automatic Transmission External Controls, General Procedures).