


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. Torque:
 - 1: 48 Nm

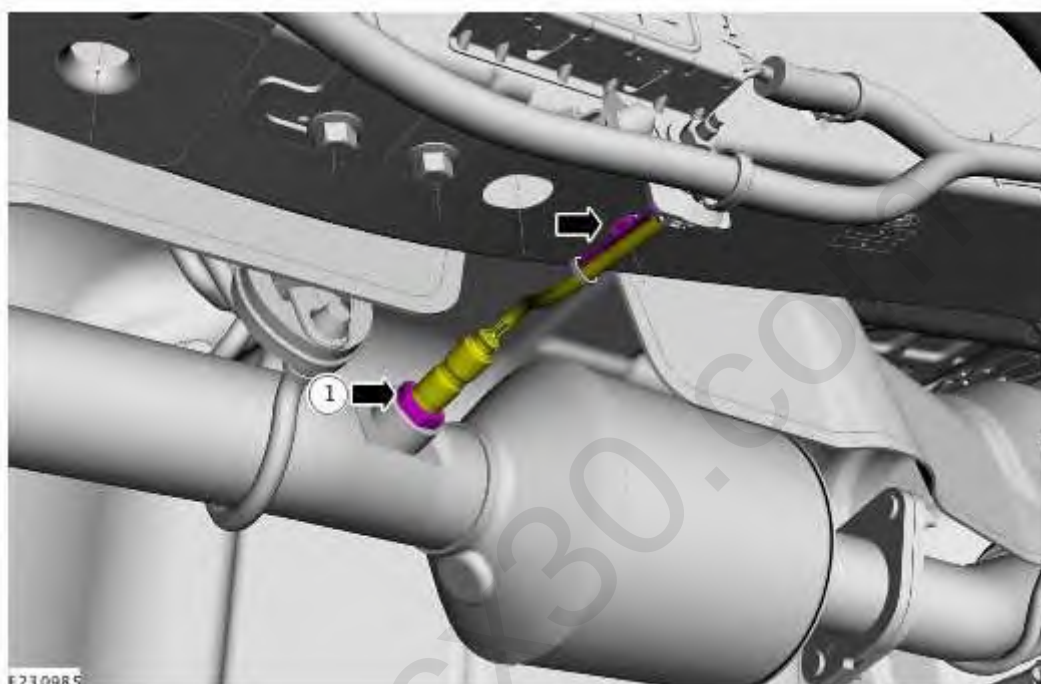

3. Torque:
 - 1: 48 Nm
 - 2: 48 Nm

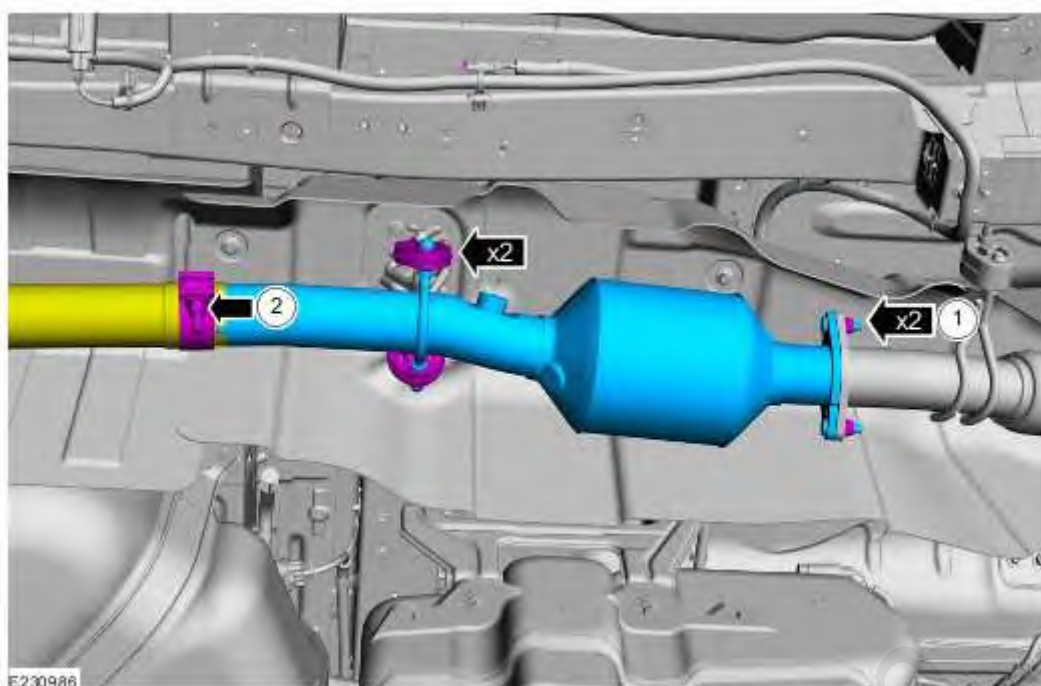

Installation

1. To install, reverse the removal procedure.