

General Procedures

General Equipment

Fuel Drain Tank
Fuel Tank Draining Equipment
Hose Clamp(s)
Transmission Jack

Draining




NOTICE: If the fuel tank has been filled with the wrong type of fuel, the engine must not be started before the fuel system is cleaned.


NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Diesel Fuel System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
3. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
4. **NOTE:** Be prepared to collect escaping fluids.


Use the General Equipment: [Hose Clamp\(s\)](#)

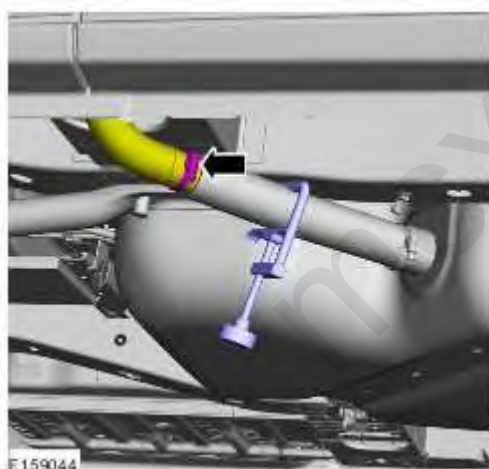

5. *Use the General Equipment:* [Transmission Jack](#)
Torque: 35 Nm

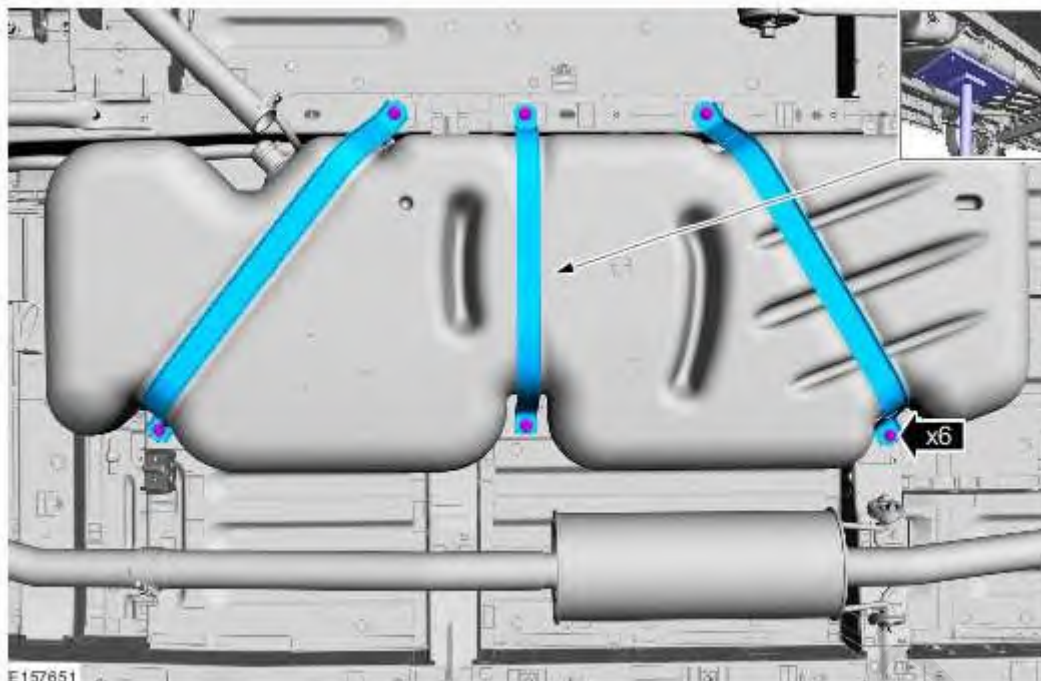

6. Use the General Equipment: [Transmission Jack](#)

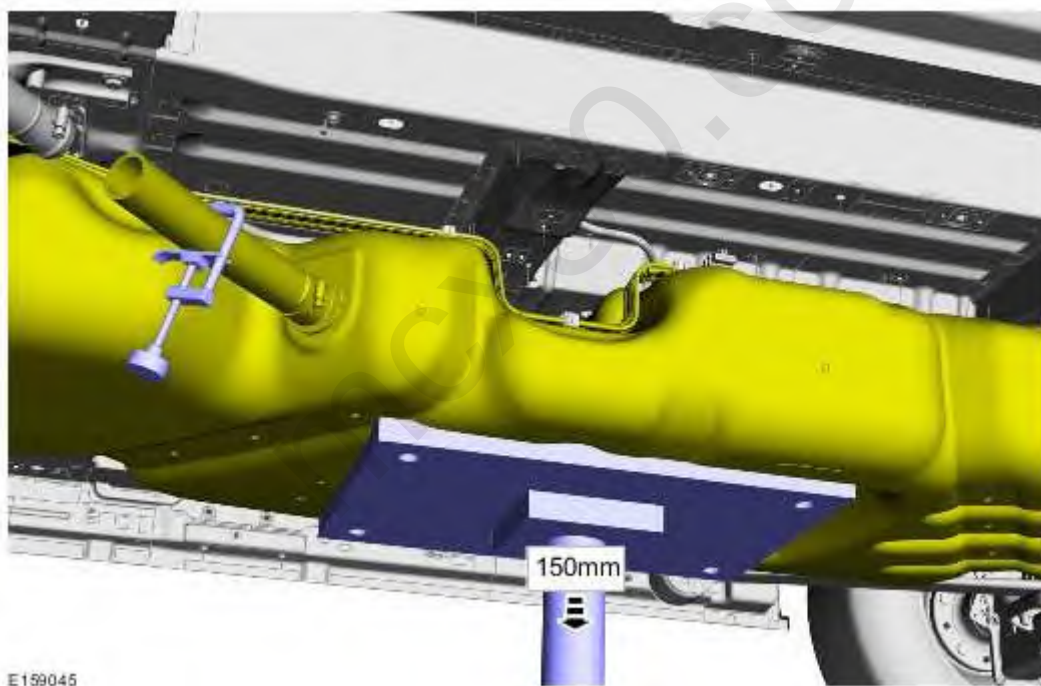

7. **NOTE:** Be prepared to collect escaping fluids.

Make sure, that the fuel filler pipe is above the fuel level.

Use the General Equipments: [Fuel Tank Draining Equipment](#), [Fuel Drain Tank](#)

