


Removal and Installation

Removal




NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Diesel Fuel System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
3. NOTE: Be prepared to collect escaping fluid.
NOTE: Use suitable paper to absorb any escaping fluid.

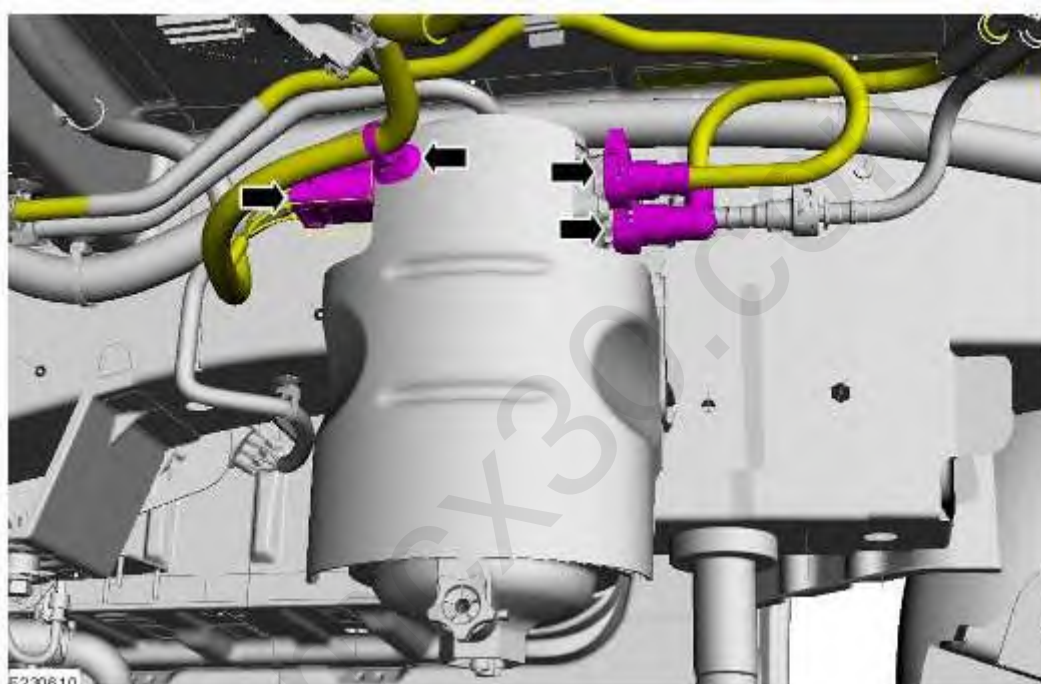

4. Torque: 15 Nm

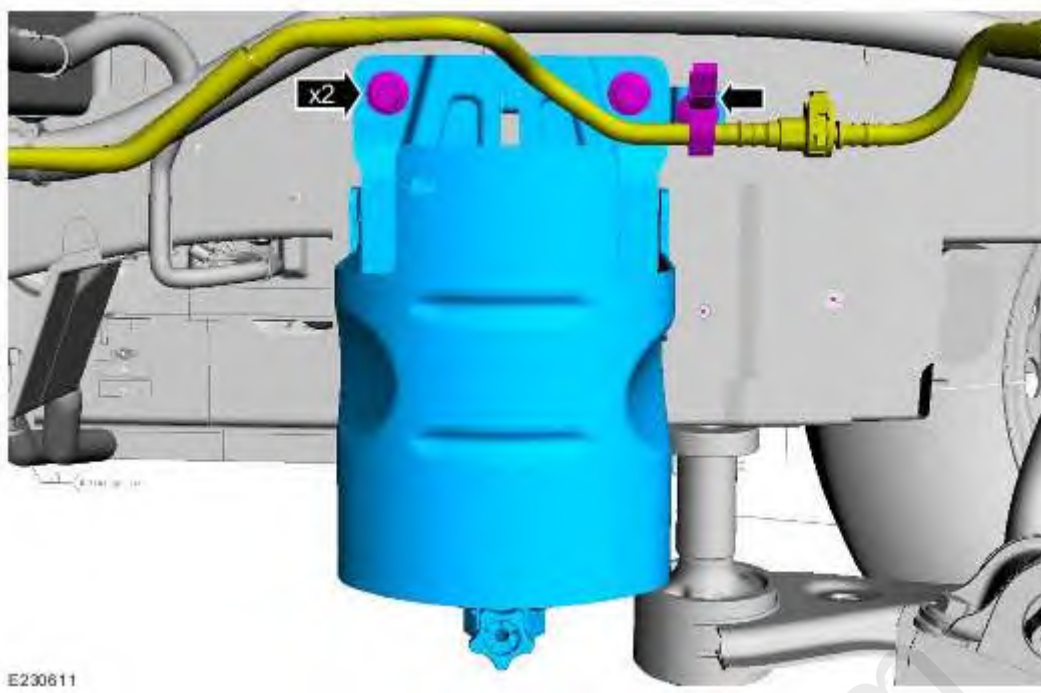

Installation

1. To install, reverse the removal procedure.
2. Refer to: [Fuel System Bleeding](#) (310-00A Fuel System - General Information, General Procedures).