

Removal and Installation

General Equipment


Fluid Container

Removal




NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Diesel Fuel System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
3. NOTE: Be prepared to collect escaping fluid.
NOTE: Use suitable paper to absorb any escaping fluid.

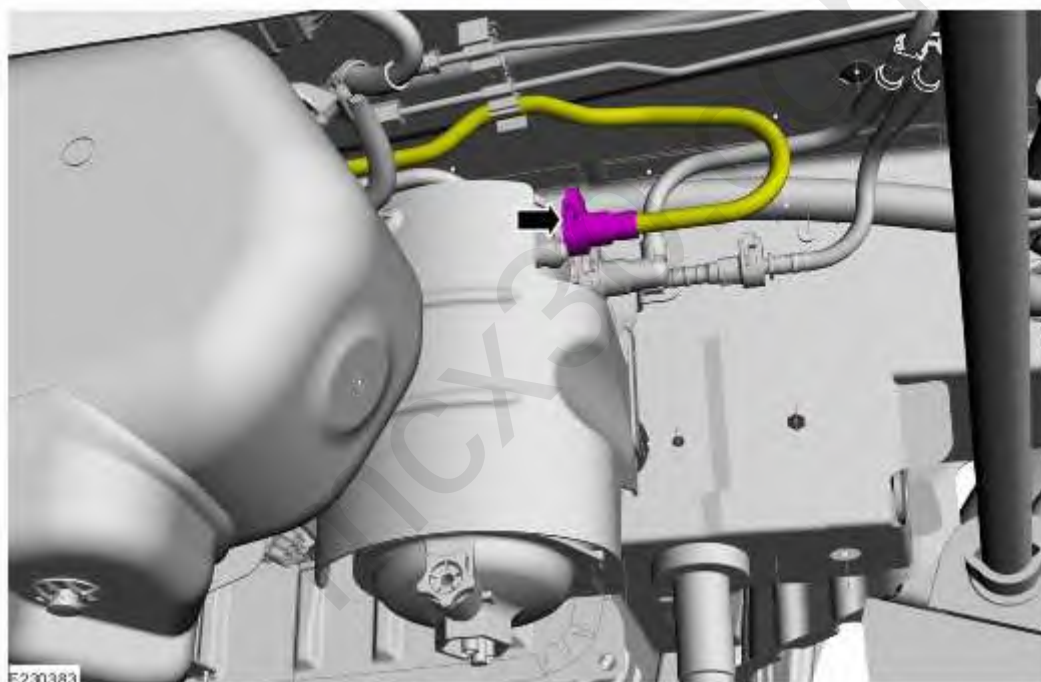

4. NOTE: Be prepared to collect escaping fluid.
Please tighten/untighten the drain valve just by hand. Do not use any tool


Use the General Equipment: [Fluid Container](#)

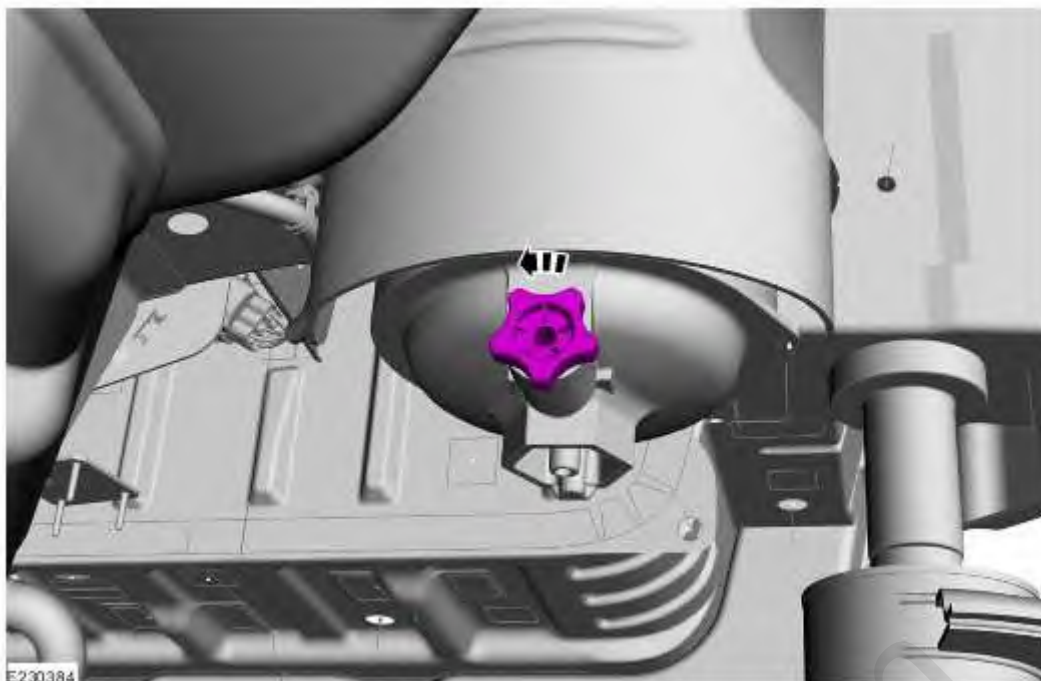


5. **NOTE:** Be prepared to collect escaping fluid.

Use the General Equipment: **Fluid Container**

Loosen: 2 turn(s)

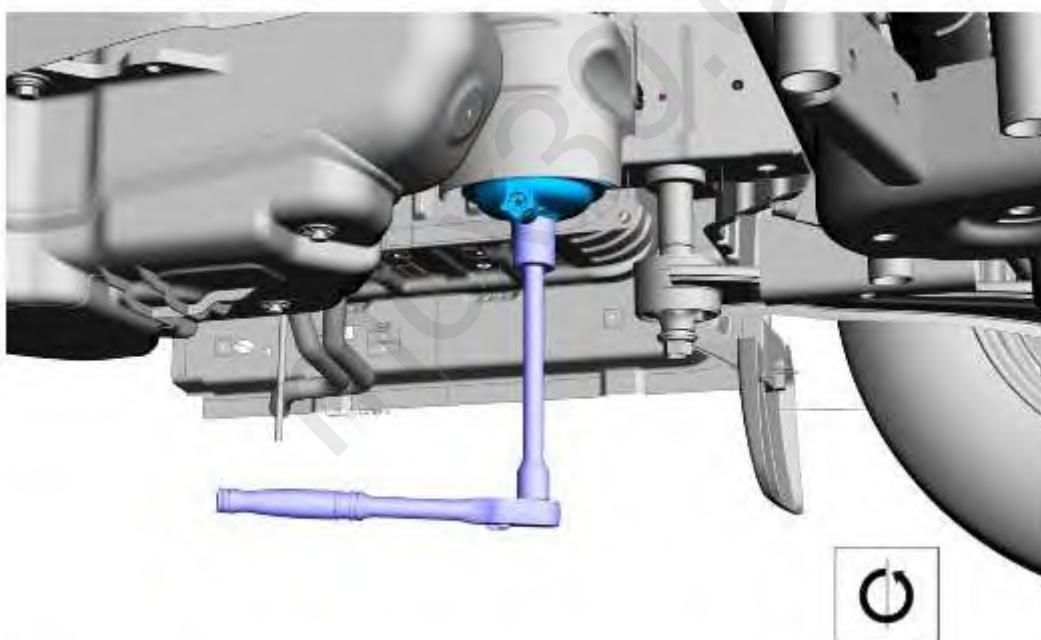


6.

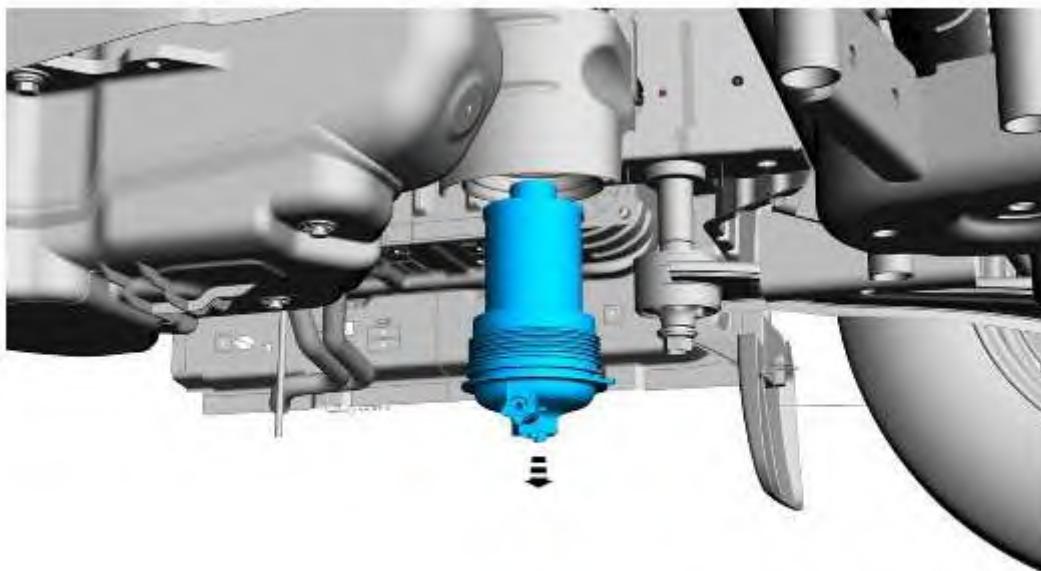

E230386

Installation

1. To install, reverse the removal procedure.
- 2.

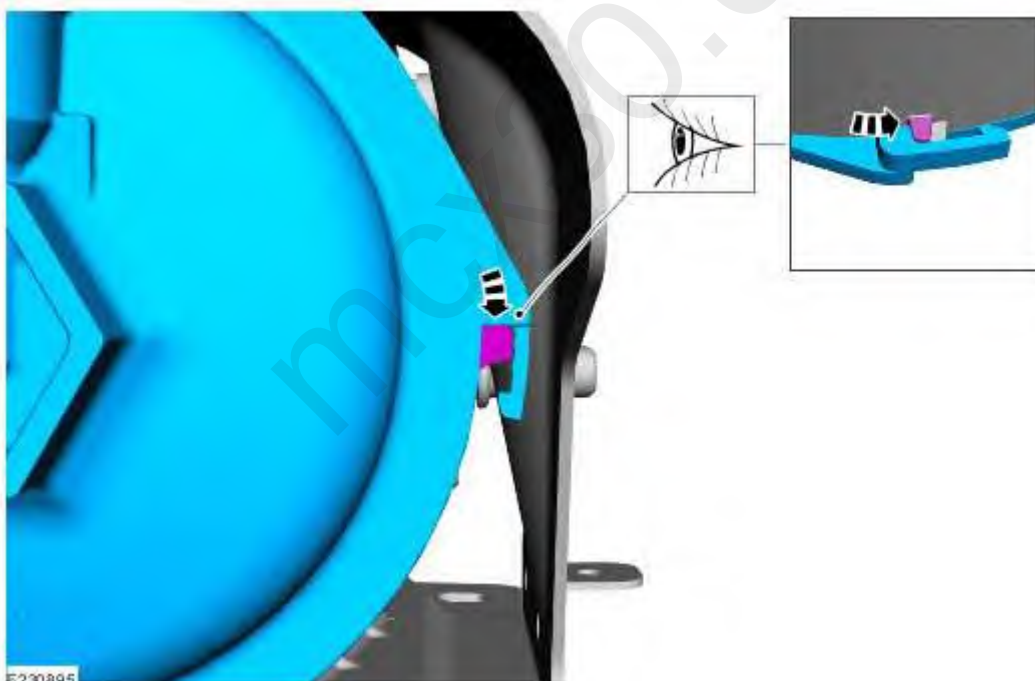

E230895

3. Refer to: [Fuel System Bleeding](#) (310-00A Fuel System - General Information, General Procedures).