

Removal and Installation


Removal




NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Diesel Fuel System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
3. NOTE: Be prepared to collect escaping fluid.

Torque: 6 Nm

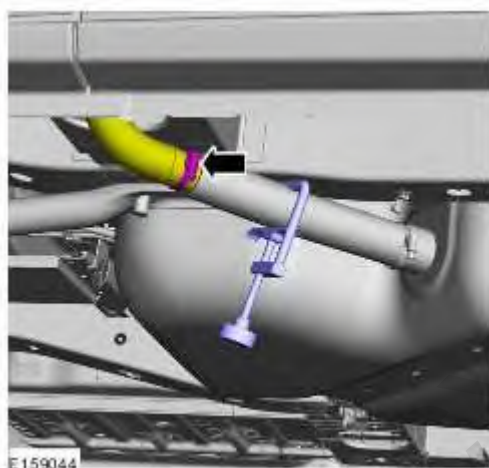

4. *Torque: 20 Nm*

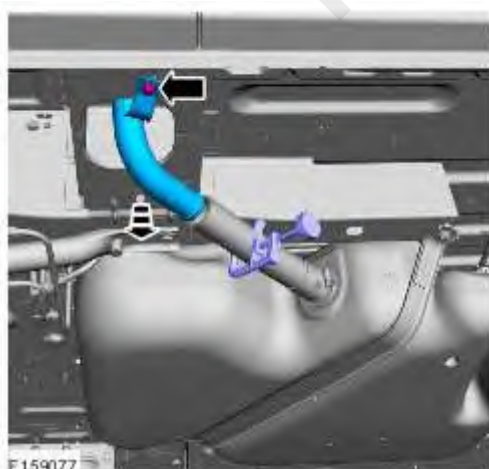

Installation

1. To install, reverse the removal procedure.

