

General Procedures

General Equipment

UV Leak Detector

Activation

1. Refer to: [Climate Control System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. **NOTE:** Make sure that protective caps and test equipment adaptors are disassembled during the detection.

Locate the leaks. Check all components, fittings and lines of the A/C system for leaks.

Use the General Equipment: [UV Leak Detector](#)

3. 3. After the leak is found and rectified, remove any traces of dye with a general purpose solvent.
4. 4. Check the repair by operating the system for some minutes and inspecting with the UV lamp again.