


Removal and Installation

Removal

1. Refer to: [Blower Motor Resistor](#) (412-01 Climate Control, Removal and Installation).
- 2.

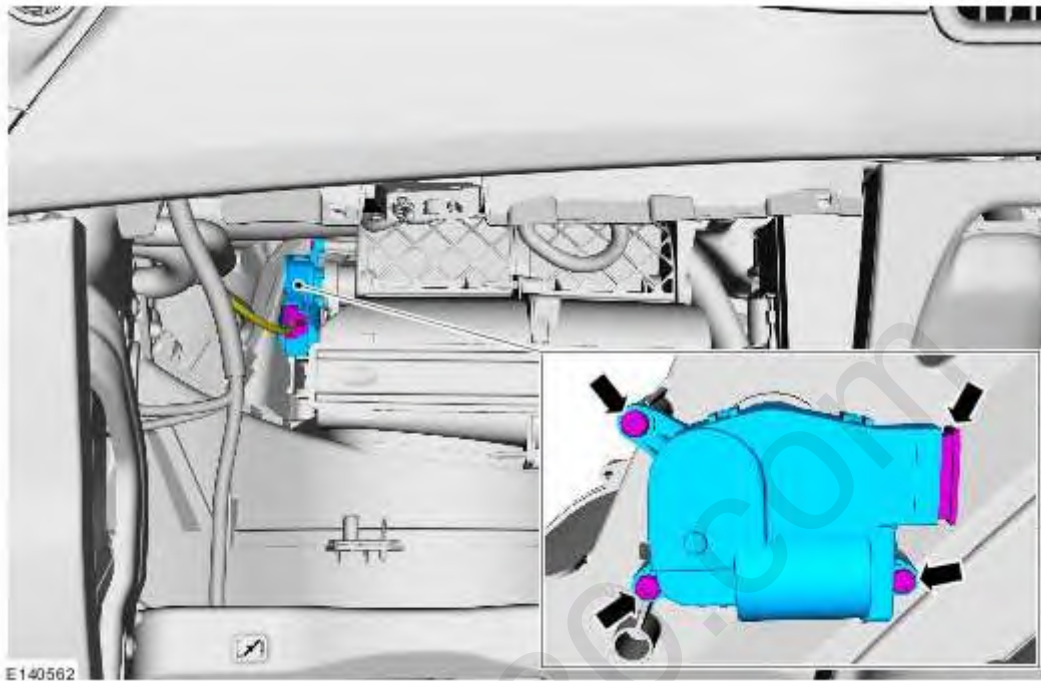

Installation

1. To install, reverse the removal procedure.