

Removal and Installation


Materials

Name	Specification
Refrigerant Oil	WSH-M1C231-B


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Air Conditioning \(A/C\) System Recovery, Evacuation and Charging](#) (412-00 Climate Control System - General Information, General Procedures).
2. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
- 3.

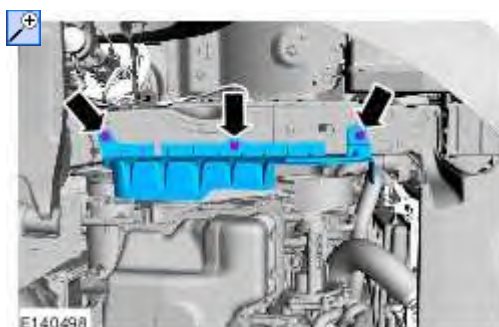


4.

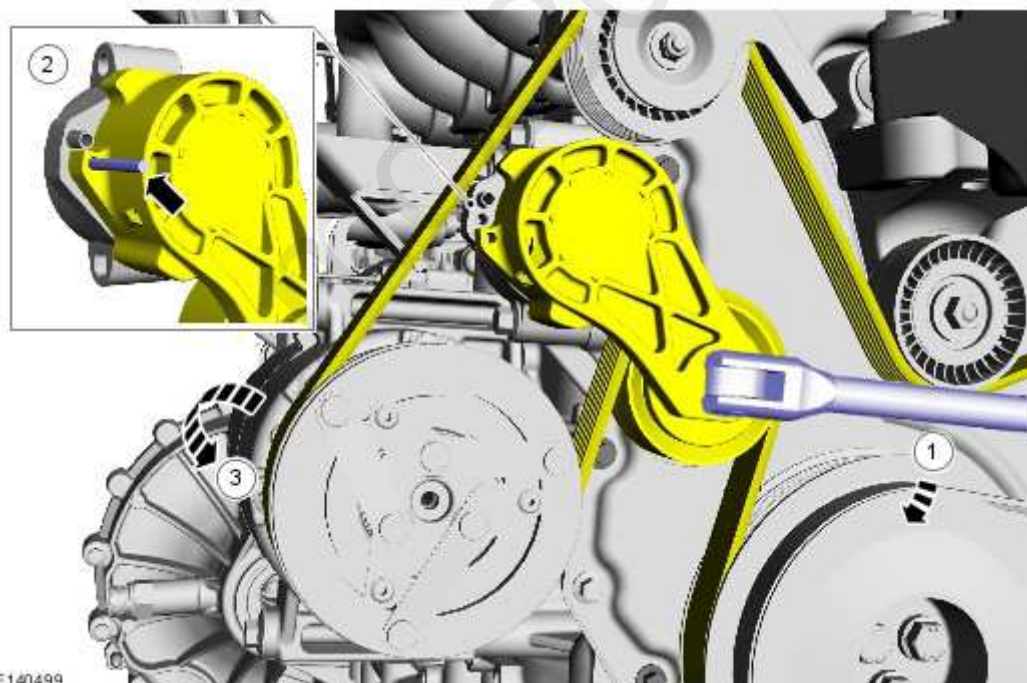

5.

1. Torque: 15 Nm
2. Torque: 25 Nm

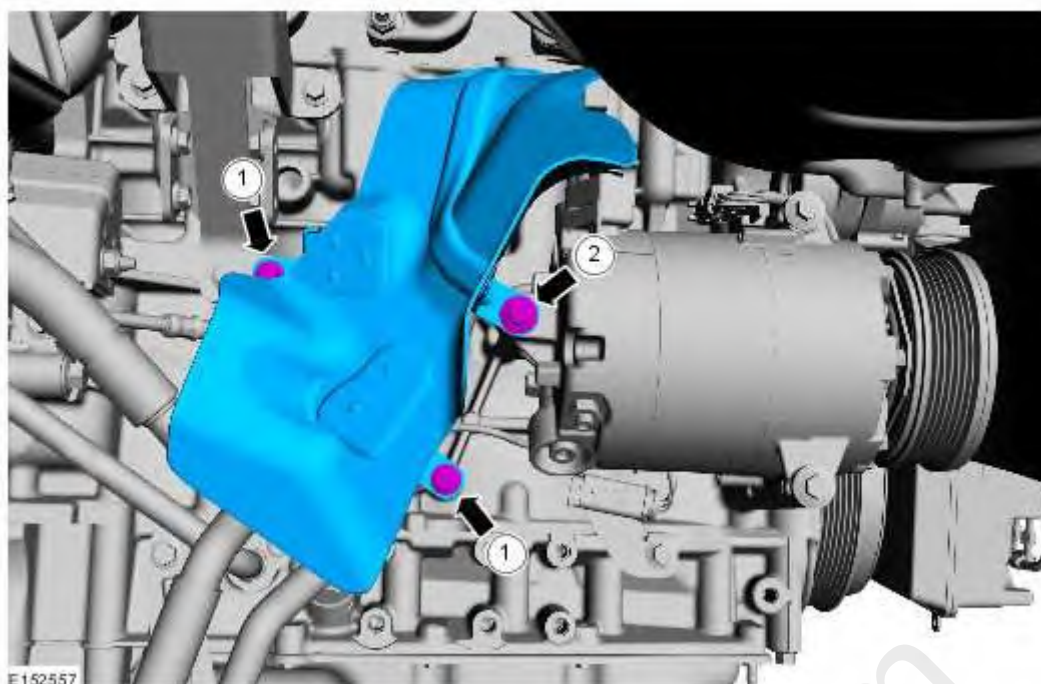


6.  **NOTICE:** Make sure that all openings are sealed.

1. Torque: 15 Nm

2. Torque: 20 Nm

3. Torque: 25 Nm

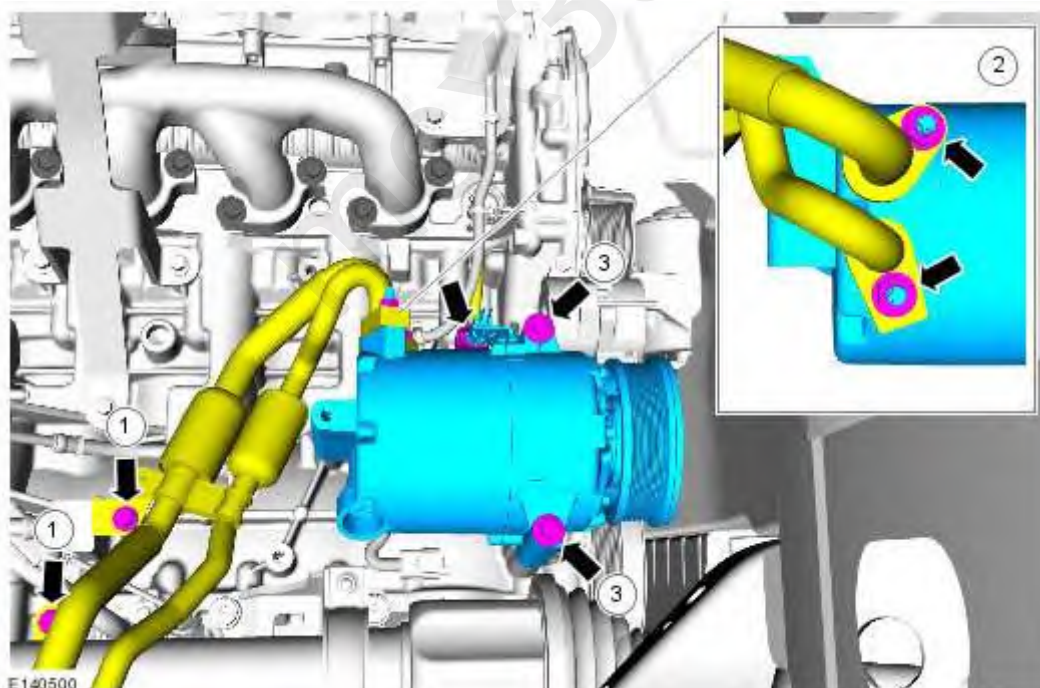

Installation

1.  **NOTICE:** Only use the specified material to lubricate the seals.

To install, reverse the removal procedure.

Material: WSH-M1C231-B (Refrigerant Oil)

mcx30.com