

Removal and Installation

Materials

Name	Specification
Refrigerant Oil	WSH-M1C231-B

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Air Conditioning \(A/C\) Compressor](#) (412-01 Climate Control, Removal and Installation).

Vehicles with auxiliary climate control

2.  **NOTICE:** Make sure that all openings are sealed.

Torque: 8 Nm

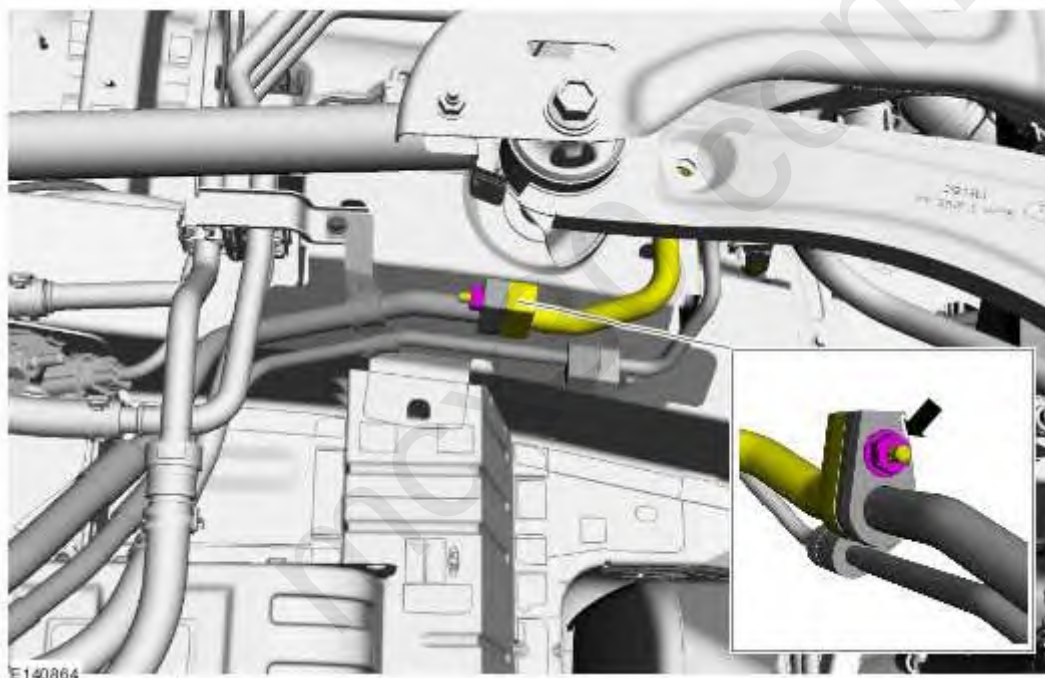


- 3.



All vehicles


4.  **NOTICE:** Make sure that all openings are sealed.

1. Torque: 8 Nm
2. Torque: 8 Nm
3. Torque: 15 Nm

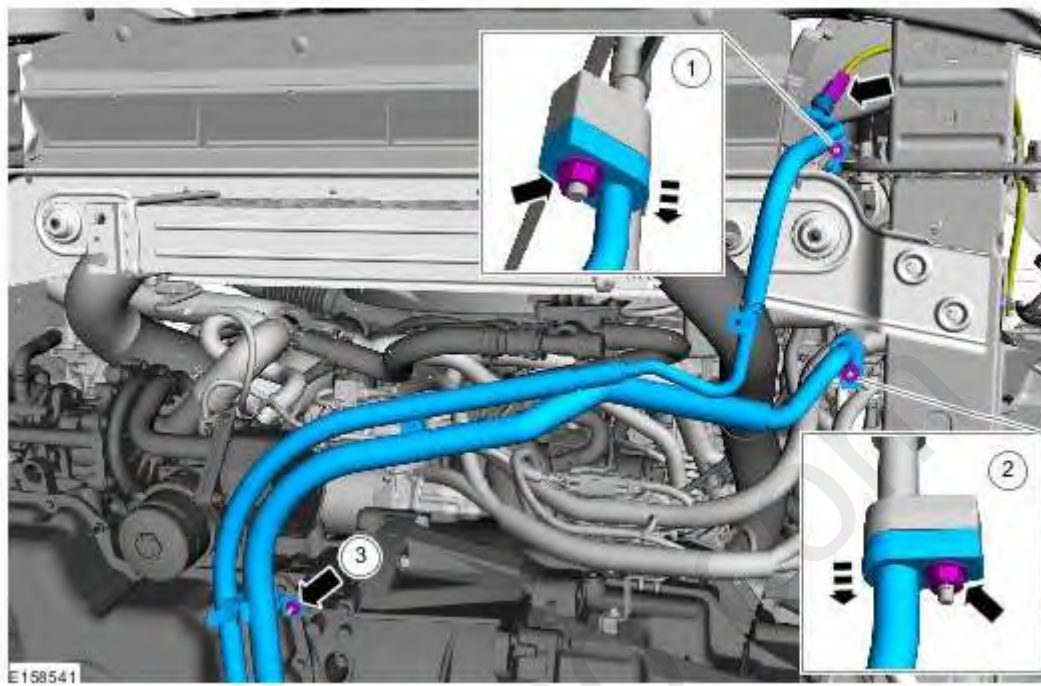

5. **NOTE:** This step is only necessary when installing a new component.

Torque: 8 Nm

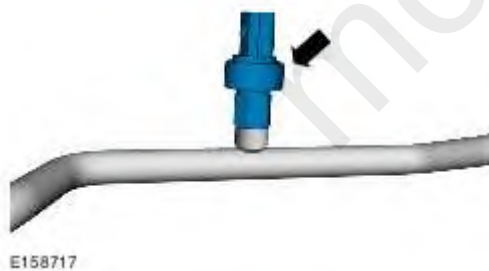

Installation

1.  **NOTICE:** Only use the specified material to lubricate the seals.
To install, reverse the removal procedure.

Material: [WSH-M1C231-B \(Refrigerant Oil\)](#)