

Removal and Installation


Materials

Name	Specification
Refrigerant Oil	WSH-M1C231-B

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Air Conditioning \(A/C\) System Recovery, Evacuation and Charging](#) (412-00 Climate Control System - General Information, General Procedures).
2. Refer to: [Cowl Panel Grille](#) (501-02 Front End Body Panels, Removal and Installation).
- 3.

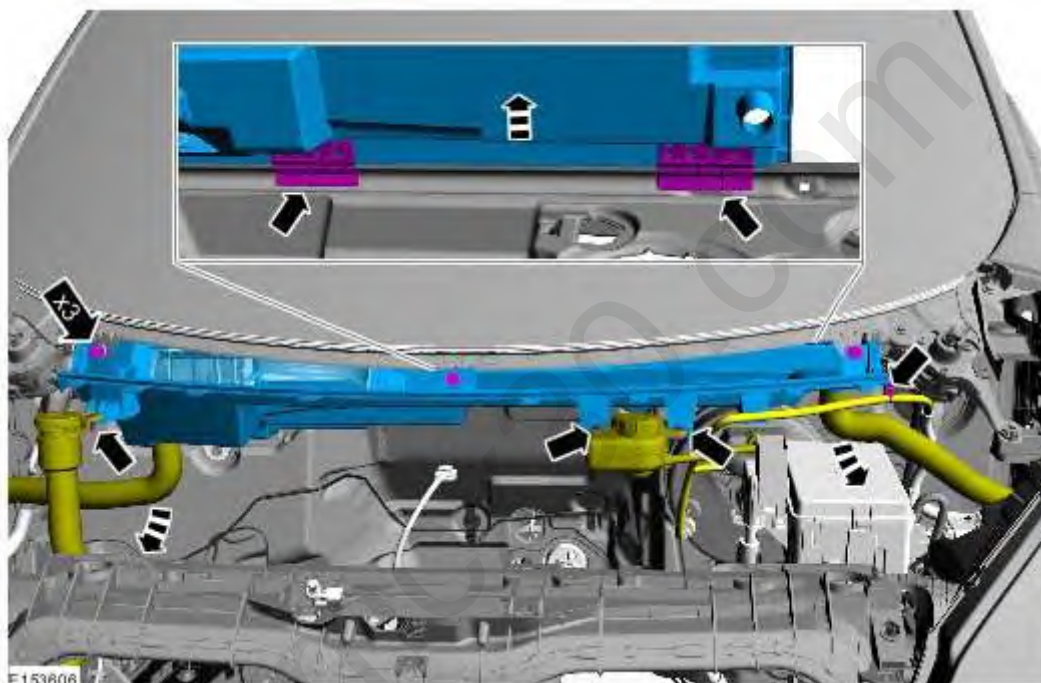

4. Remove the left handed headlamp.


Refer to: [Headlamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).

5. Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
6. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
- 7.

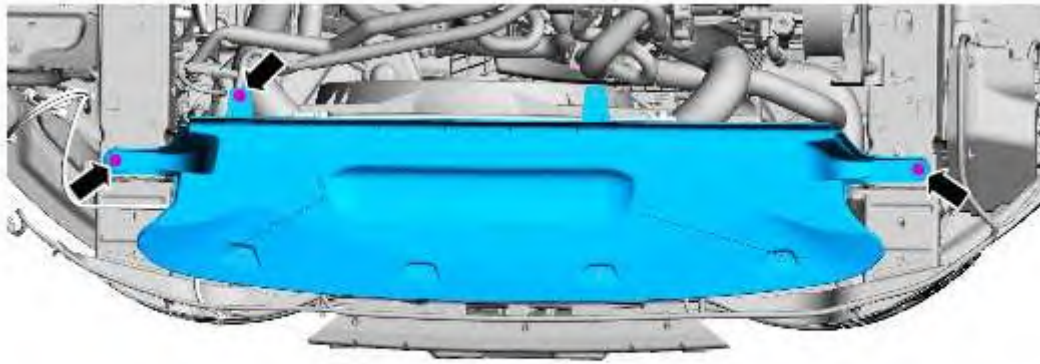


E141019

8.  **NOTICE:** Make sure that all openings are sealed.
Torque: 8 Nm

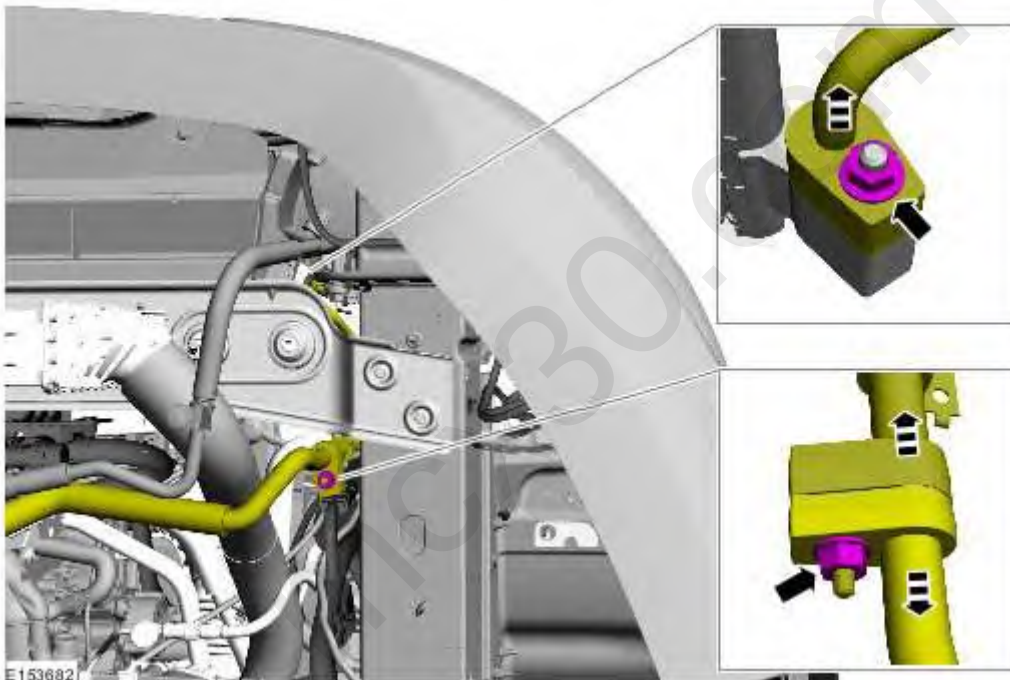


E153682


9. 1. *Torque: 10 Nm*

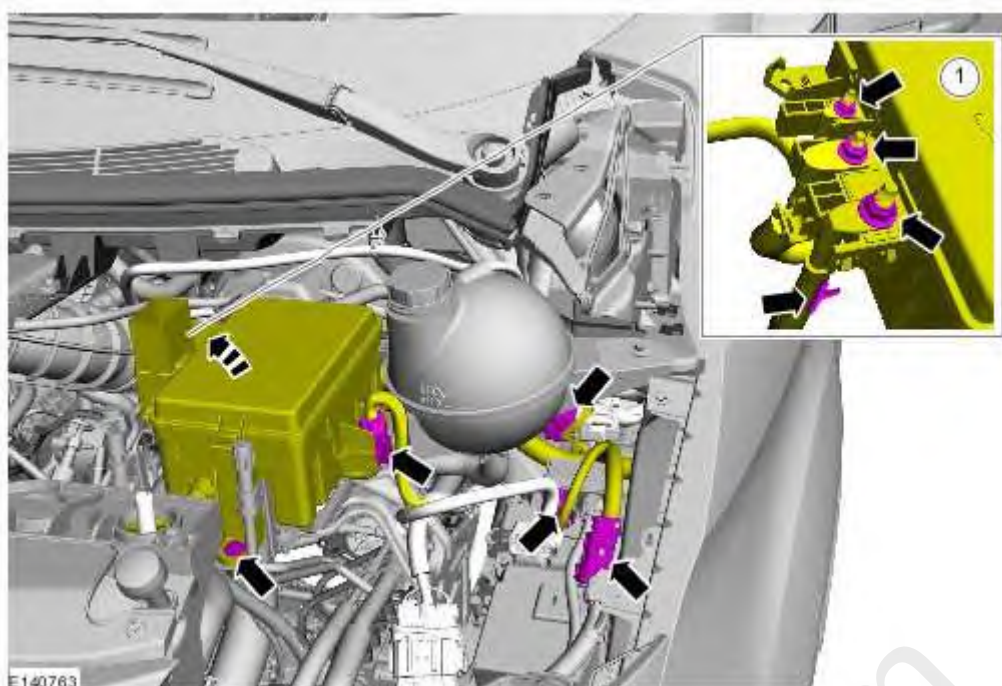


10.

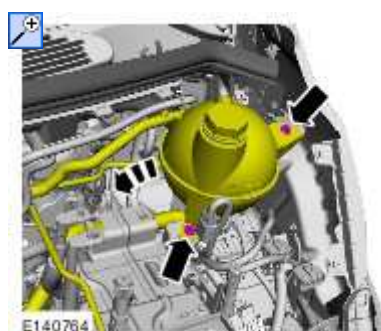


11. Torque: 8 Nm

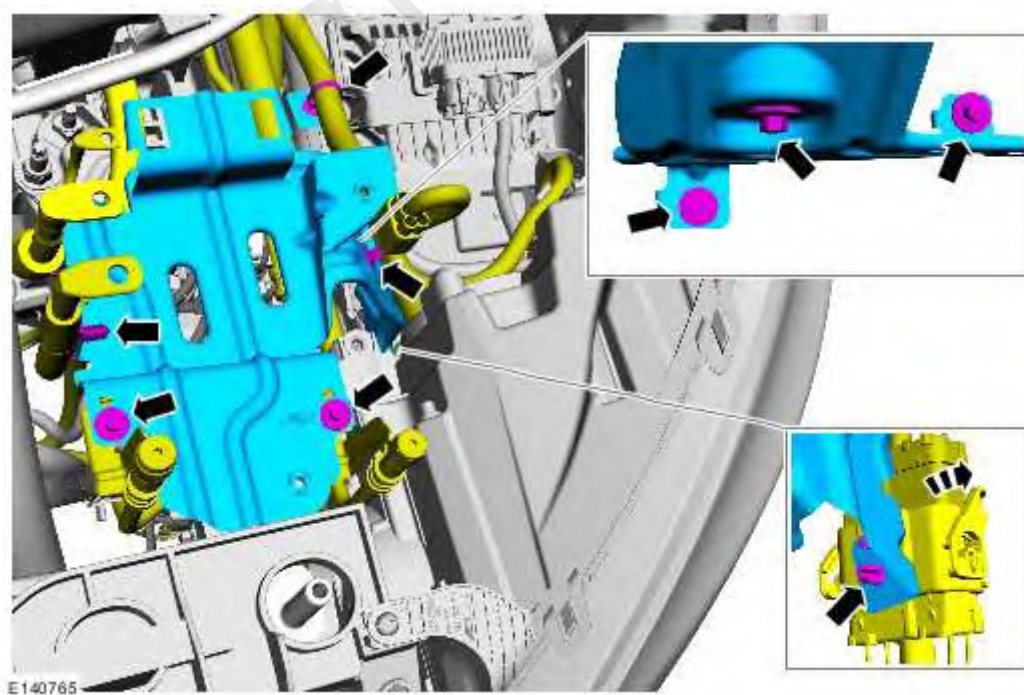

12.  **NOTICE:** Make sure that all openings are sealed.
Torque: 8 Nm

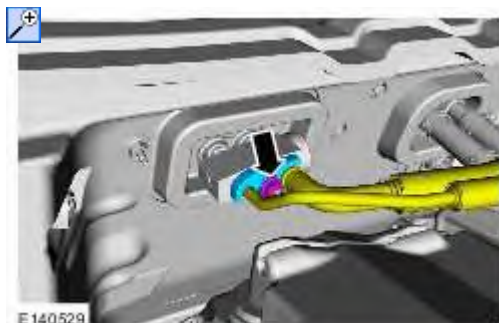

- 13.
1.  **NOTICE:** Make sure that all openings are sealed.
If equipped.
Torque: 8 Nm
 2. *Torque: 8 Nm*

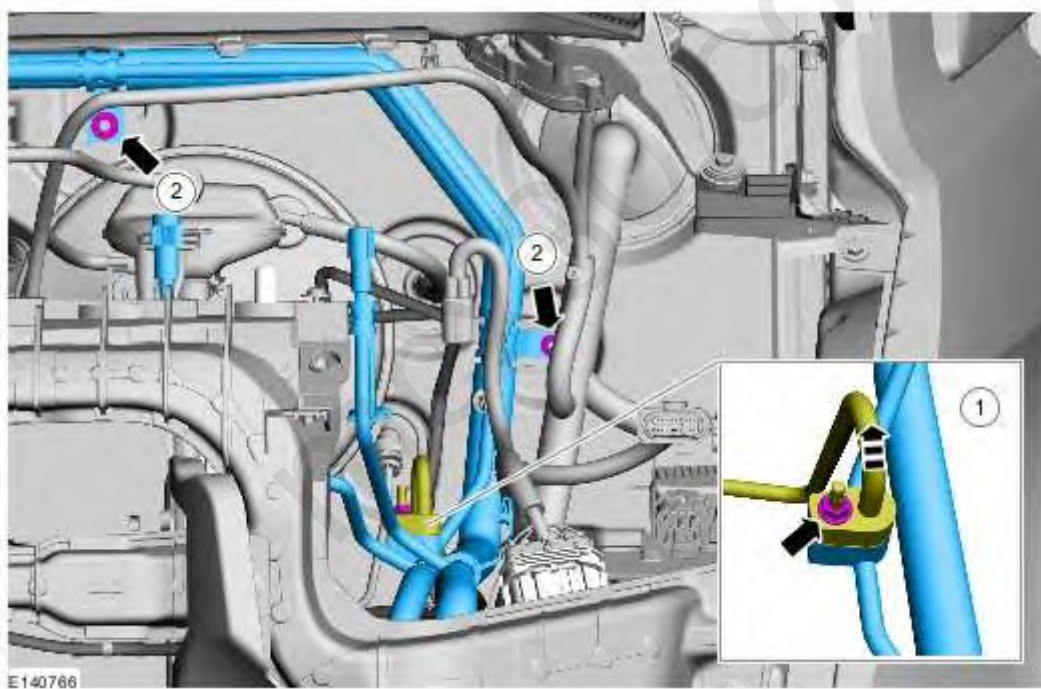

Installation

1.  **NOTICE:** Only use the specified material to lubricate the seals.
To install, reverse the removal procedure.
Material: WSH-M1C231-B (Refrigerant Oil)