


Disassembly and Assembly

Disassembly


NOTE: Removal steps in this procedure may contain installation details.

1.

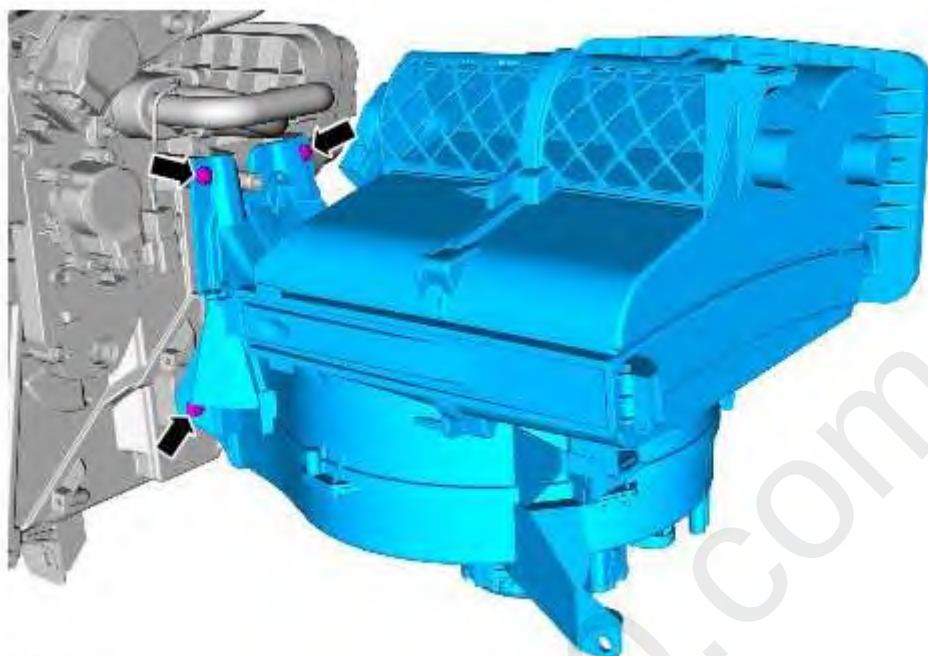


E153265

2.

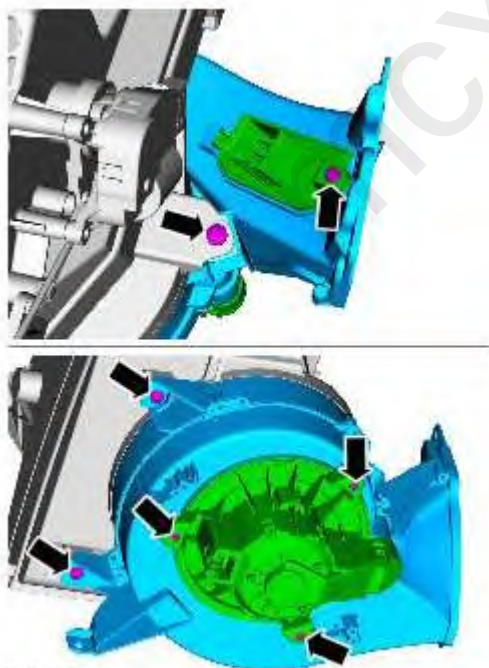


E153266

3.

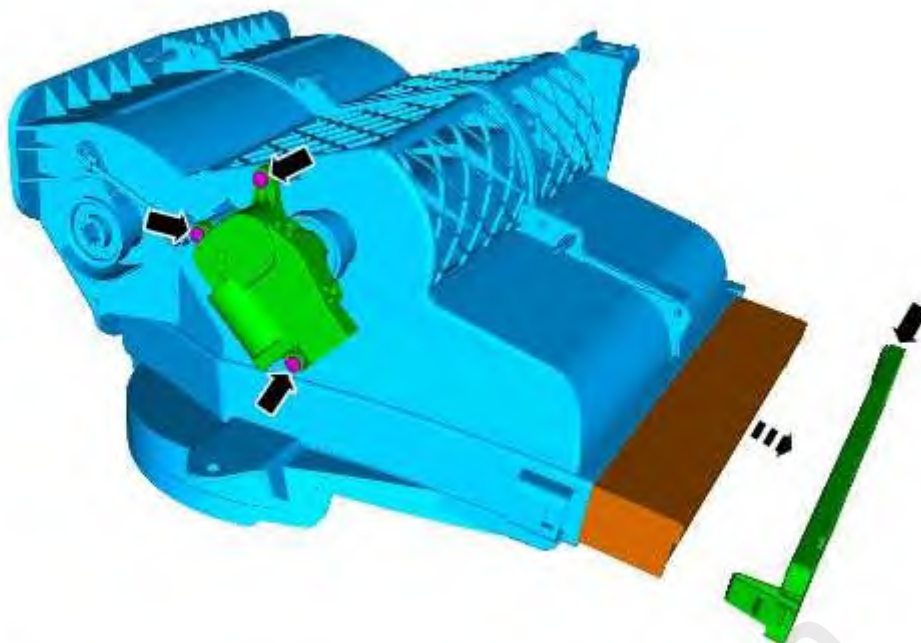


E153267

4. Torque: 4 Nm

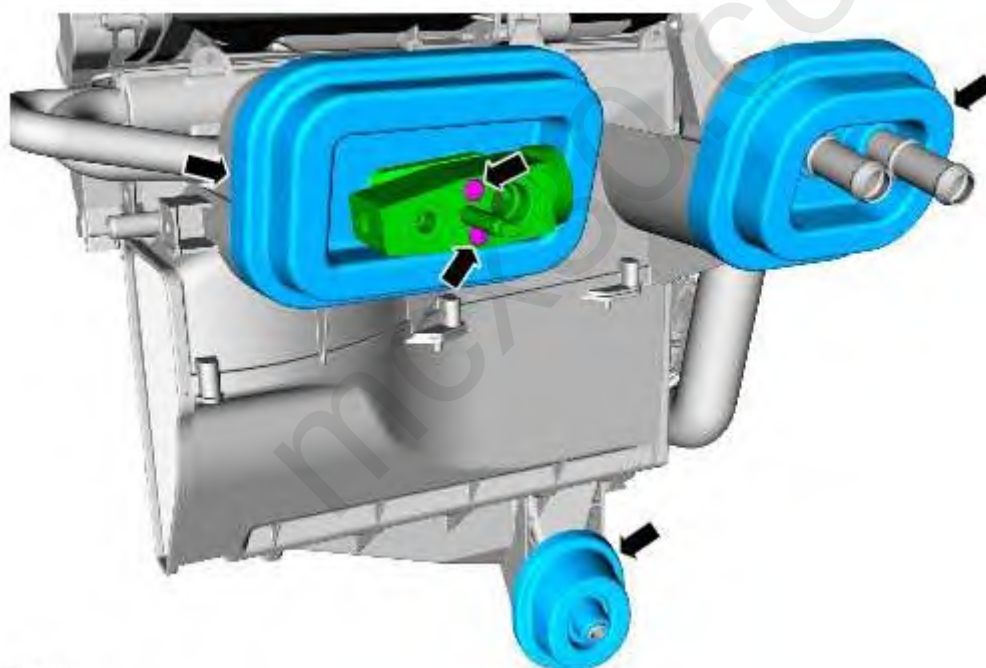

E153264

5.

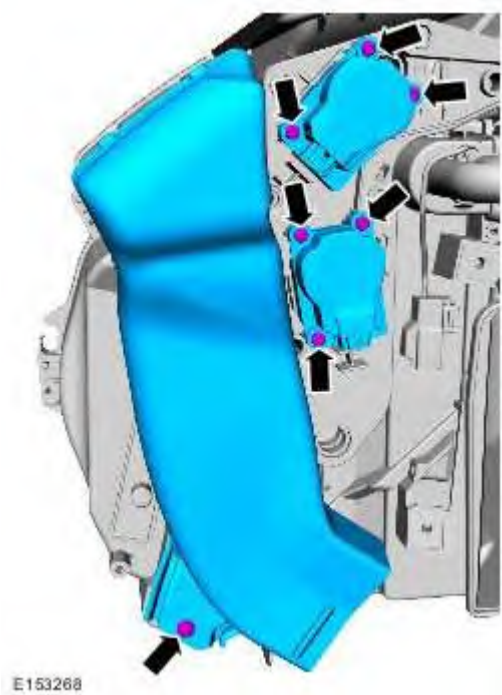

Assembly

6. To assemble, reverse the disassembly procedure.