


Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Diesel Fuel System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
3.  NOTICE: Make sure that all openings are sealed.

Torque: 8 Nm

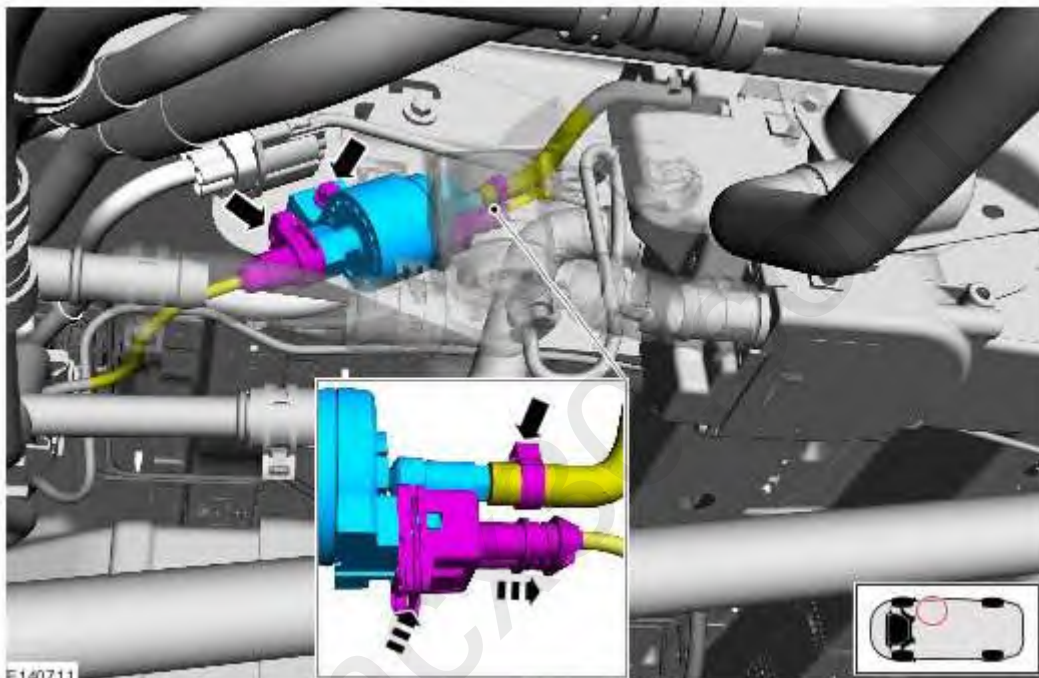

Installation

1. To install, reverse the removal procedure.