

Removal and Installation

General Equipment

Hose Clamp(s)

Materials

Name	Specification
Refrigerant Oil	WSH-M1C231-B

Removal

Vehicles with auxiliary climate control

1. Refer to: [Air Conditioning \(A/C\) System Recovery, Evacuation and Charging](#) (412-00 Climate Control System - General Information, General Procedures).


All vehicles

2. Refer to: [Headliner](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
3. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

Vehicles with auxiliary heating

4.  **NOTICE:** Make sure that all openings are sealed.


Use the General Equipment: [Hose Clamp\(s\)](#)
Torque: 8 Nm

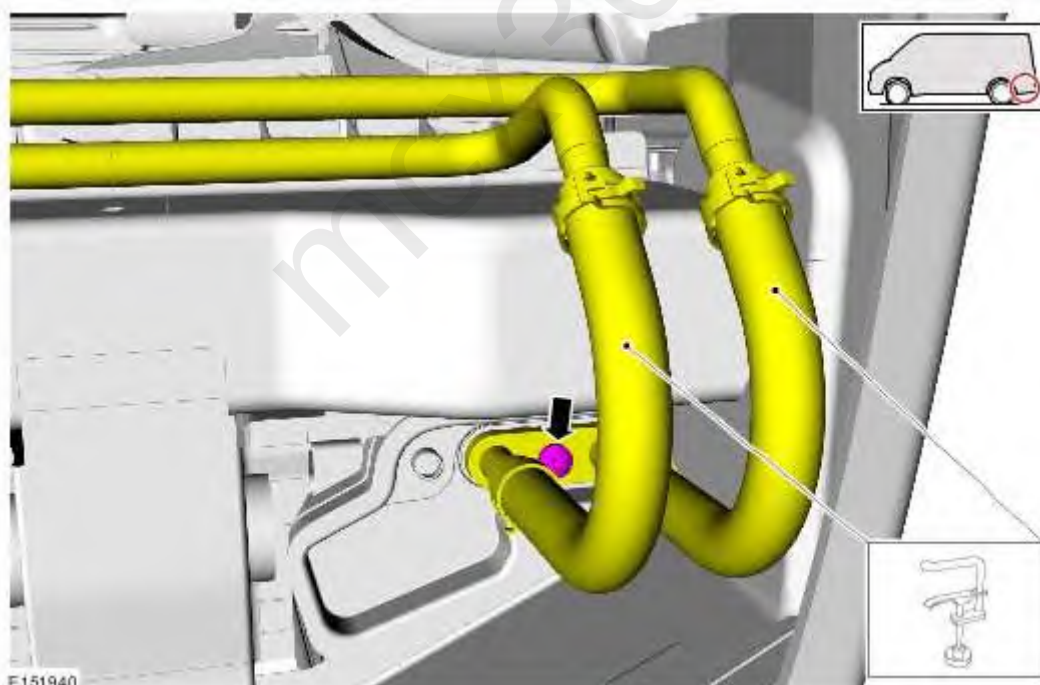

Vehicles with auxiliary climate control

5.  **NOTICE:** Make sure that all openings are sealed.

Use the General Equipment: [Hose Clamp\(s\)](#)
Torque: 8 Nm

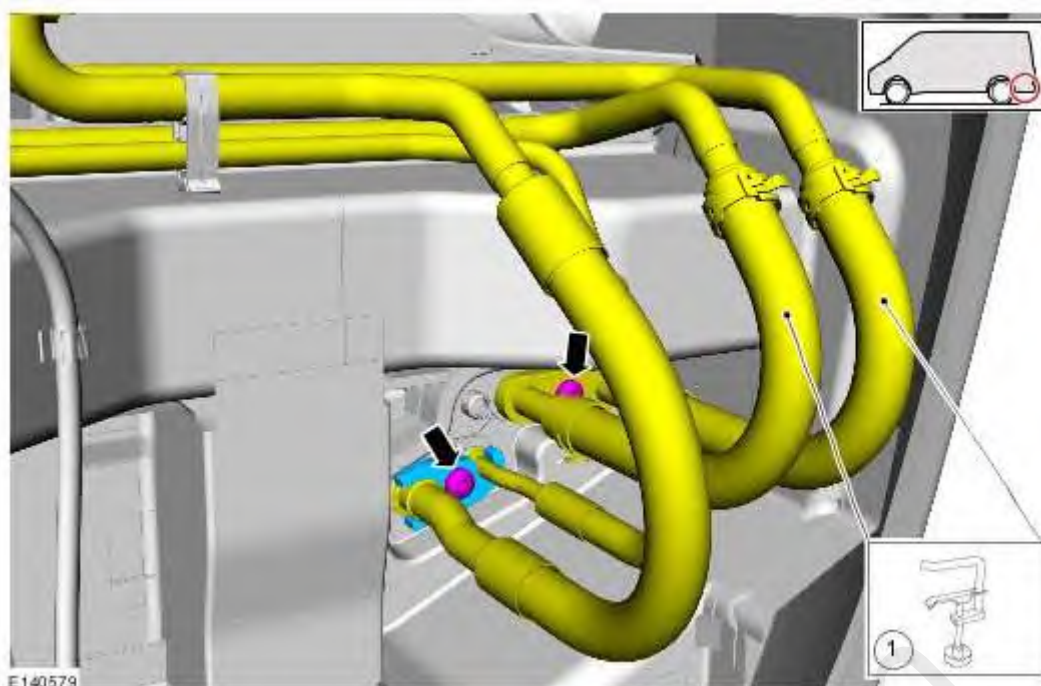


6.




All vehicles

7.

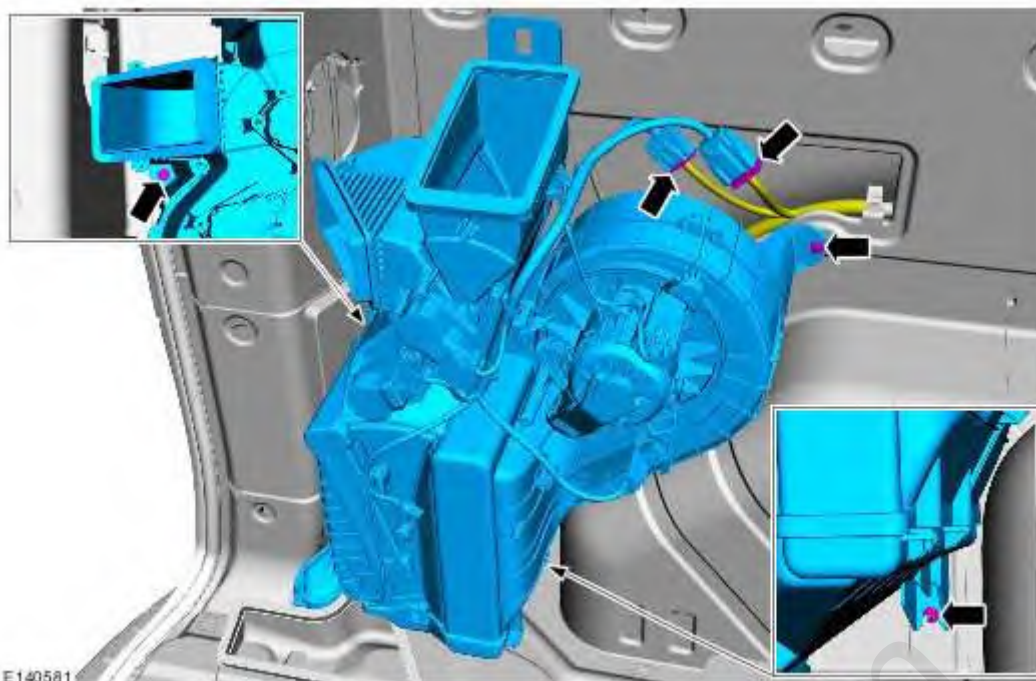

NOTE: The following steps are only necessary when installing a new component.

8.

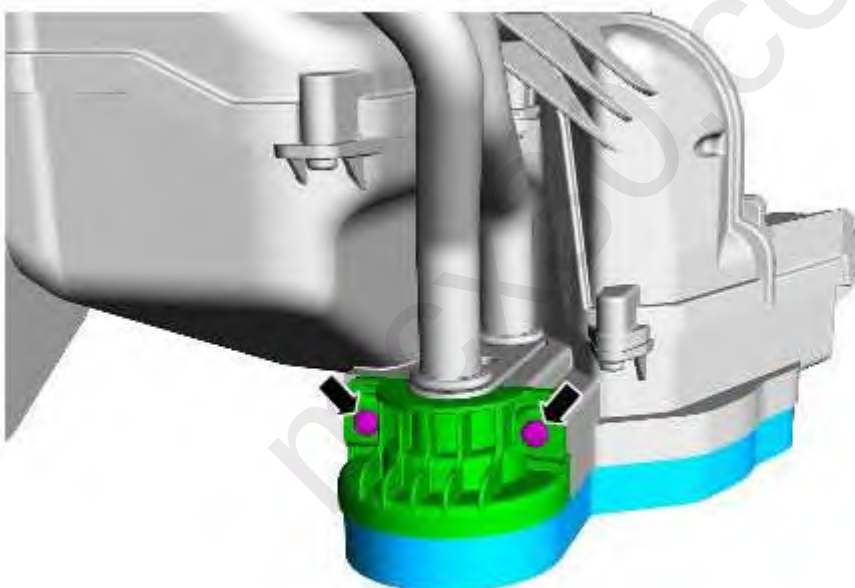


E152005


9.




10.  **NOTICE:** Make sure that all openings are sealed.
Torque: 4 Nm

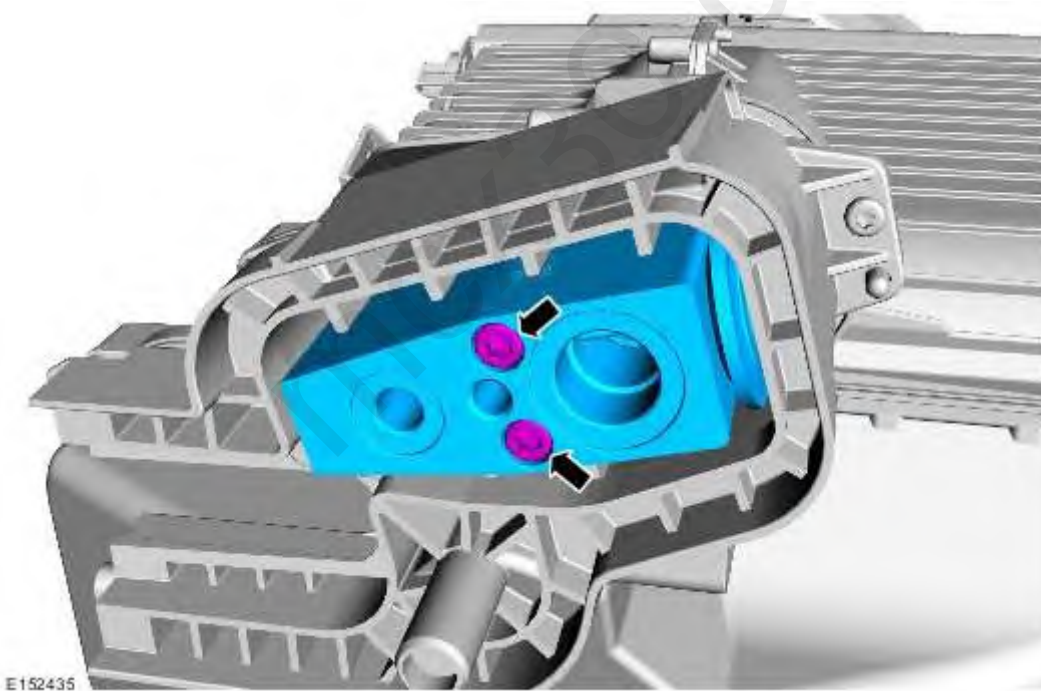

- 11.

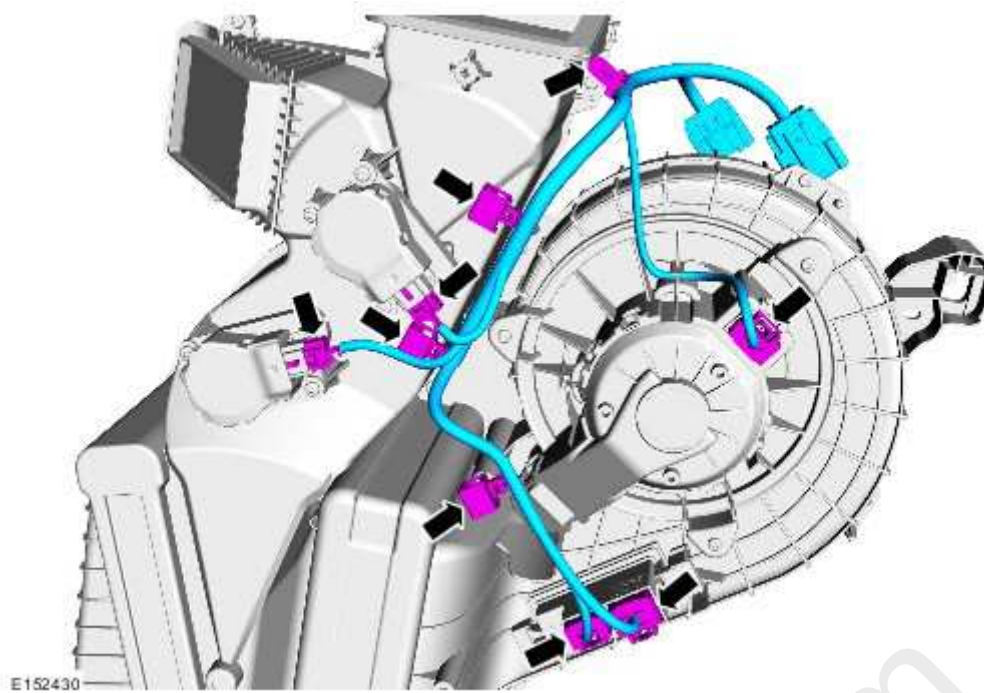

12.

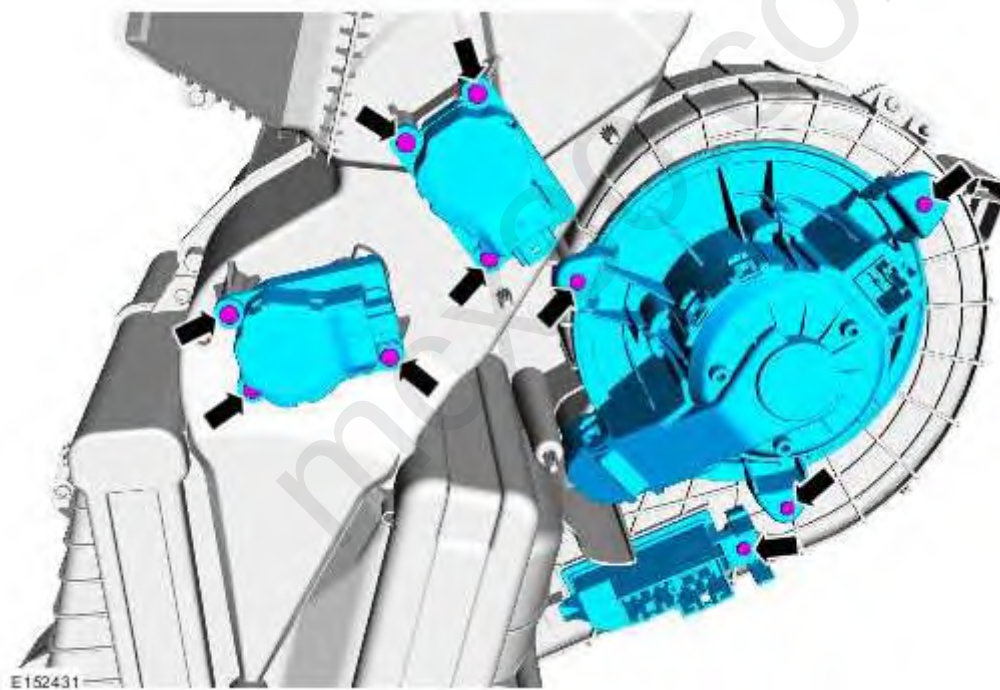

Installation

1.  **NOTICE:** Only use the specified material to lubricate the seals.
To install, reverse the removal procedure.

Material: [WSH-M1C231-B \(Refrigerant Oil\)](#)