

Removal and Installation

Removal

1. Refer to: [Auxiliary Climate Control Housing](#) (412-02A Auxiliary Climate Control, Removal and Installation).

2.  **NOTICE:** Make sure that all openings are sealed.

Torque: 4 Nm



E153680

Installation

1. To install, reverse the removal procedure.