

Removal and Installation

Materials


Name	Specification
Refrigerant Oil	WSH-M1C231-B

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Air Conditioning \(A/C\) System Recovery, Evacuation and Charging](#) (412-00 Climate Control System - General Information, General Procedures).
2. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
3.  NOTICE: Make sure that all openings are sealed.


Torque: 8 Nm

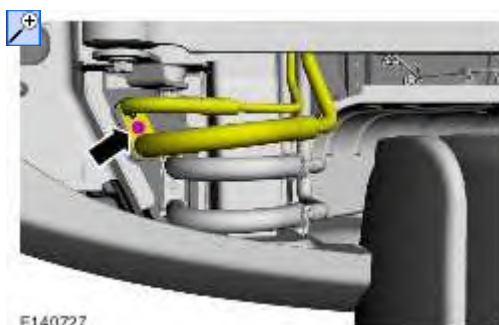


4. *Torque: 8 Nm*

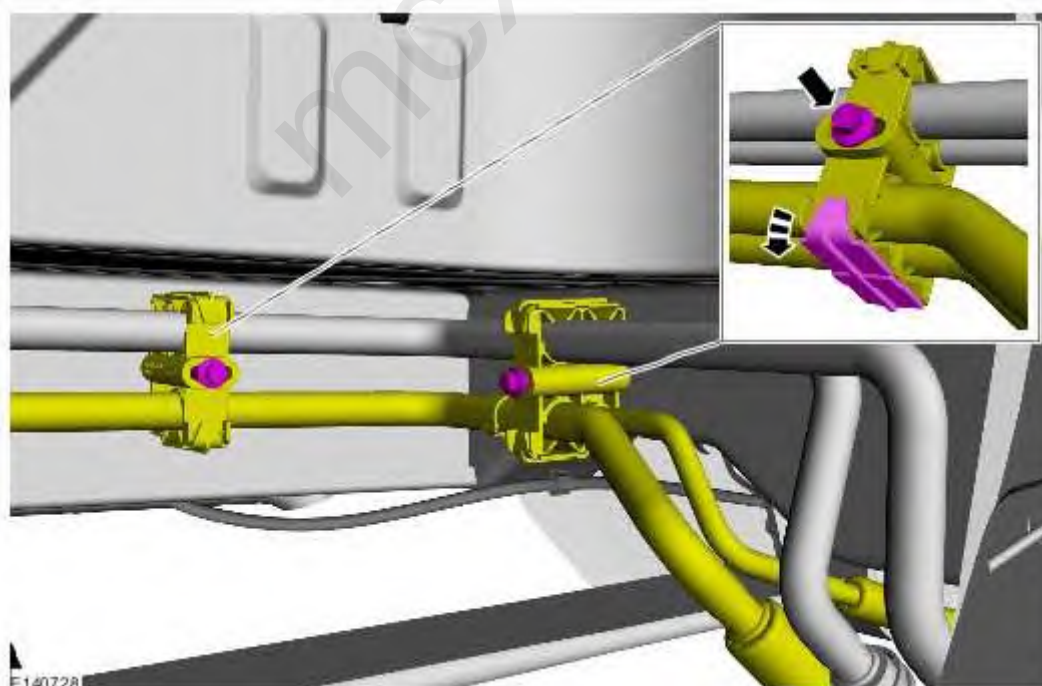

5. *Torque: 8 Nm*

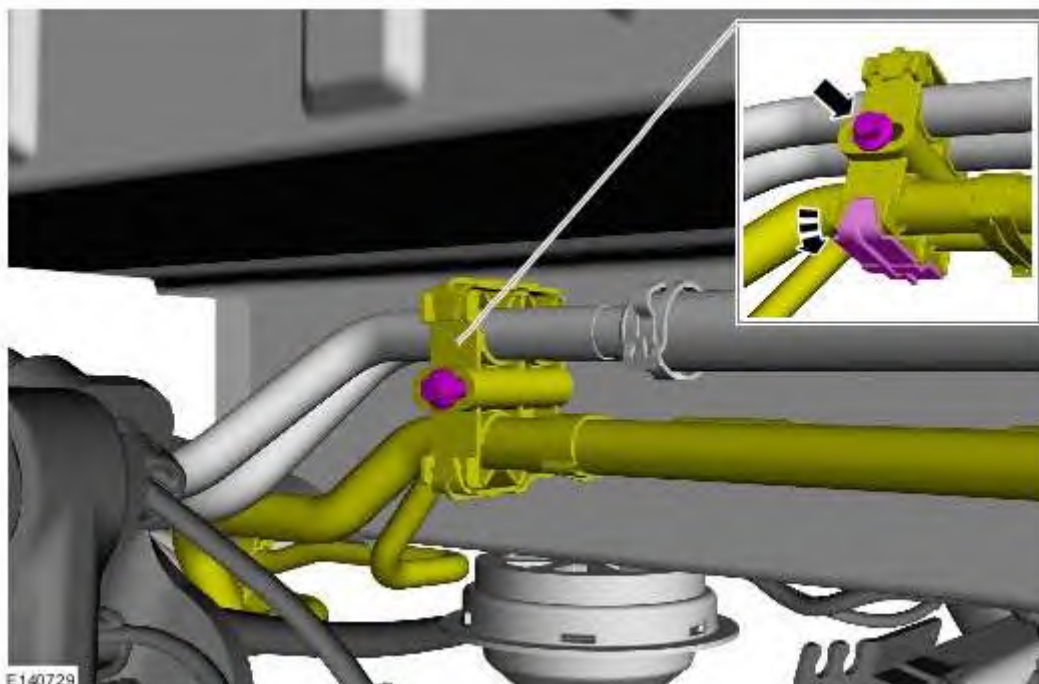

6.  **NOTICE:** Make sure that all openings are sealed.
Torque: 8 Nm

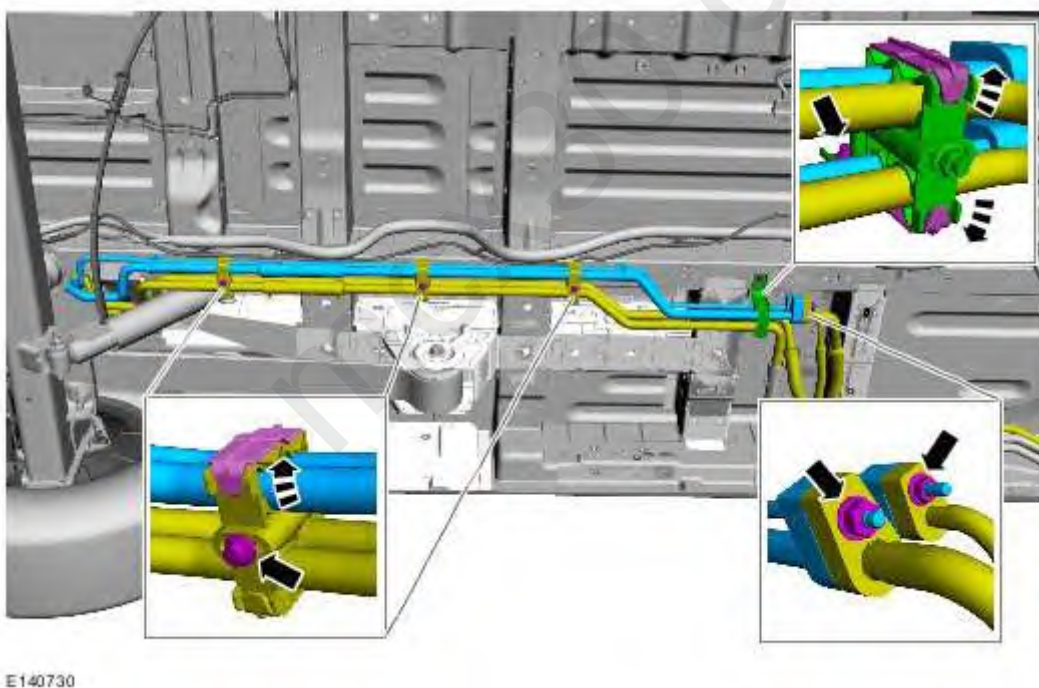

Installation

1.  **NOTICE:** Only use the specified material to lubricate the seals.
To install, reverse the removal procedure.

Material: [WSH-M1C231-B \(Refrigerant Oil\)](#)