

Removal and Installation


Materials

Name	Specification
Refrigerant Oil	WSH-M1C231-B
Refrigerant Oil	WSS-M2C300-A2


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Air Conditioning \(A/C\) System Recovery, Evacuation and Charging](#) (412-00 Climate Control System - General Information, General Procedures).
2.  NOTICE: Make sure that all openings are sealed.
 1. Torque: 6 Nm
 2. Torque: 8 Nm

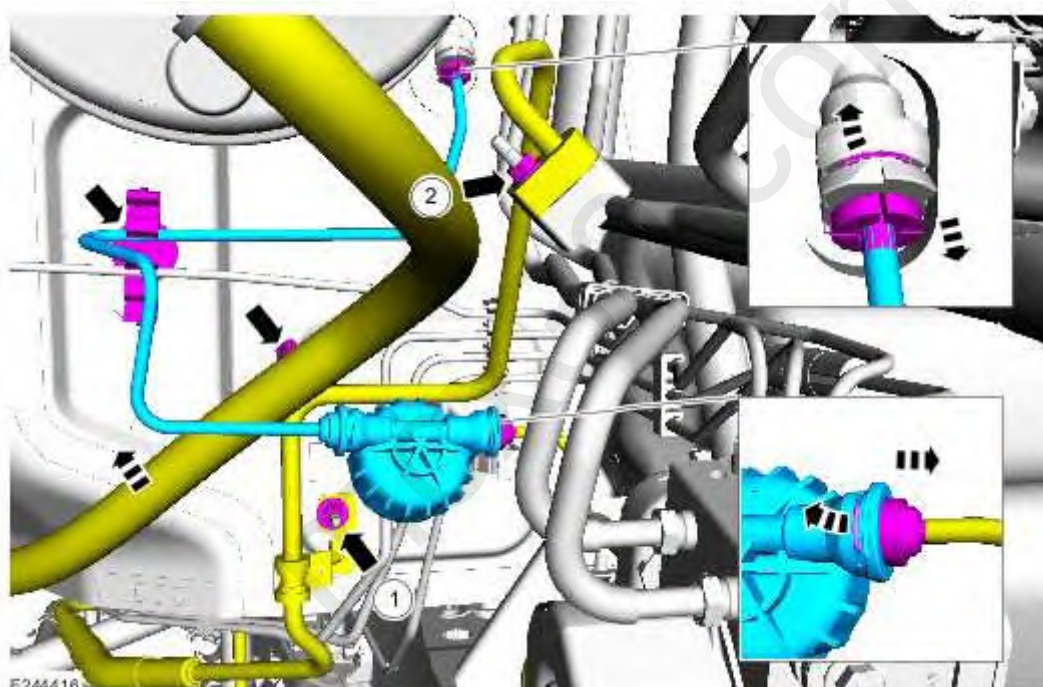

3. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
4.  NOTICE: Make sure that all openings are sealed.
Torque: 8 Nm

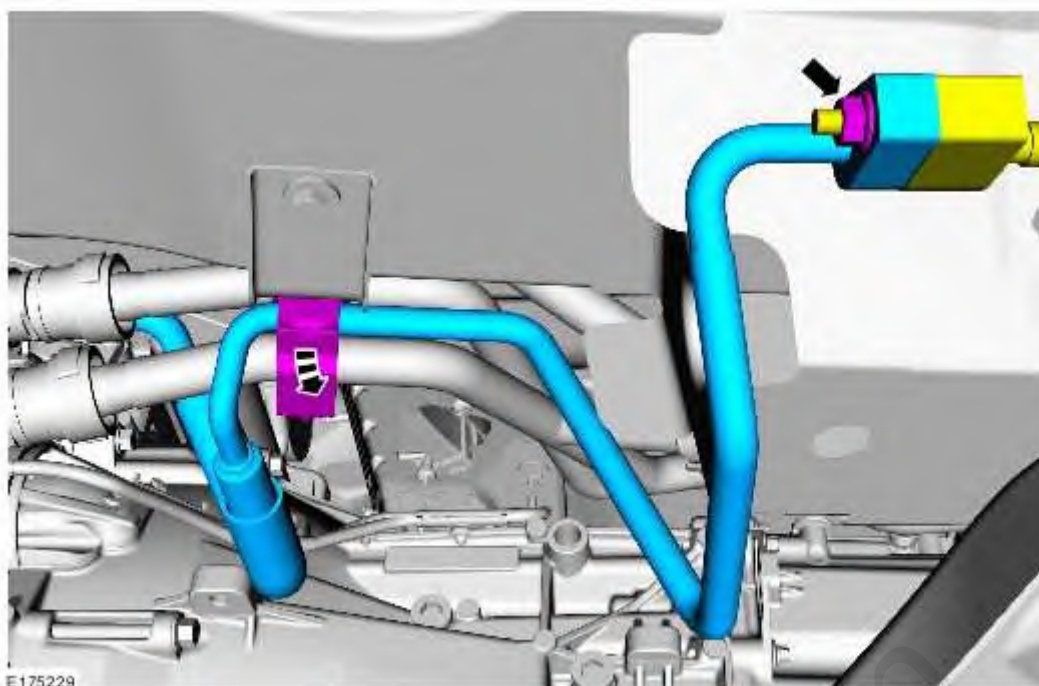

Installation

1.  **NOTICE:** Only use the specified material to lubricate the seals.
To install, reverse the removal procedure.

Material: WSH-M1C231-B (Refrigerant Oil)

Material: WSS-M2C300-A2 (Refrigerant Oil)