

Removal and Installation

Materials

Name	Specification
Refrigerant Oil	WSH-M1C231-B


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Air Conditioning \(A/C\) System Recovery, Evacuation and Charging](#) (412-00 Climate Control System - General Information, General Procedures).
2. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
3. Remove engine undershield - If equipped.


4.  **NOTICE:** Make sure that all openings are sealed.

Torque: 8 Nm

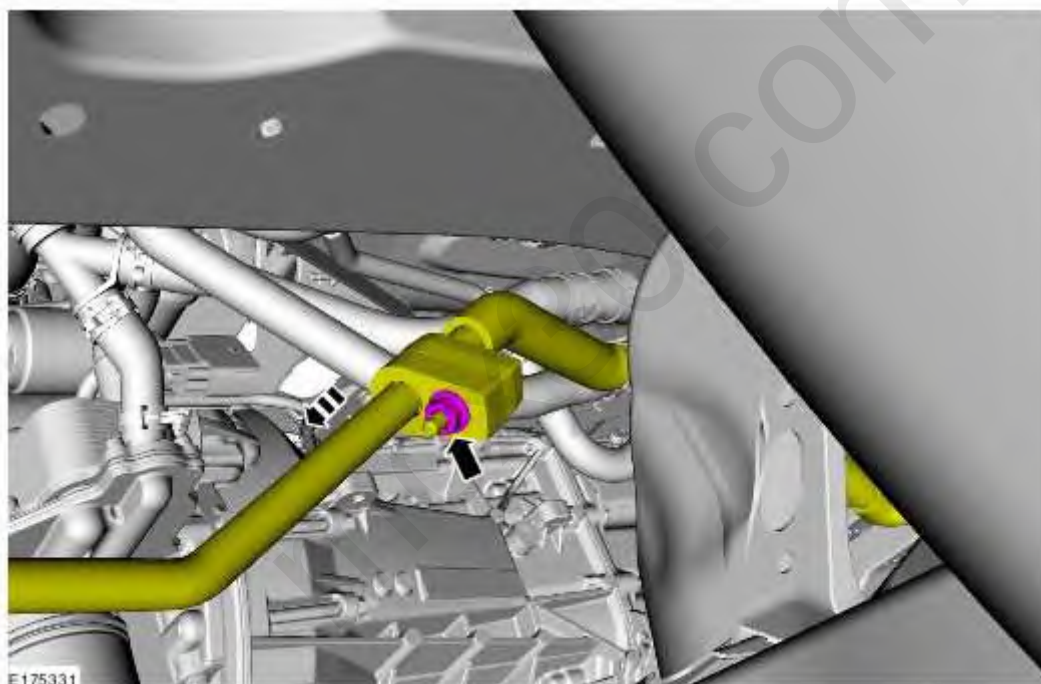

5.  **NOTICE:** Make sure that all openings are sealed.

Torque: 8 Nm

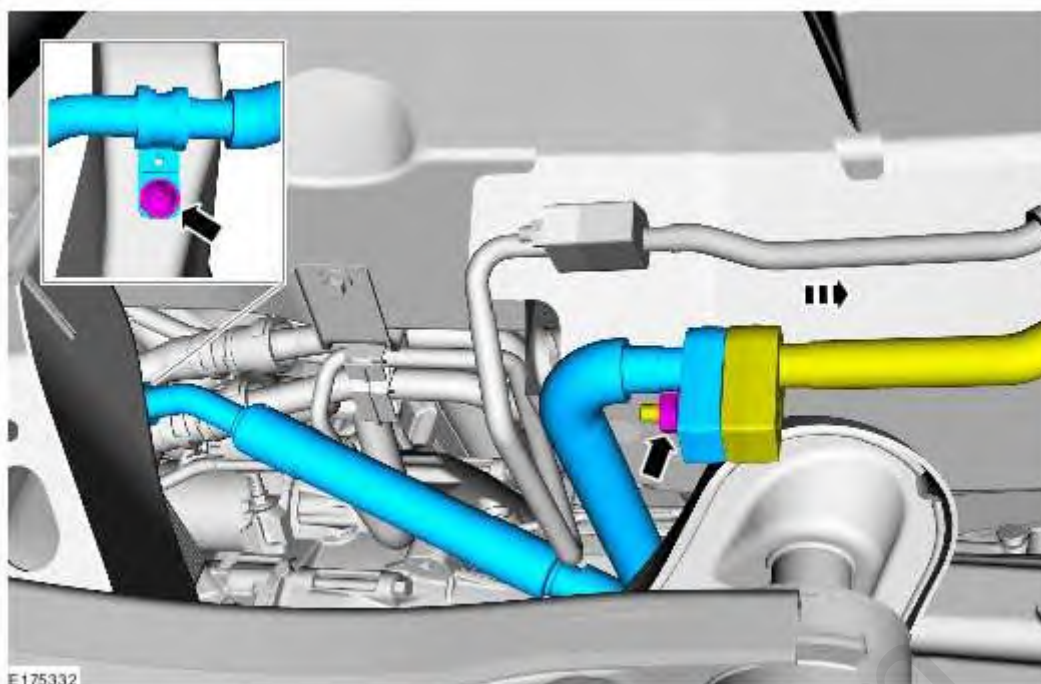

Installation

1.  **NOTICE:** Only use the specified material to lubricate the seals.
To install, reverse the removal procedure.

Material: [WSH-M1C231-B \(Refrigerant Oil\)](#)