


Removal and Installation

Removal

1. NOTE: Removal steps in this procedure may contain installation details.
Refer to: [Headlamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).
2. If equipped.


Torque: 23 Nm

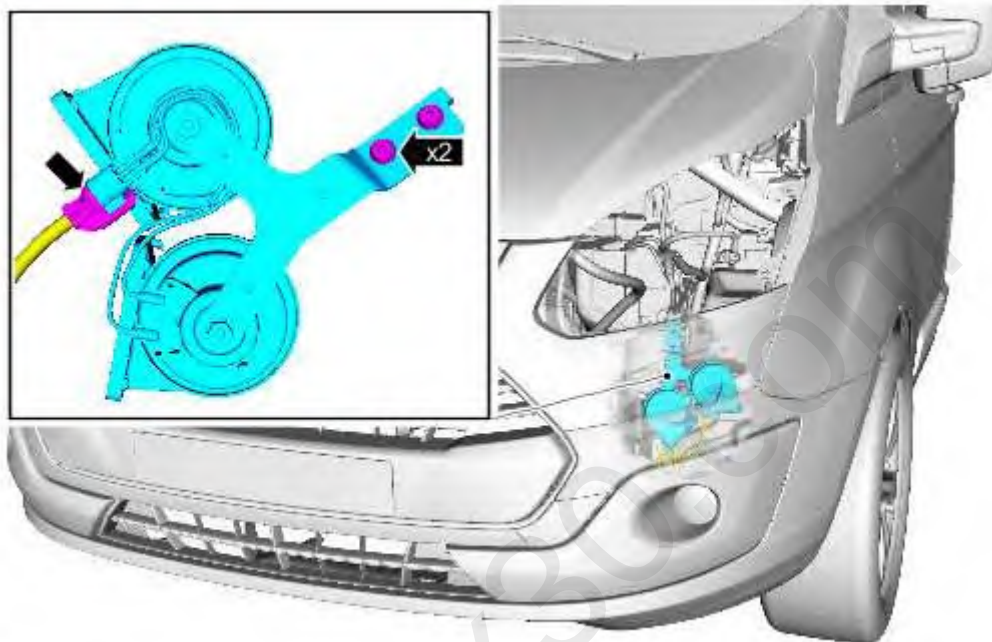

E152580

3. If equipped.

Torque: 23 Nm

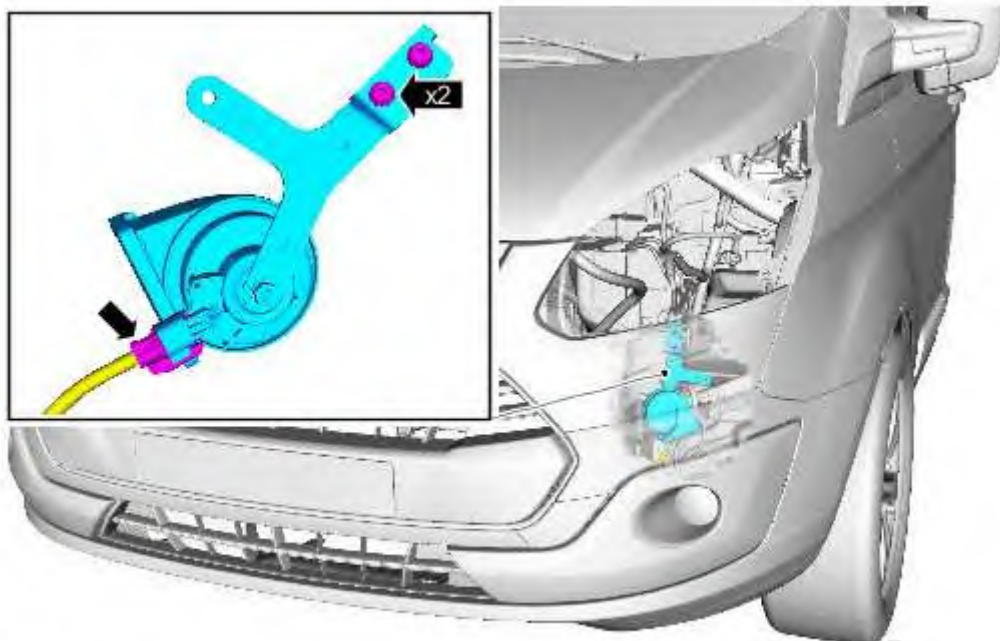

E152581

Installation

1. To install, reverse the removal procedure.