

Description and Operation

Parking aid sensors

NOTICE:



Always keep sensors free from dirt, ice and snow. Do not use any sharp objects to clean the sensors.




If a high-pressure cleaner is used to wash the vehicle, the jet must only be aimed at the sensors briefly at a distance of at least 20 cm.

The parking aid sensors have a separate decoupling ring, which must be removed before painting the sensors, and then refitted.

Front sensors detection range


mm

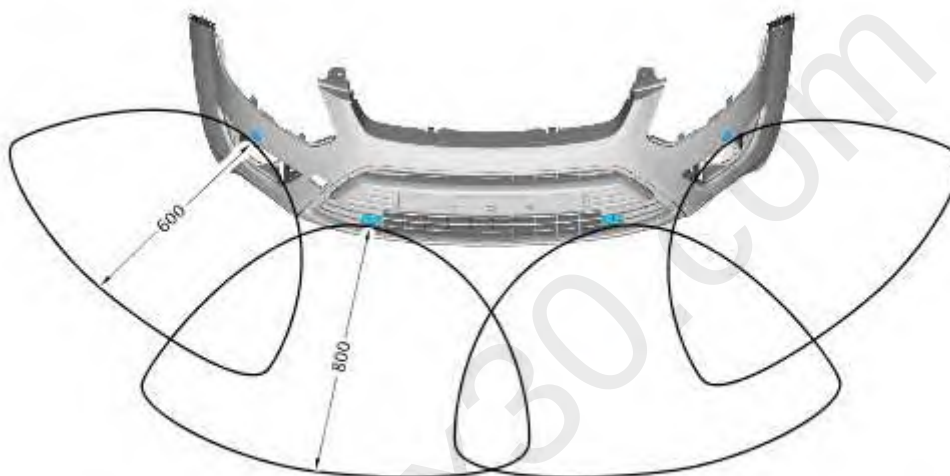

E97414

Rear sensors detection range

mm

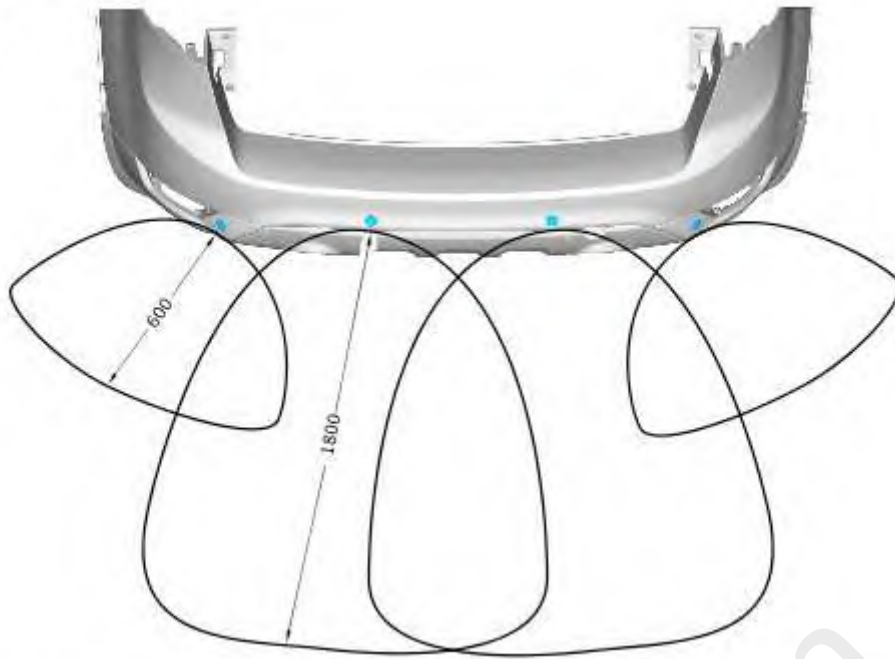

Parking aid camera module

It is not necessary to programme the module after changing it.

Parking Aid Camera

NOTICE:



Always keep the reversing camera free from dirt, ice and snow. Do not clean with sharp objects, fat solvents, wax or organic media. Only use a damp cloth for cleaning.



If a high-pressure cleaner is used to wash the vehicle, the jet must only be aimed at the reversing camera briefly at a distance of at least 20 cm.



The reversing camera is sensitive to pressure. The position and angle of the camera can be changed with increased pressure.

It is not necessary to programme the camera after changing it.