

Removal and Installation

Removal


1. Refer to: [Battery and Battery Charging Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).

Single cab


3. Refer to: [Front Seat](#) (501-10A Front Seats, Removal and Installation).

All vehicles


4. *Torque:* 10 Nm

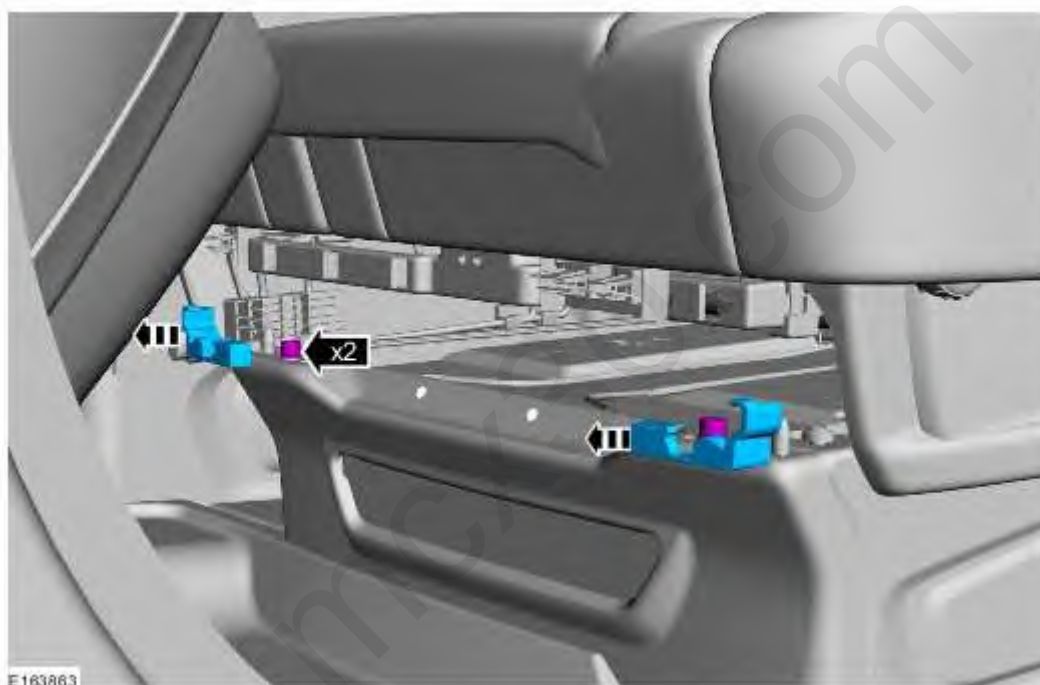


- 5.

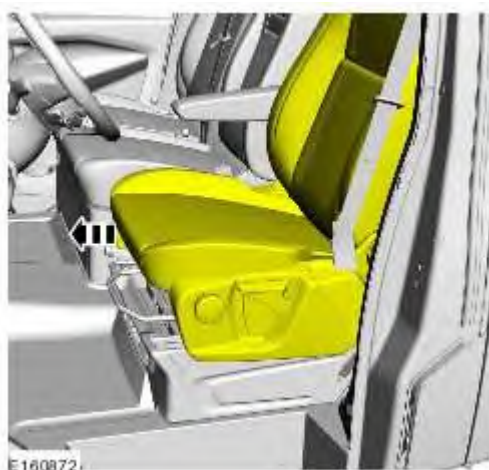


6. Torque: 10 Nm

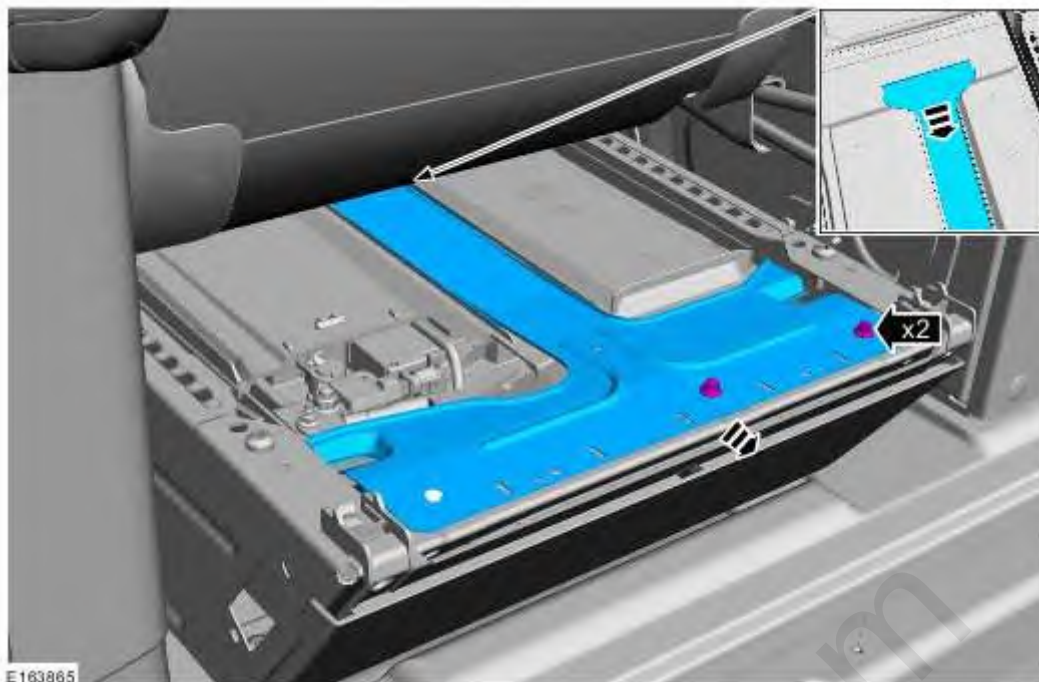

7.

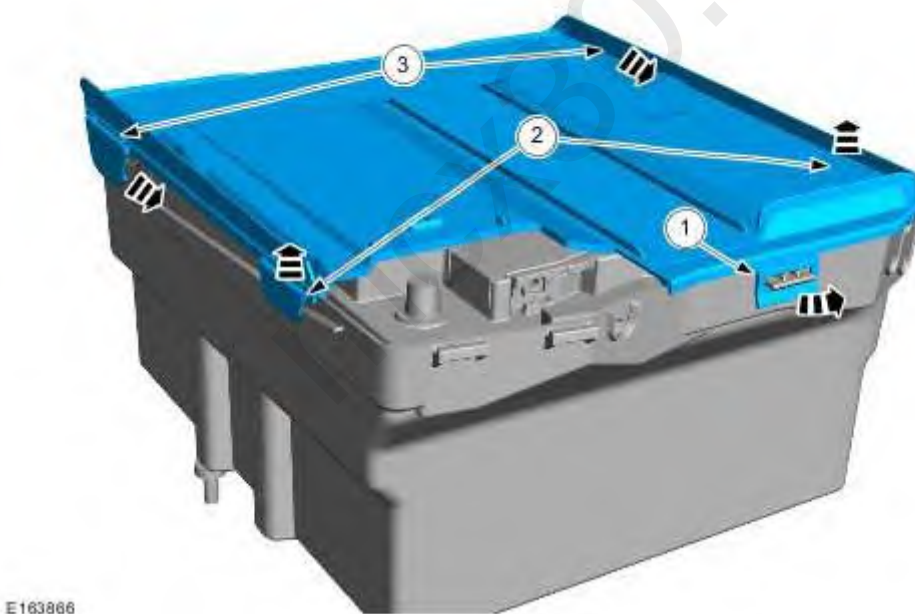

8. Torque:
1: 6 Nm
2: 6 Nm

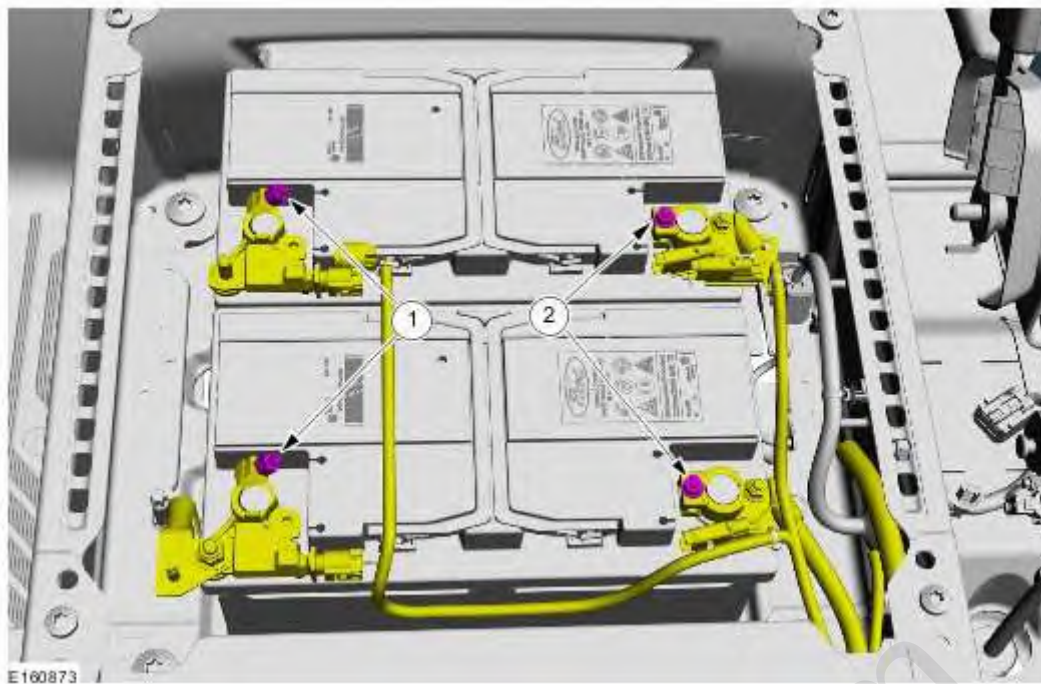

9.



Installation

1. To install, reverse the removal procedure.