


Removal and Installation

Removal


1. Right side.

Refer to: [Headlamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).


- 2.

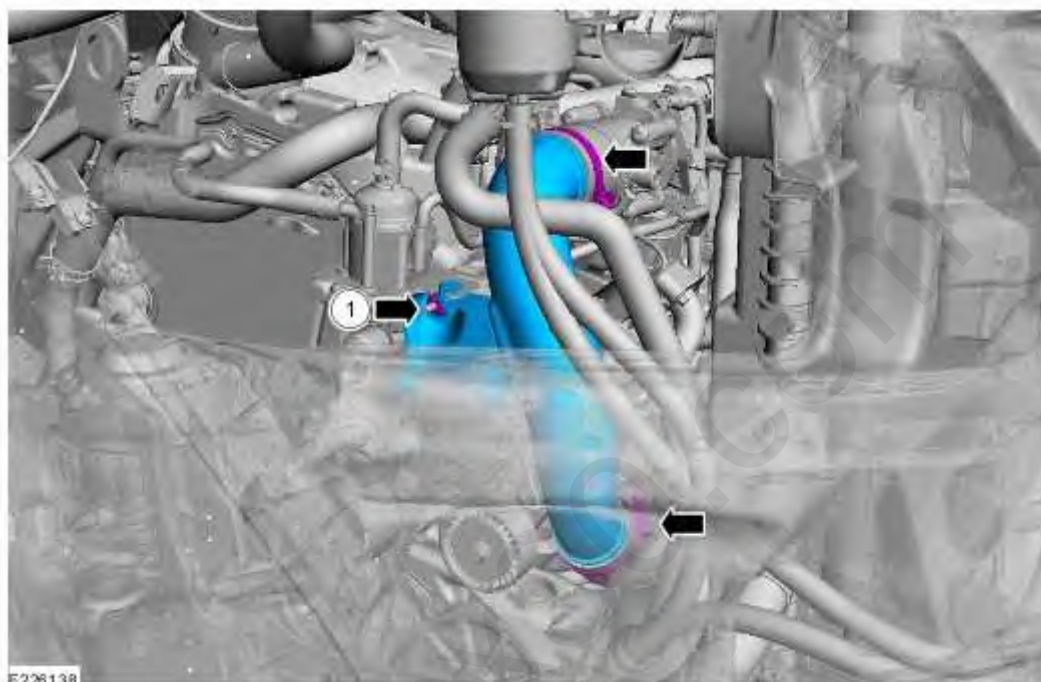


- 3.

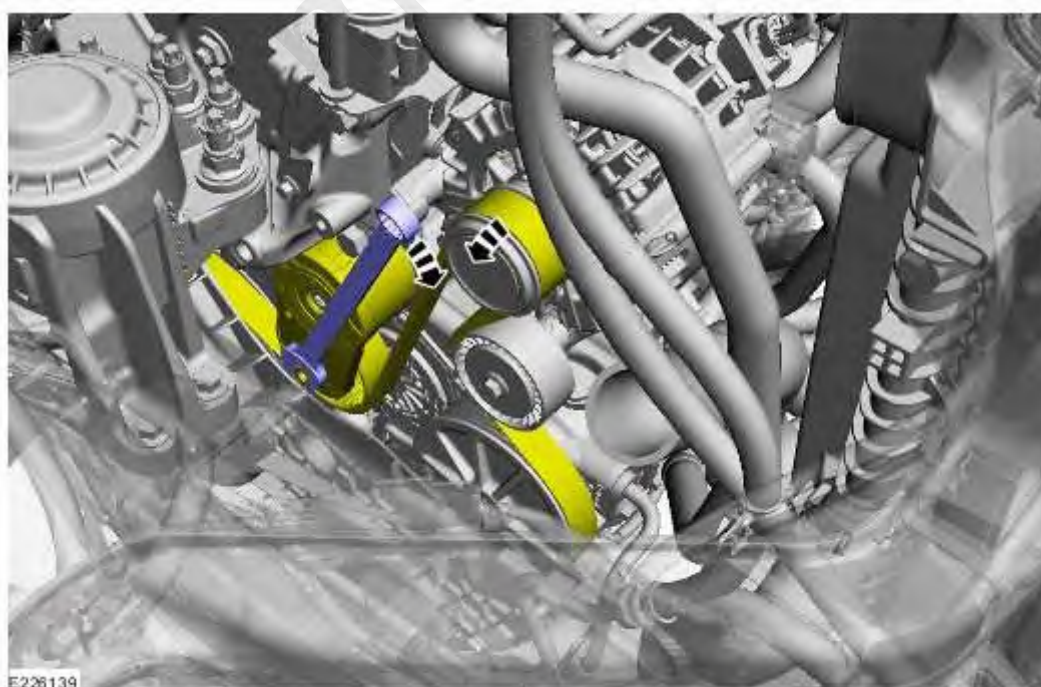


4.

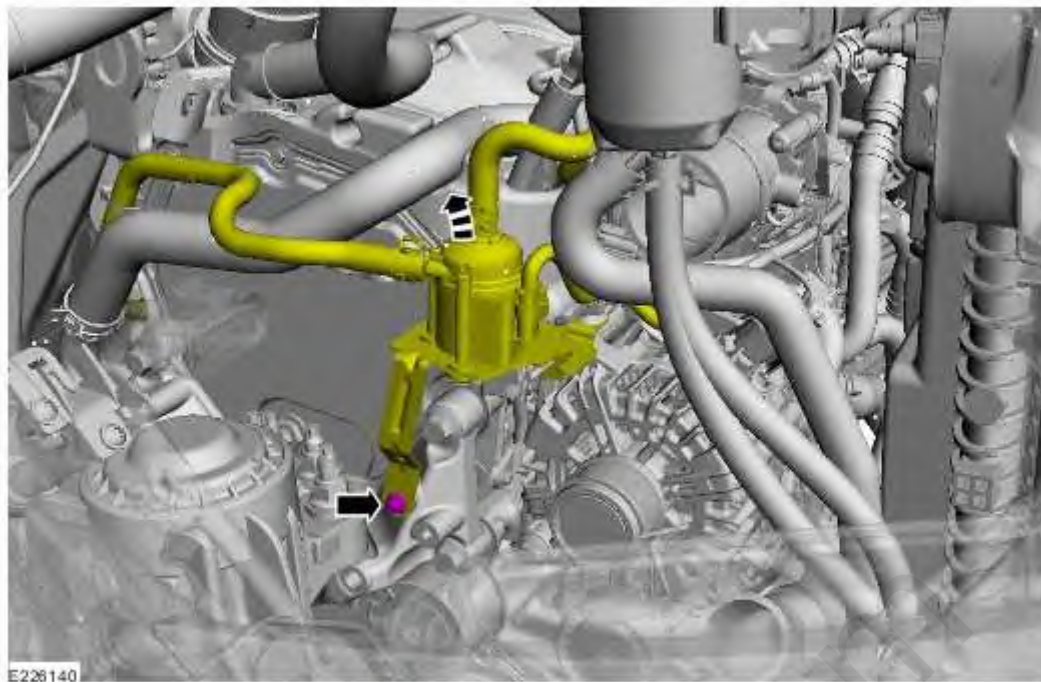


5.

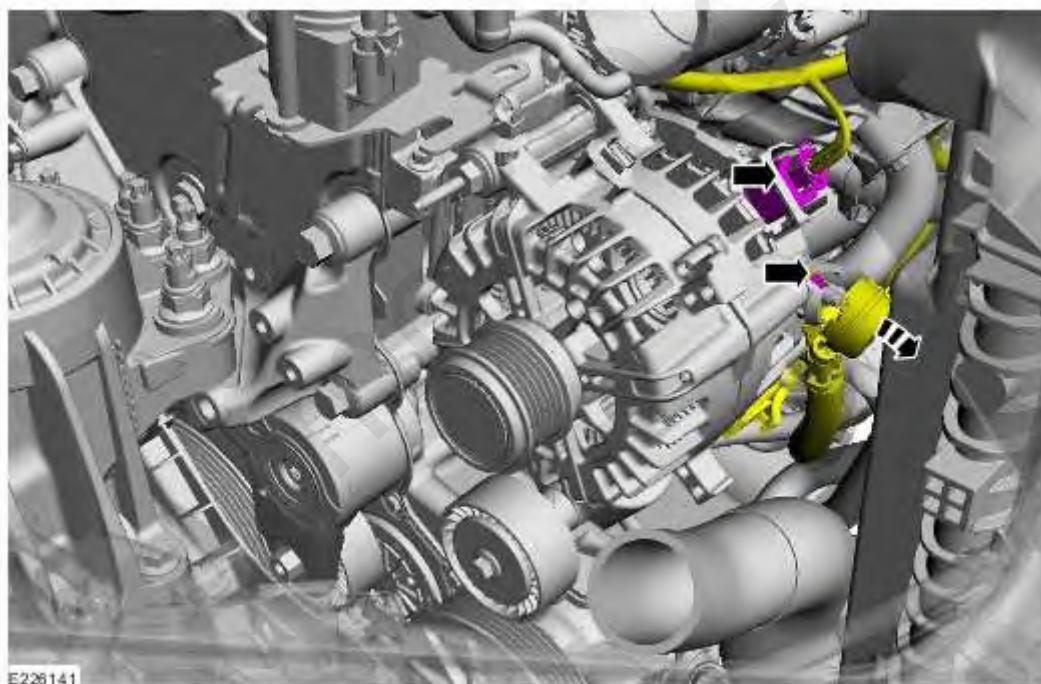


6. Loosen: 5 turn(s)

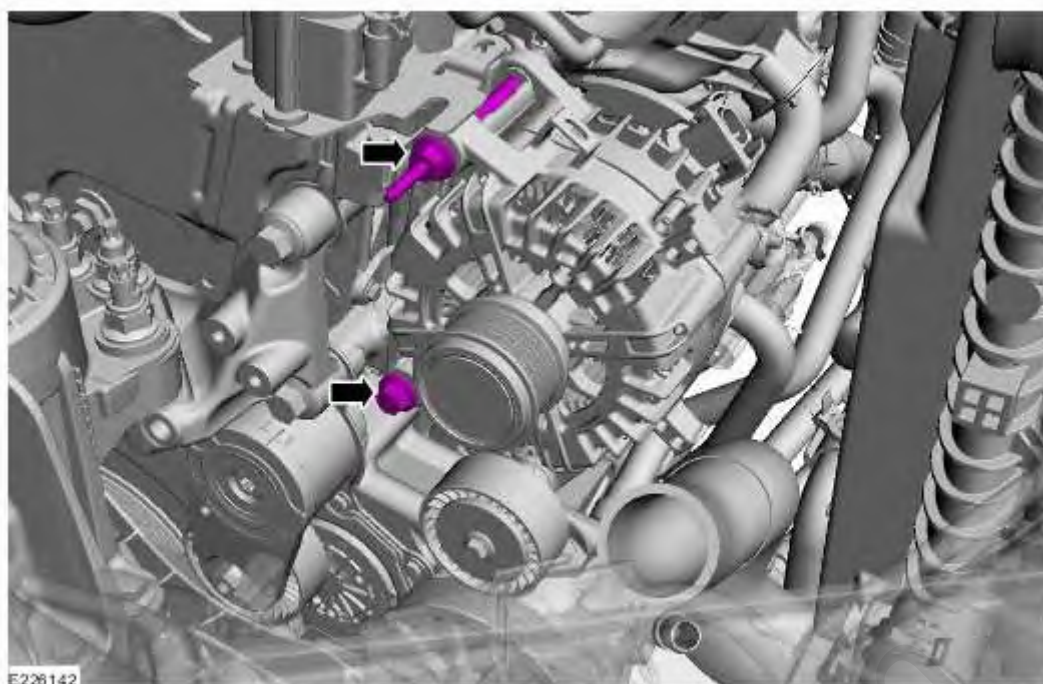

7.

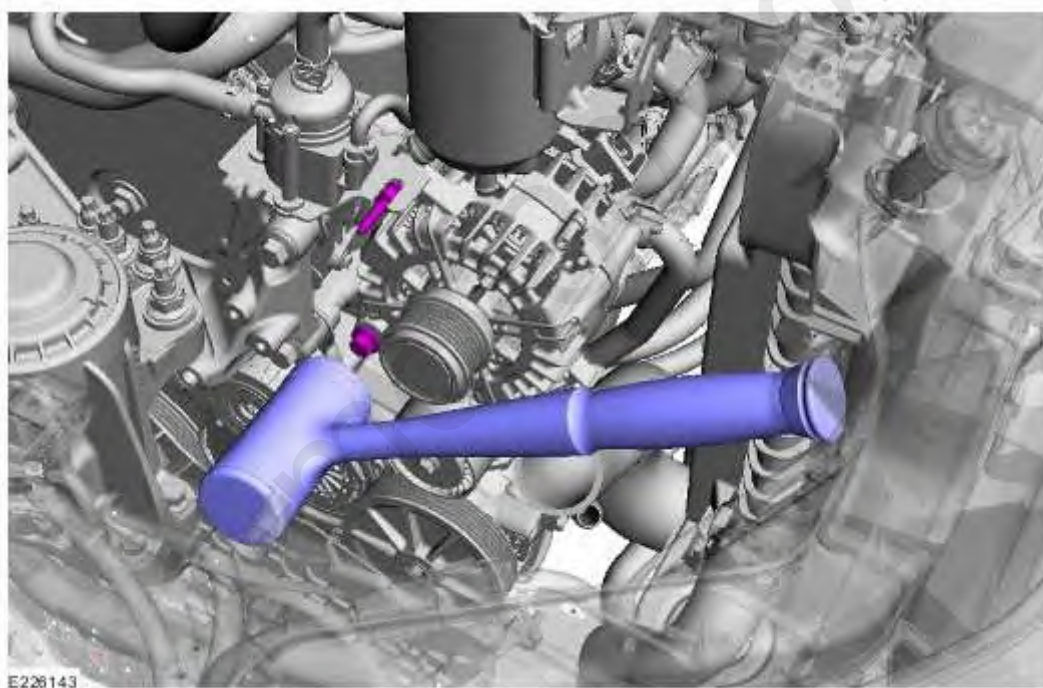

8.

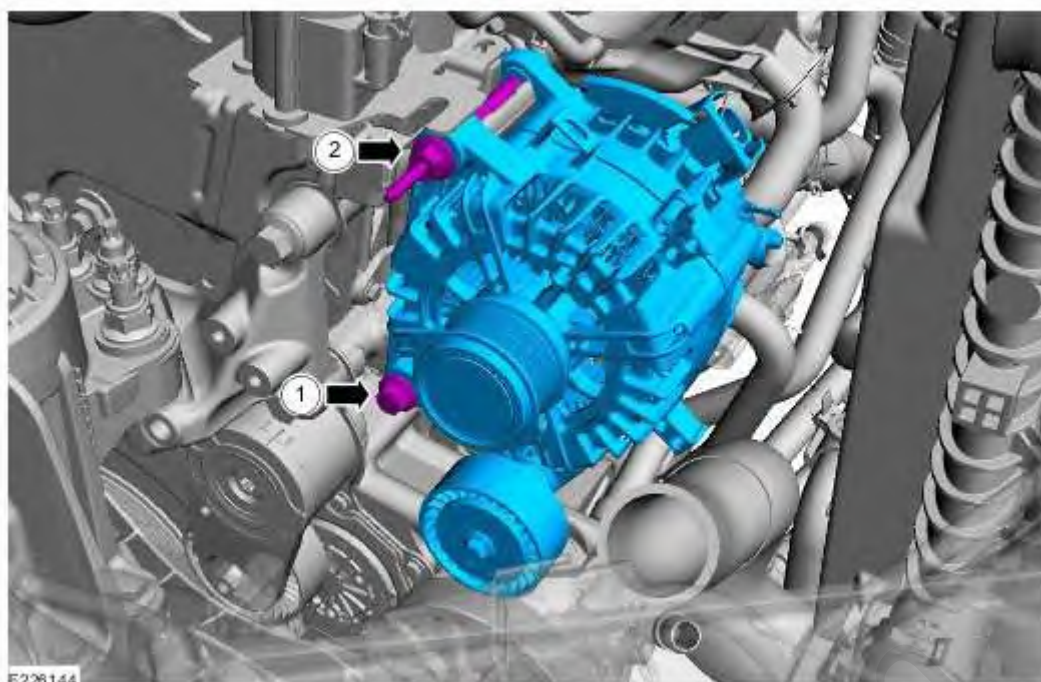

9.



Installation

1. *Torque:* 48 Nm




E226145

2. Torque:


1: 48 Nm

2: 48 Nm

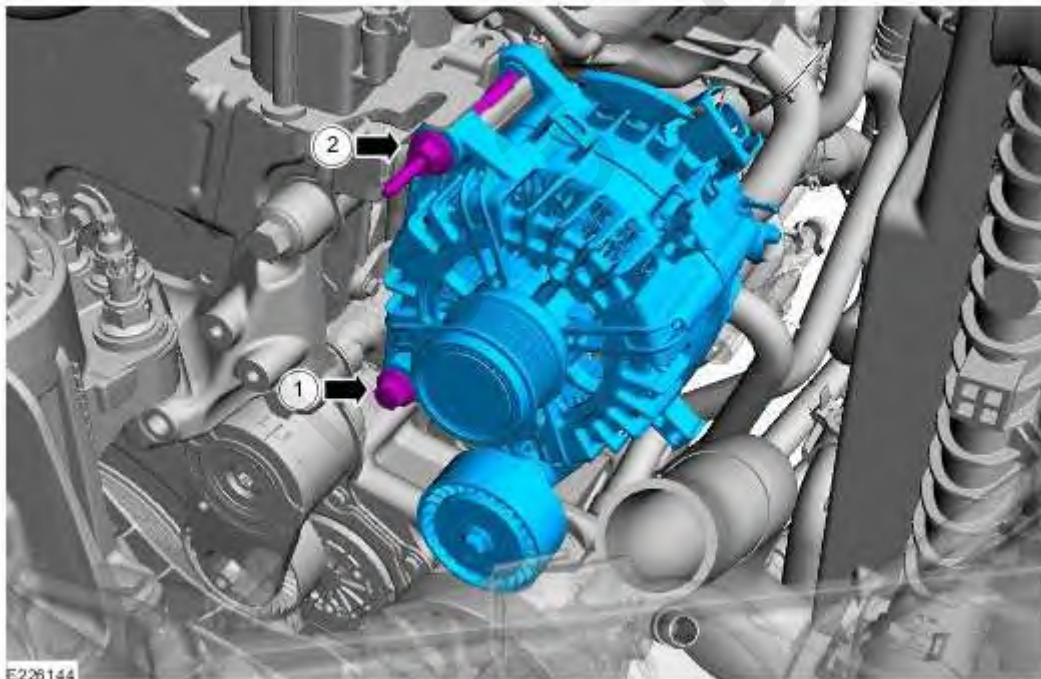


E226144


3. Torque: 15 Nm

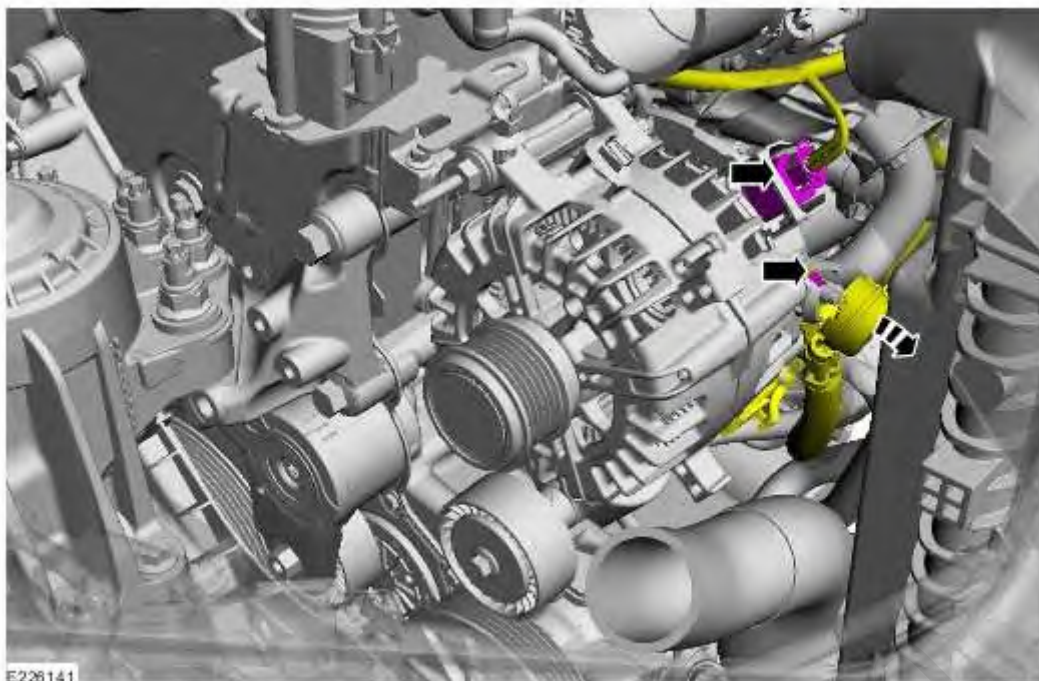


4. Torque: 10 Nm

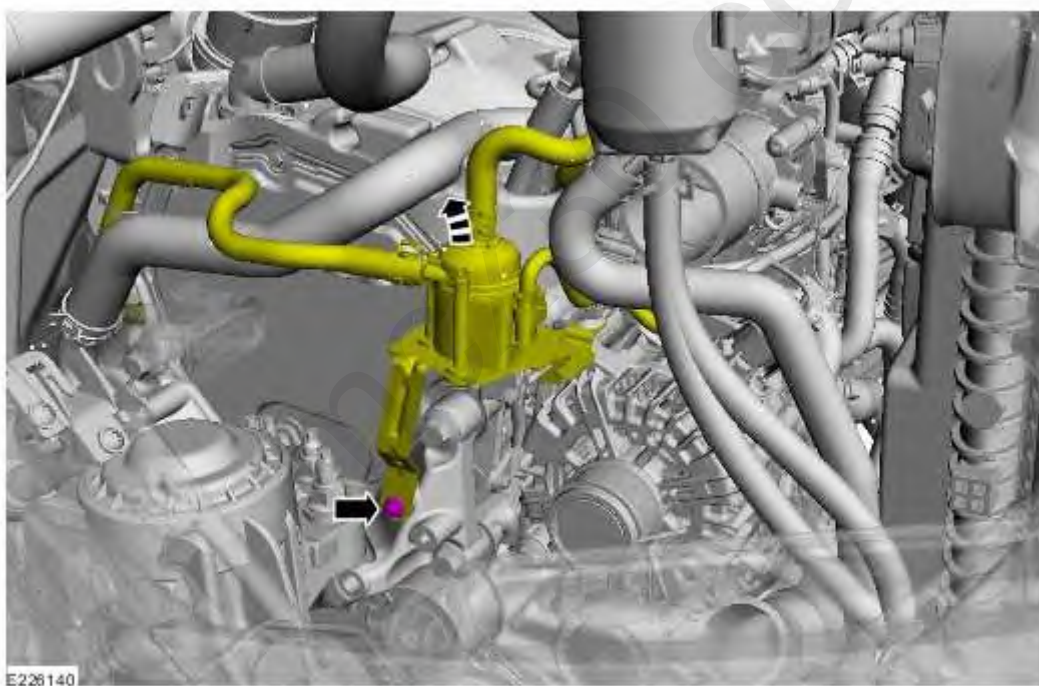

5.

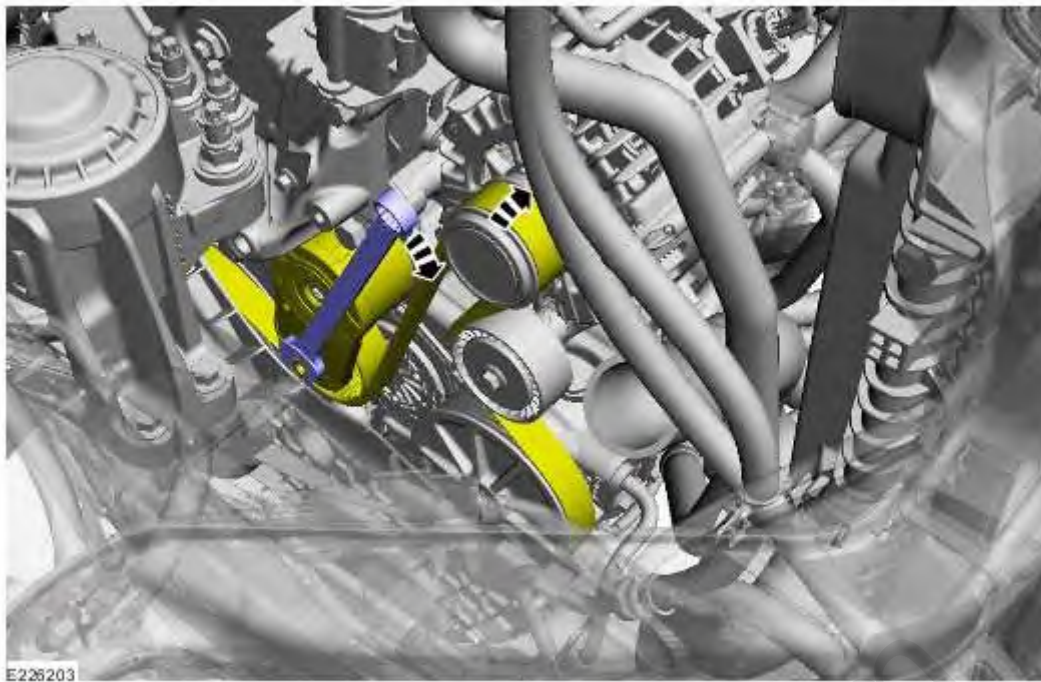

6. Torque: 10 Nm

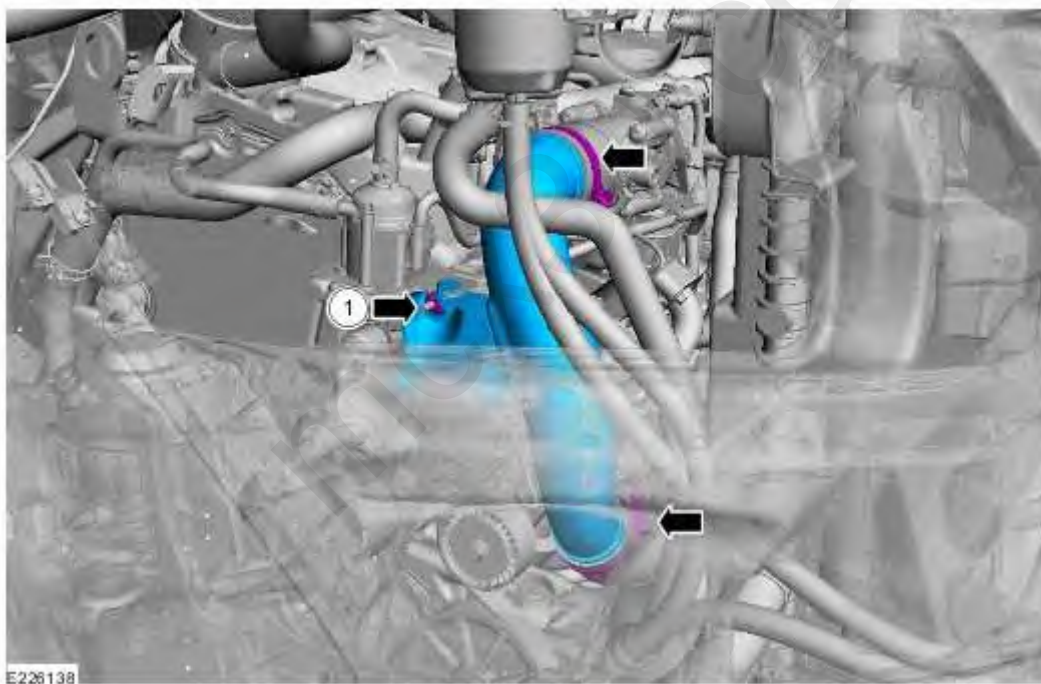

7. Right side.

Refer to: [Headlamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).