


Removal and Installation

General Equipment


Flat Headed Screw Driver

Removal

1.

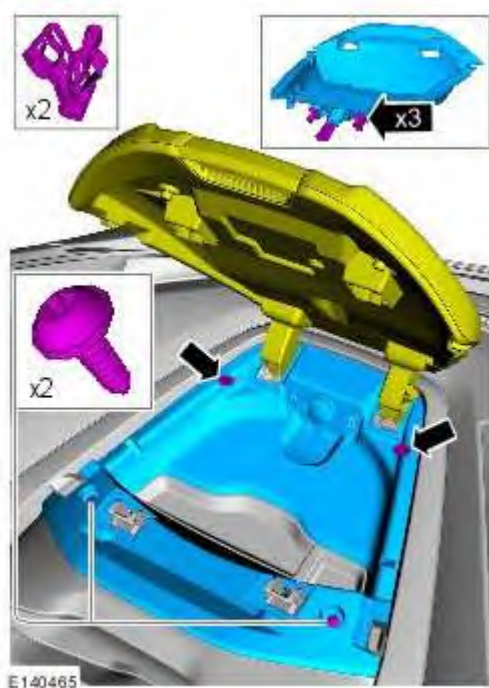

2. Use the General Equipment: [Flat Headed Screw Driver](#)

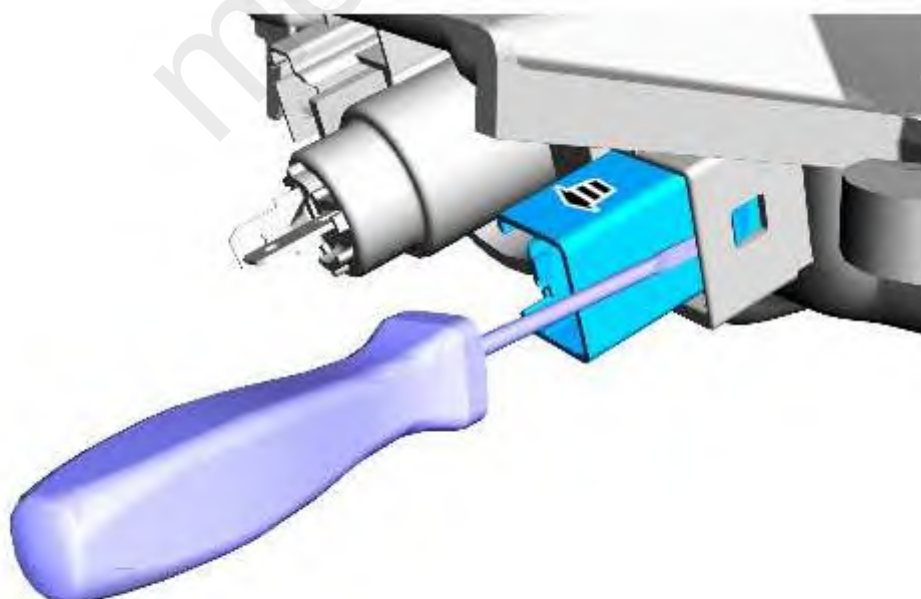

Installation

1. To install, reverse the removal procedure.

mcx30.com