

General Procedures

General Equipment

Headlamp Beam Setter

Adjustment

All vehicles

1. **NOTE:** Make sure that the tire pressures are to specification and that the vehicle is unladen.

Ensure that the adjustment is made with the suspension set up.

2. Place the vehicle on a level surface.

Vehicles with load-leveling shock absorbers

3. Set the suspension at normal ride height. Refer to the Owner's Literature.

All vehicles



4. **NOTE:** Always follow the manufacturer's instructions when handling the equipment.

Set the measuring screen of the beam setting equipment to the correct front fog lamp adjustment setting.

Refer to: [Specifications](#) (417-01 Exterior Lighting, Specifications).

Use the General Equipment: [Headlamp Beam Setter](#)

5. Switch on the front fog lamps.
6. Adjust the fog lamp so that the cut-off line touches the horizontal line.

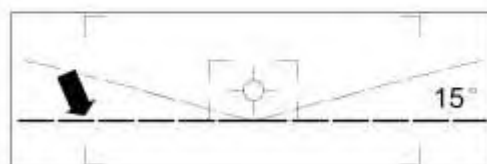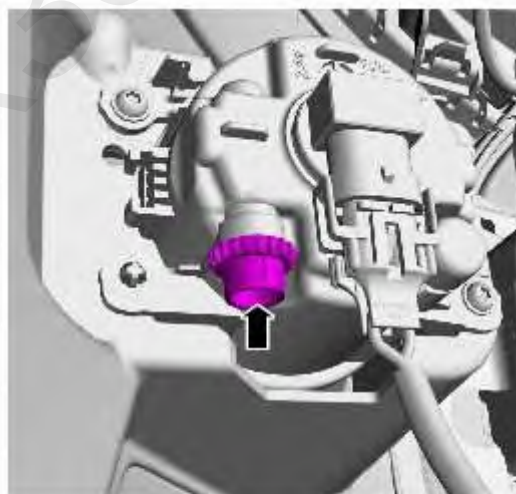

E168435