


Removal and Installation

Removal

1.  NOTICE: Take extra care when removing the headlamp assembly as the fixings are easily damaged.

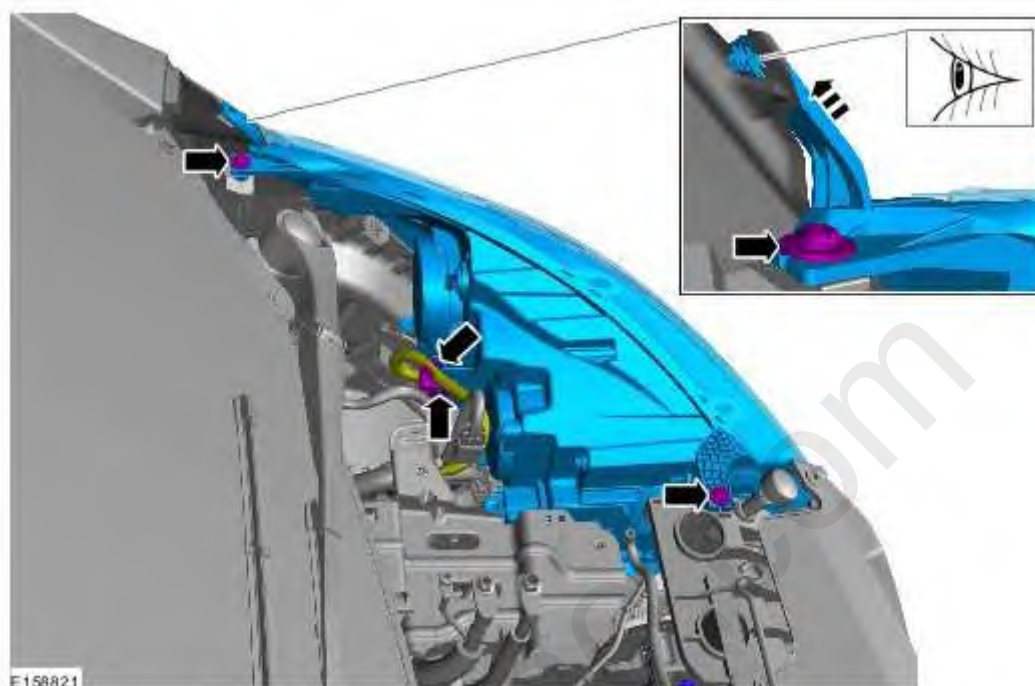

Installation

1. To install, reverse the removal procedure.
2. Refer to: [Headlamp Adjustment](#) (417-01 Exterior Lighting, General Procedures).