

Removal and Installation

General Equipment

Flat Headed Screw Driver

Removal

1.




2.



3. Use the General Equipment: [Flat Headed Screw Driver](#)



4.

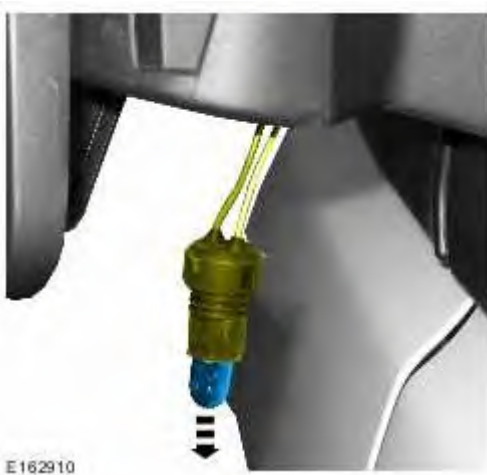

Installation

1. To install, reverse the removal procedure.