



Removal and Installation

Removal

1. Refer to: [B-Pillar Trim Panel - Bus](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
Refer to: [B-Pillar Trim Panel - Van](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Refer to: [Front Seat](#) (501-10A Front Seats, Removal and Installation).
Refer to: [Front Bench Seat](#) (501-10A Front Seats, Removal and Installation).
- 3.

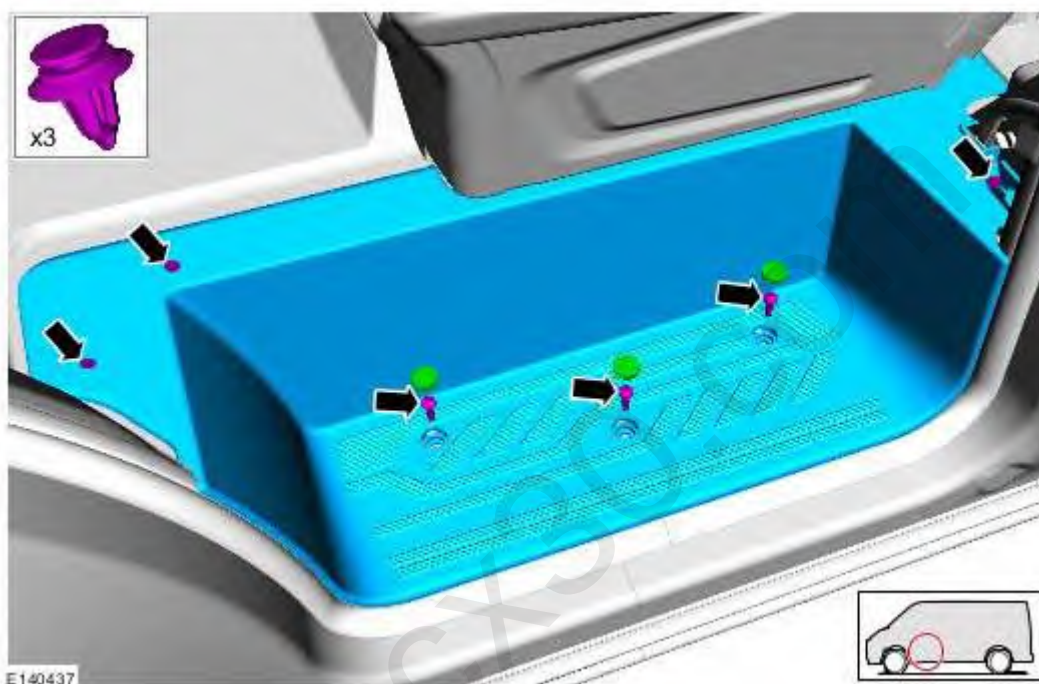

4. Torque: 10.5 Nm

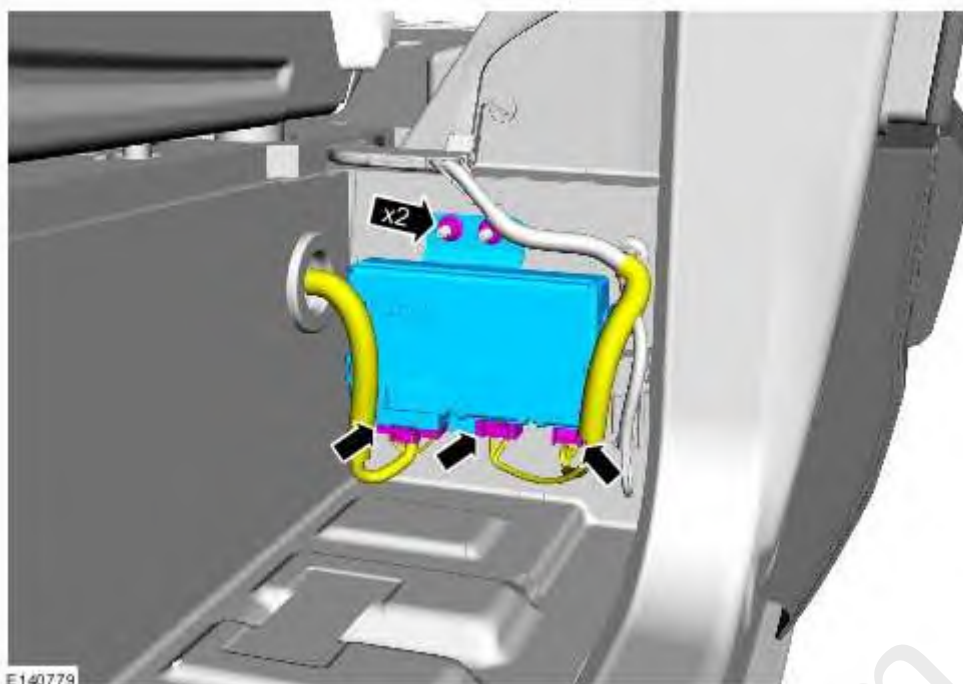

Installation

1. To install, reverse the removal procedure.