


Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Instrument Panel](#) (501-12 Instrument Panel and Console, Removal and Installation).
2. Torque: 12 Nm

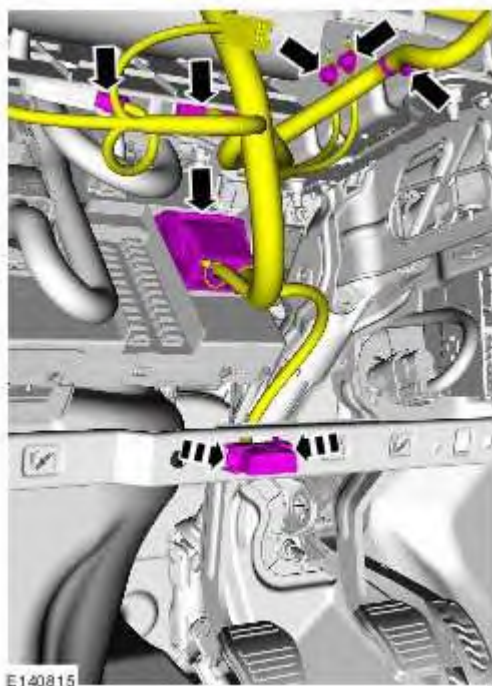


3.




4. Torque: 12 Nm




5. Torque: 12 Nm

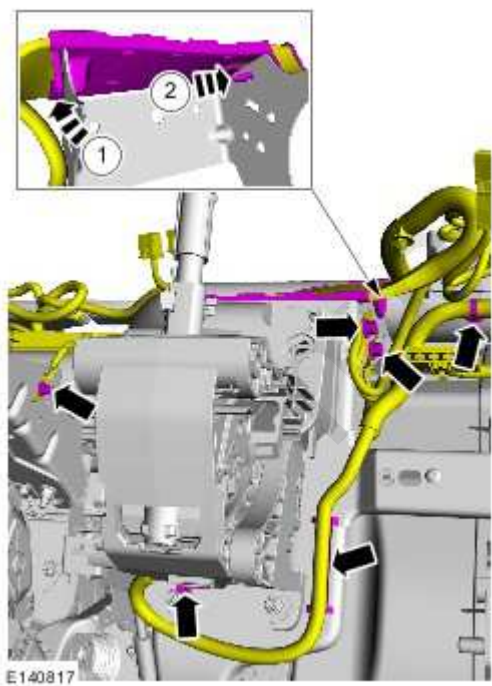


6.

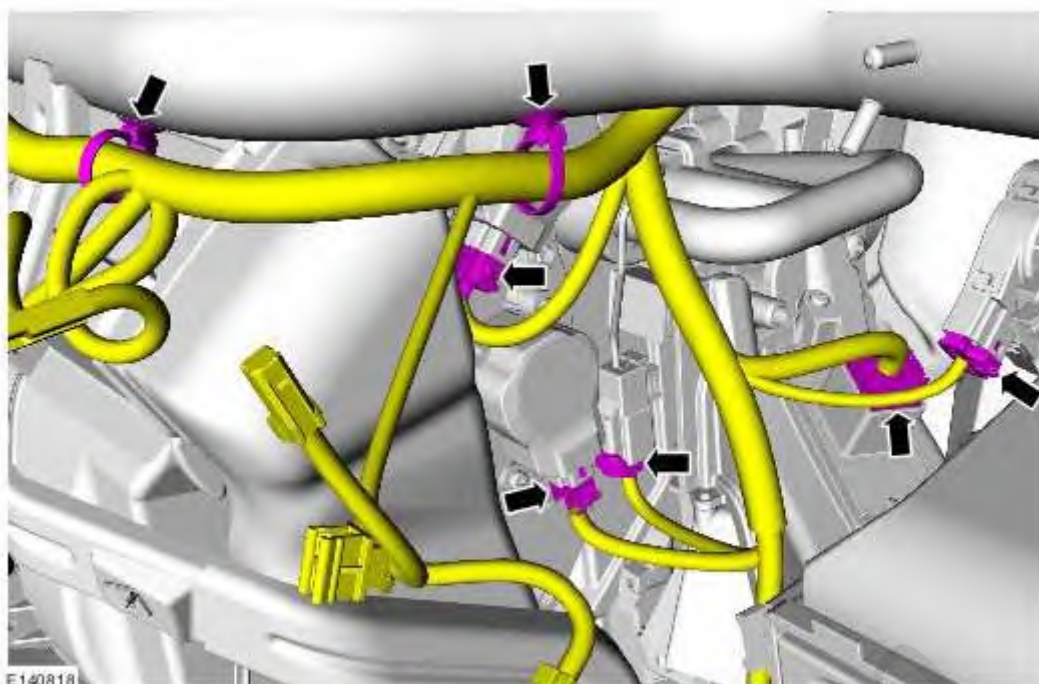


7.

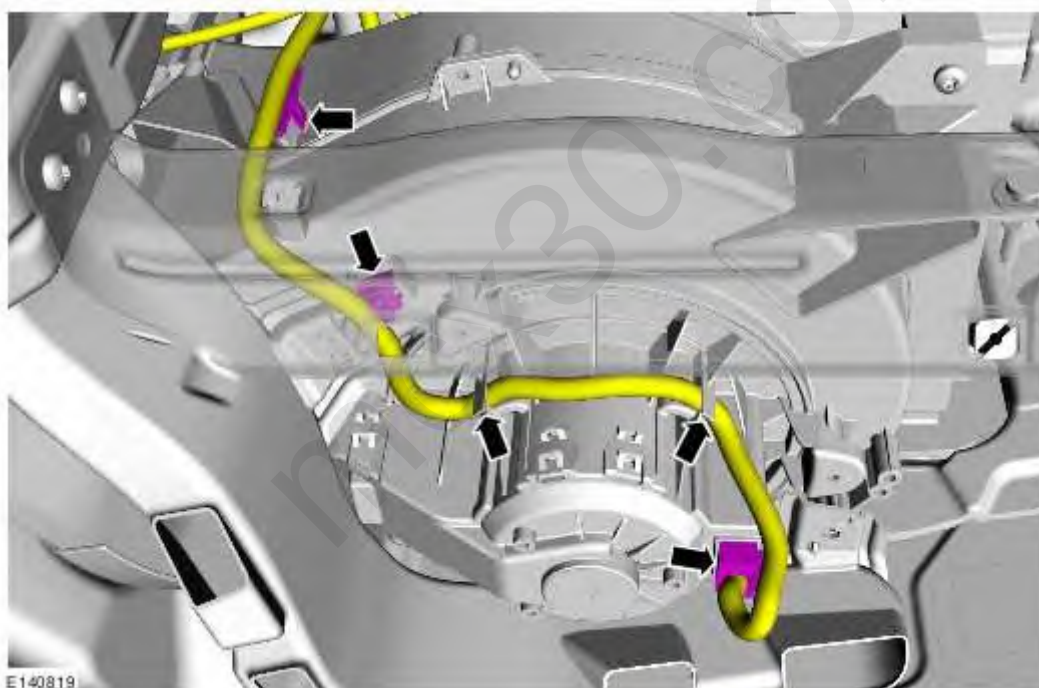


8. Torque: 12 Nm

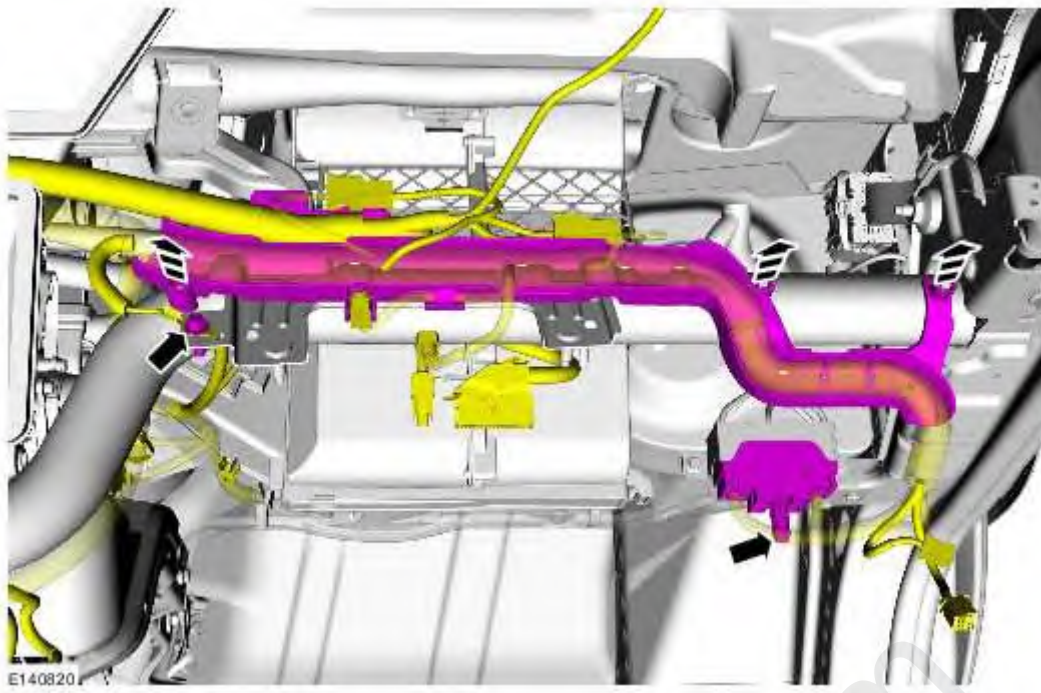

9.

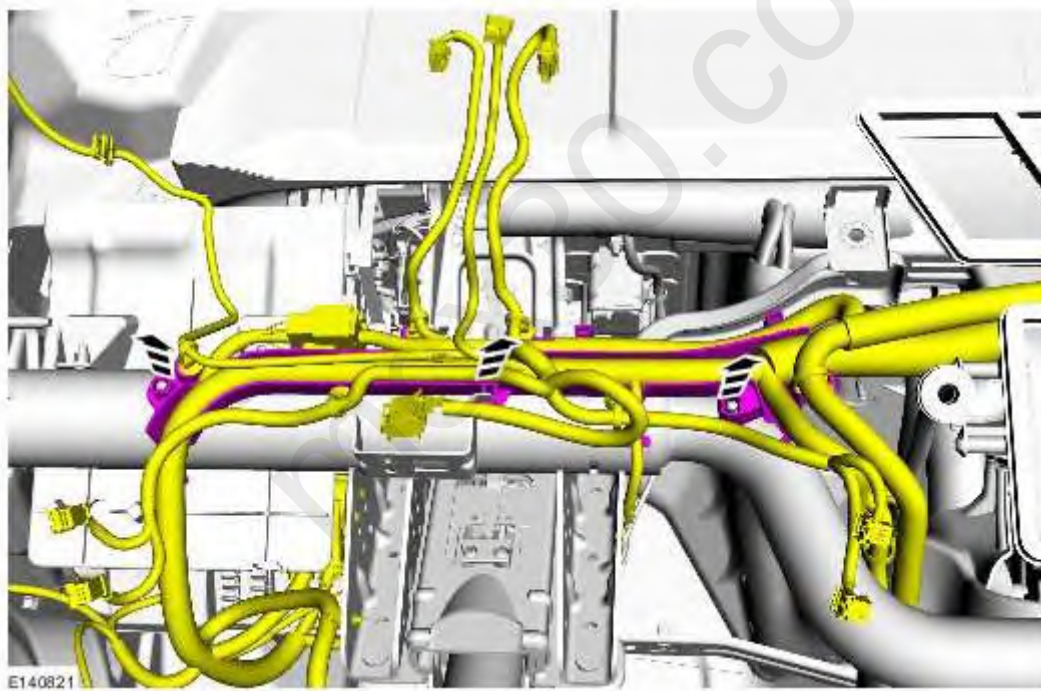

10.

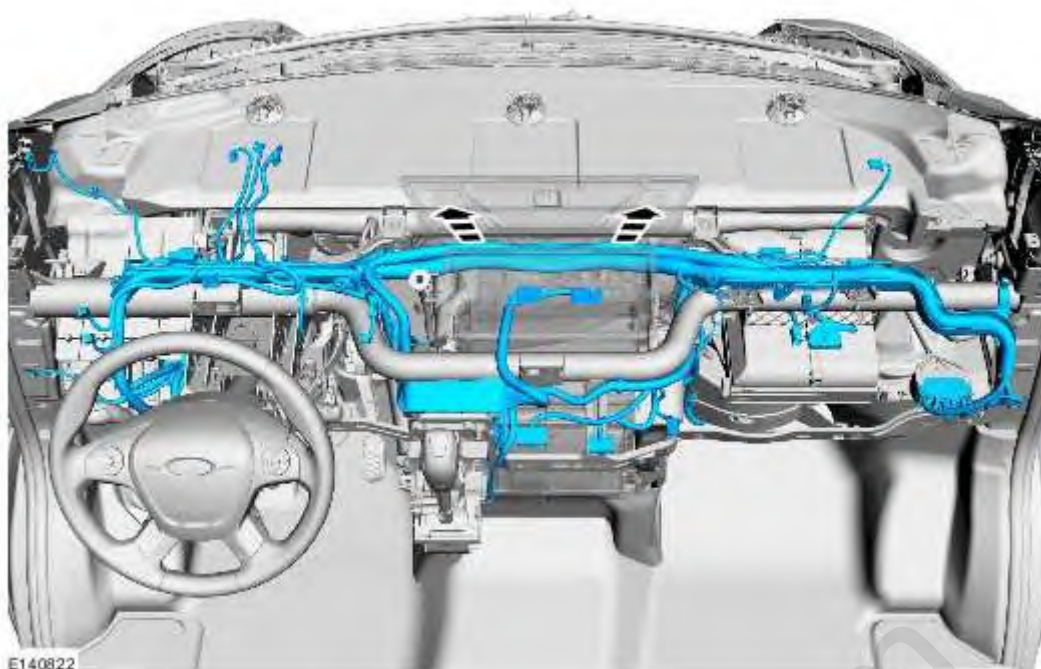

Installation

1. To install, reverse the removal procedure.