

Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
2. Left-hand side only.

Refer to: [Headlamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).


- 3.

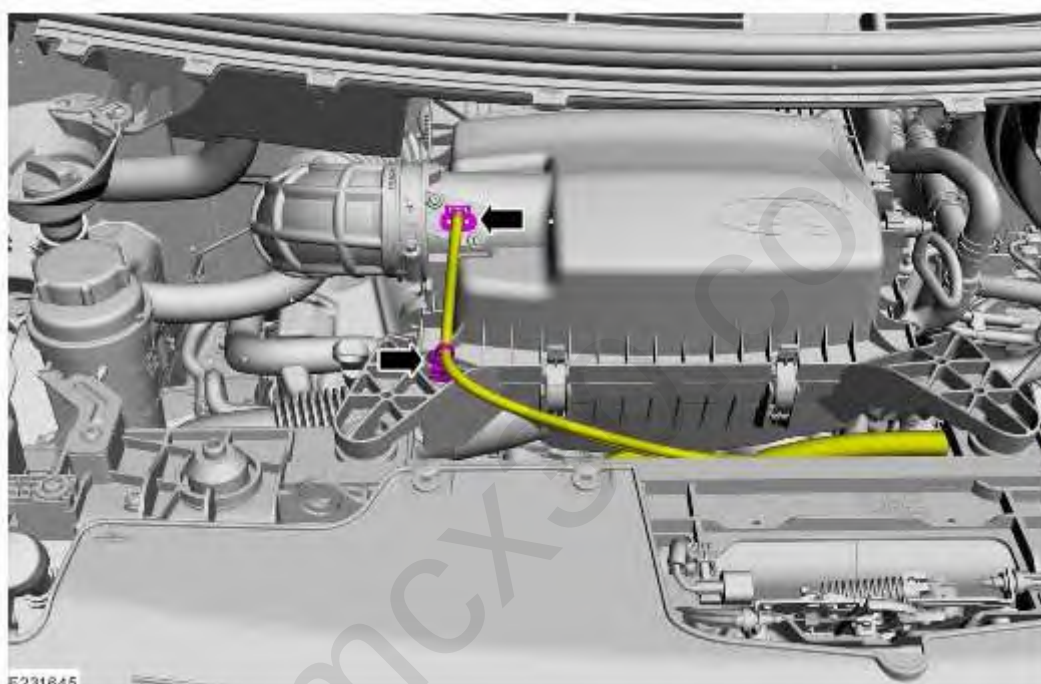


4. If equipped.

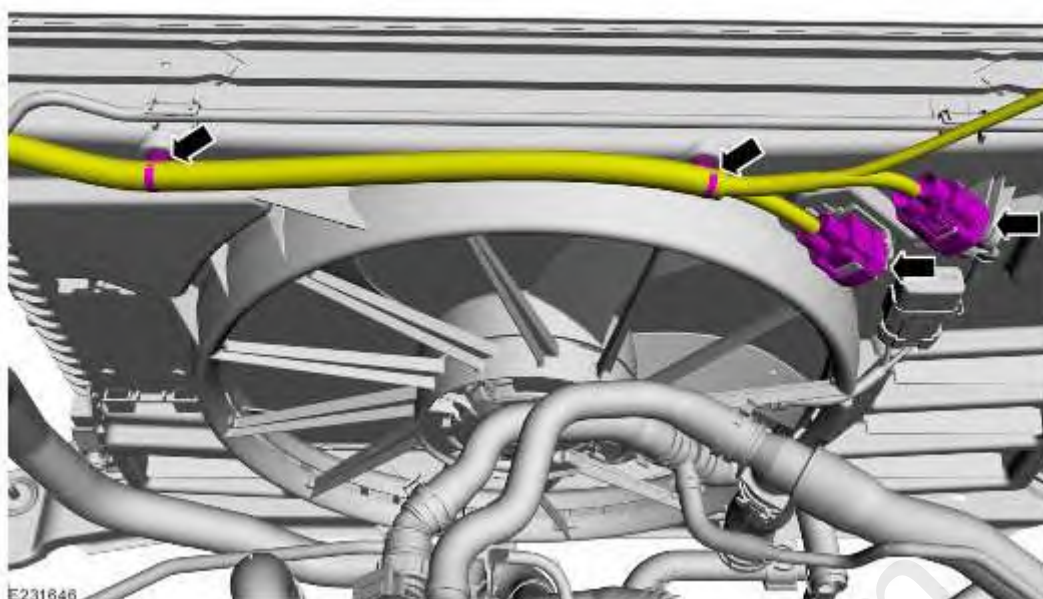


5. If equipped.

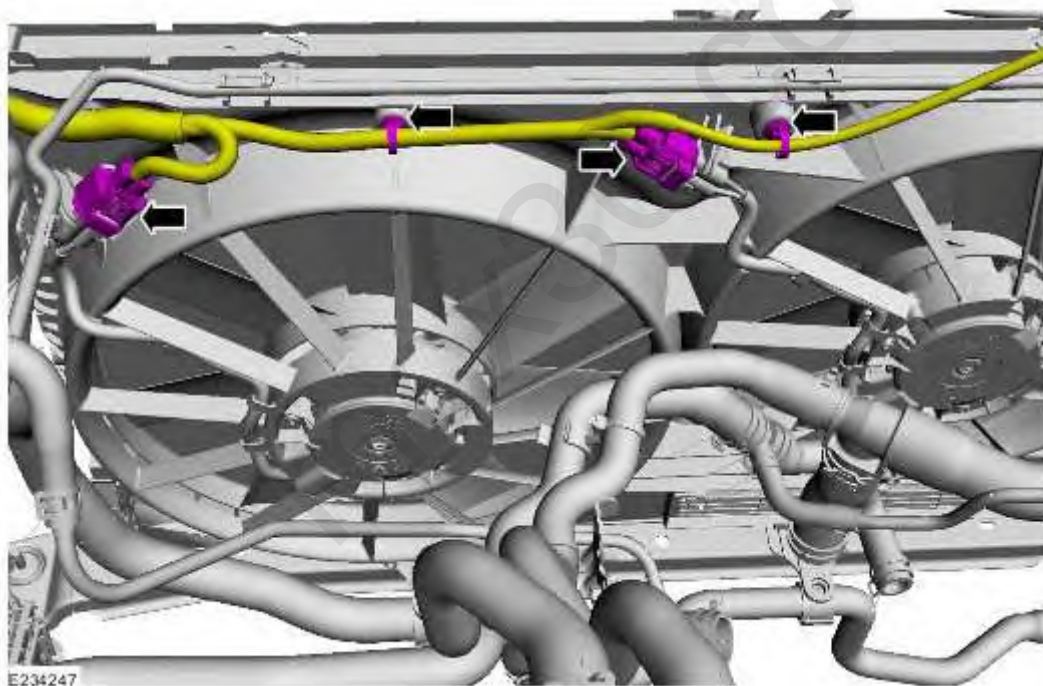

6.

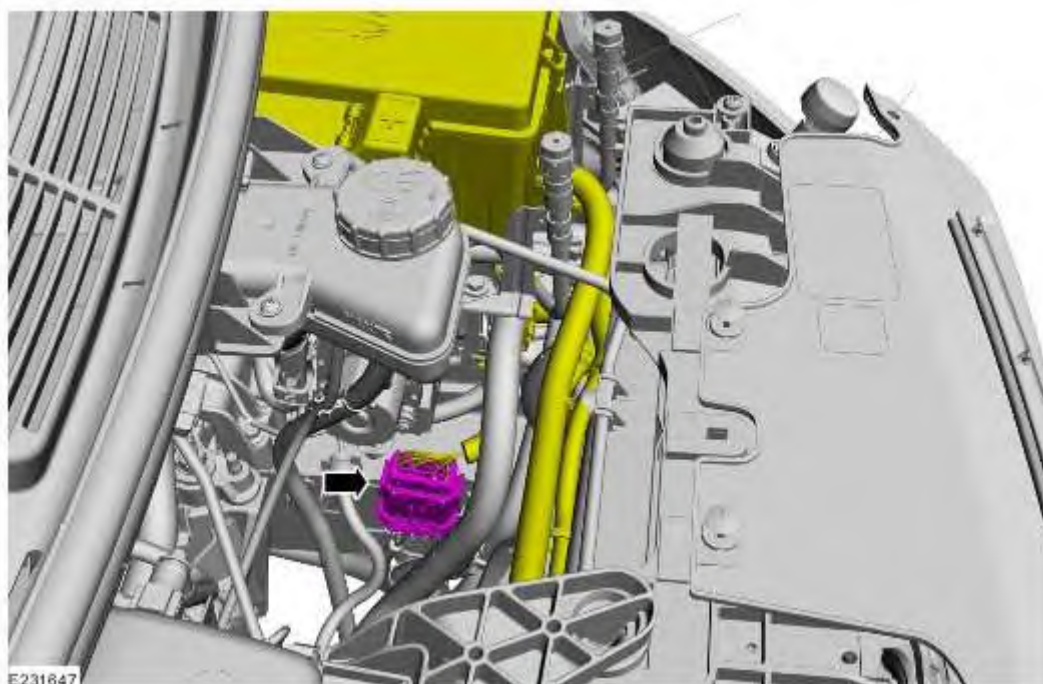

7.

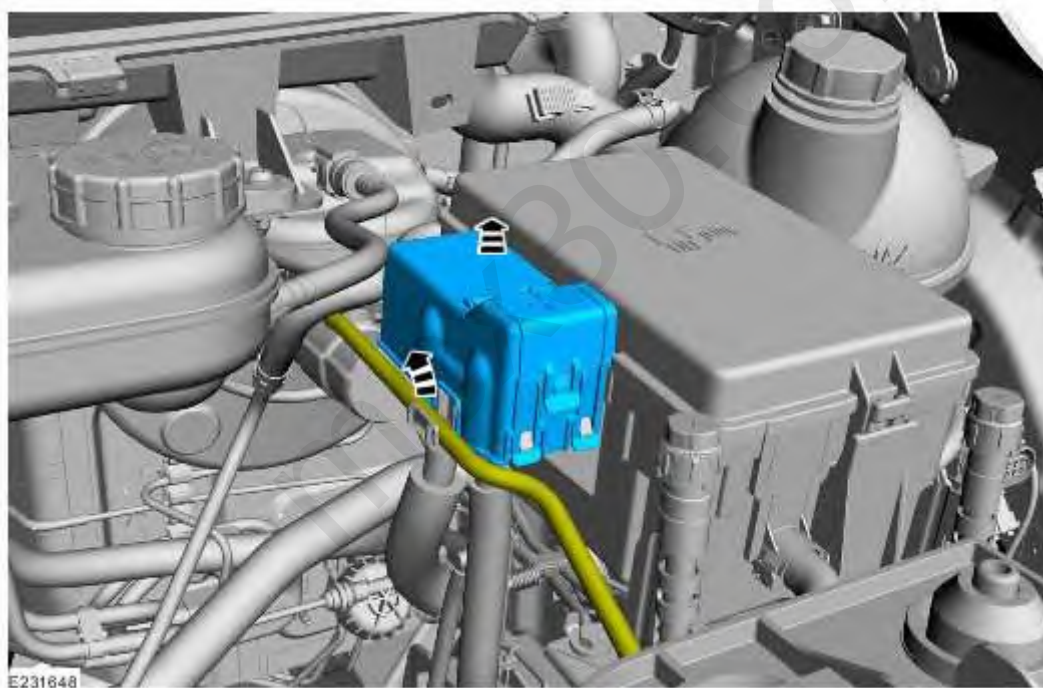


8. Torque:


1: 12 Nm

2: 12 Nm


3: 12 Nm

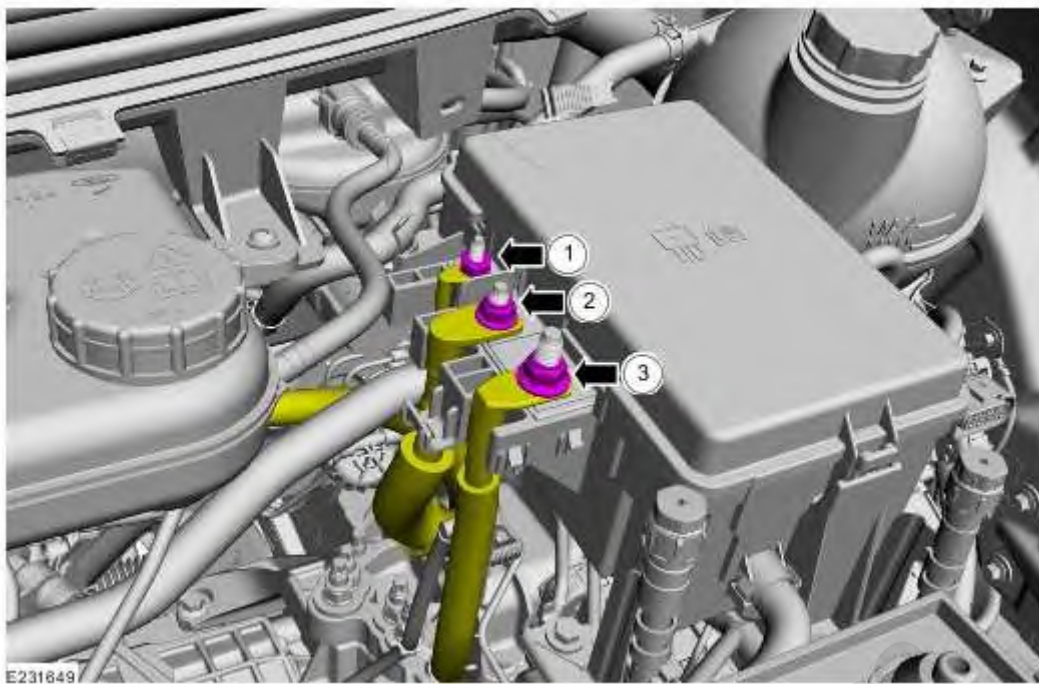


9. Torque: 6 Nm

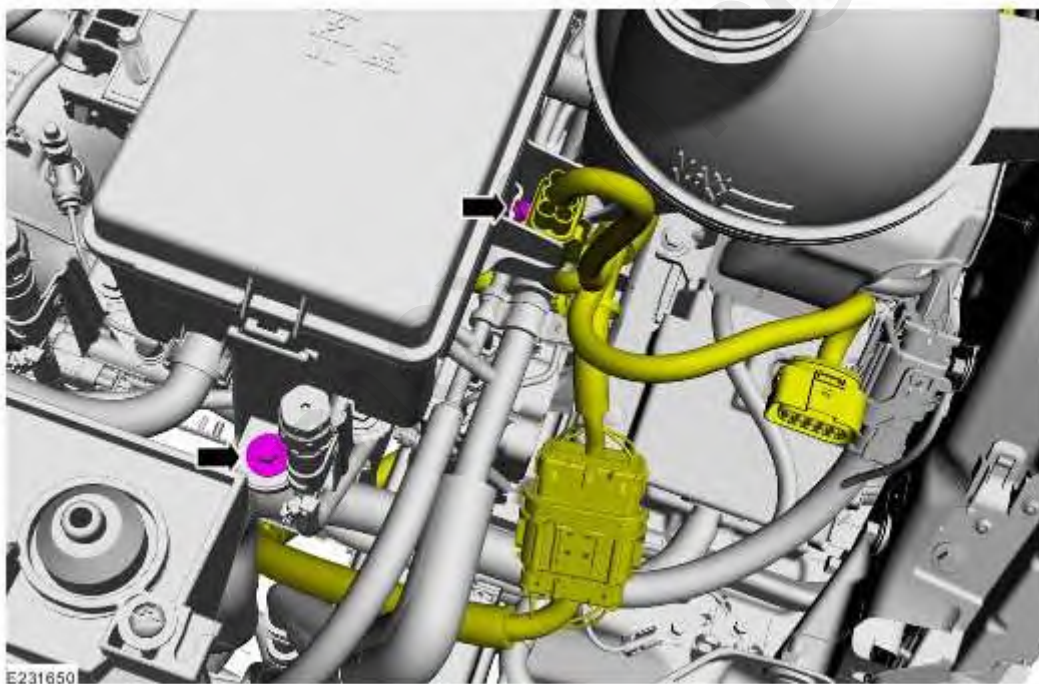


10. Torque: 10 Nm

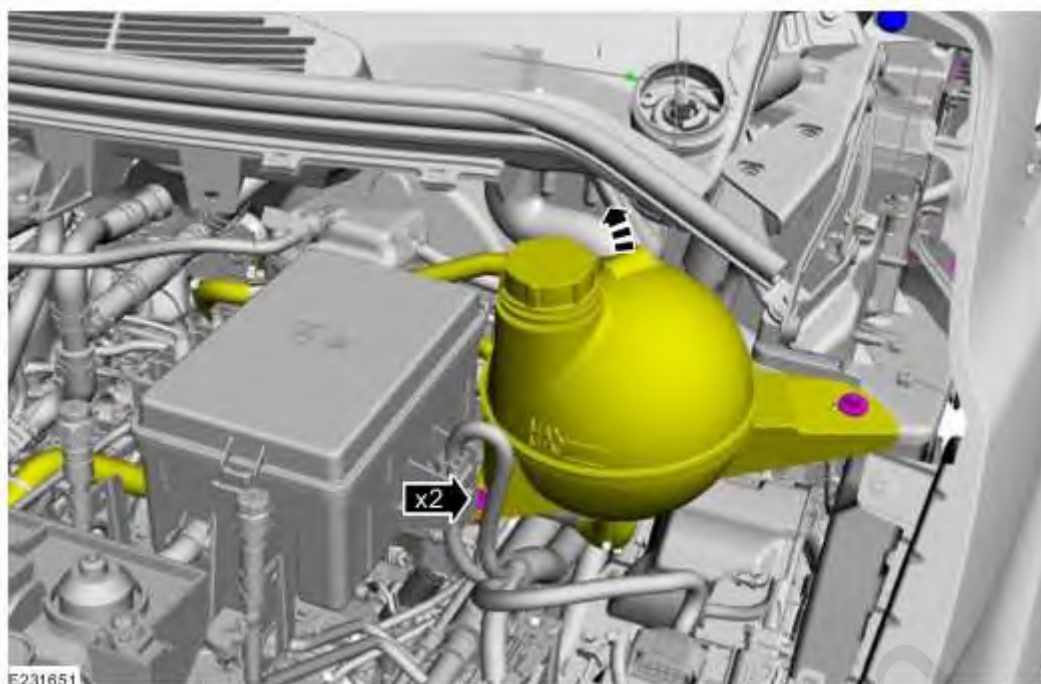

11. Torque: 8 Nm

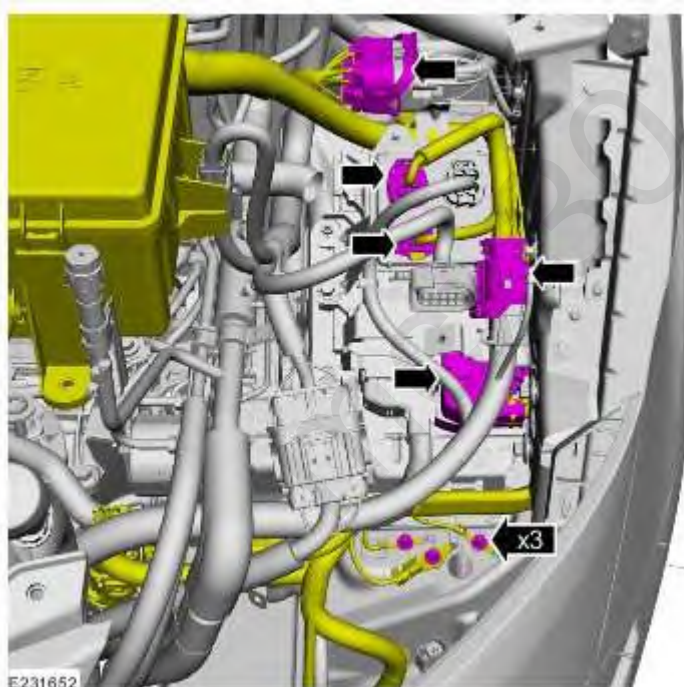

12. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

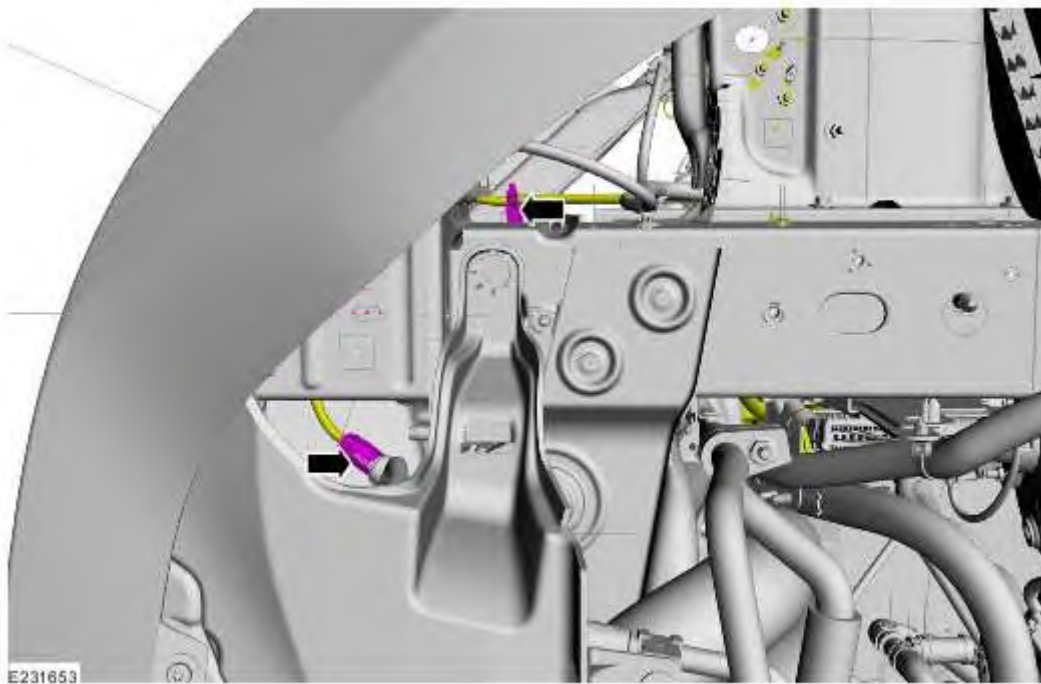

13.



Installation

1. To install, reverse the removal procedure.