

Removal and Installation

General Equipment


3.5 mm Drill Bit

Center Punch


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
2. Refer to: [Air Cleaner](#) (303-12A Intake Air Distribution and Filtering, Removal and Installation).
- 3.

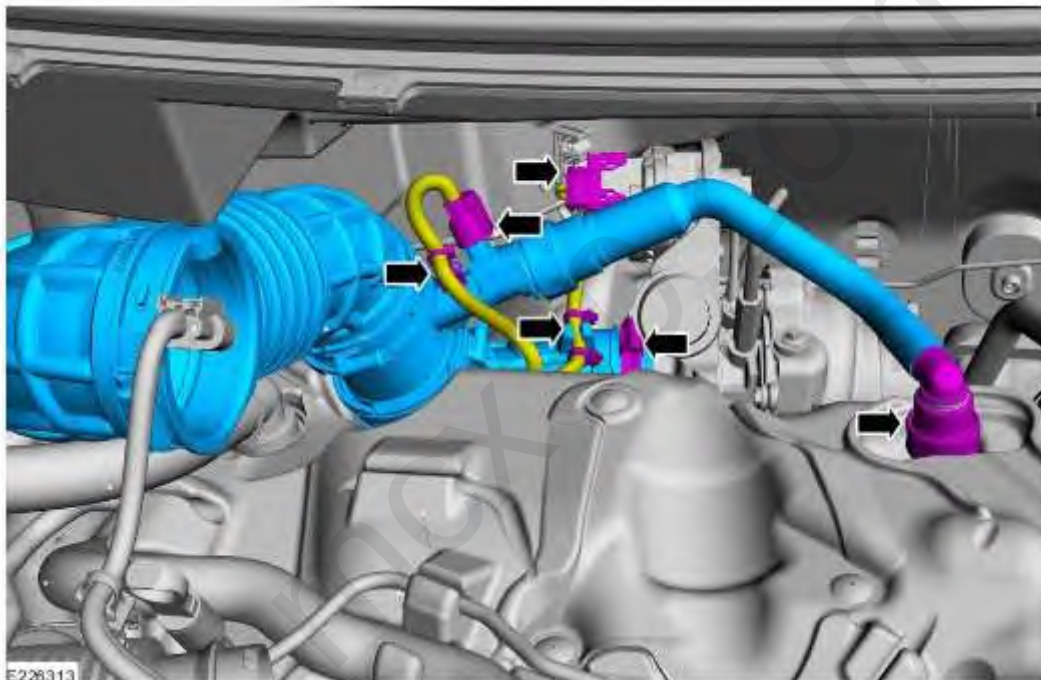


4. **Torque:** 10 Nm

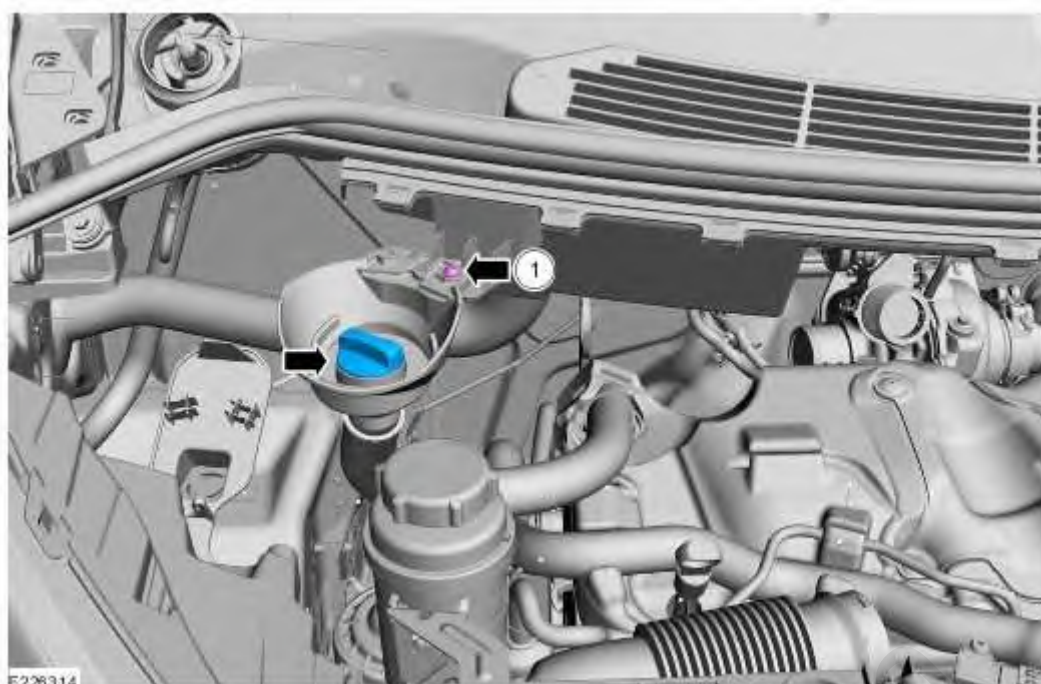


5.



6.

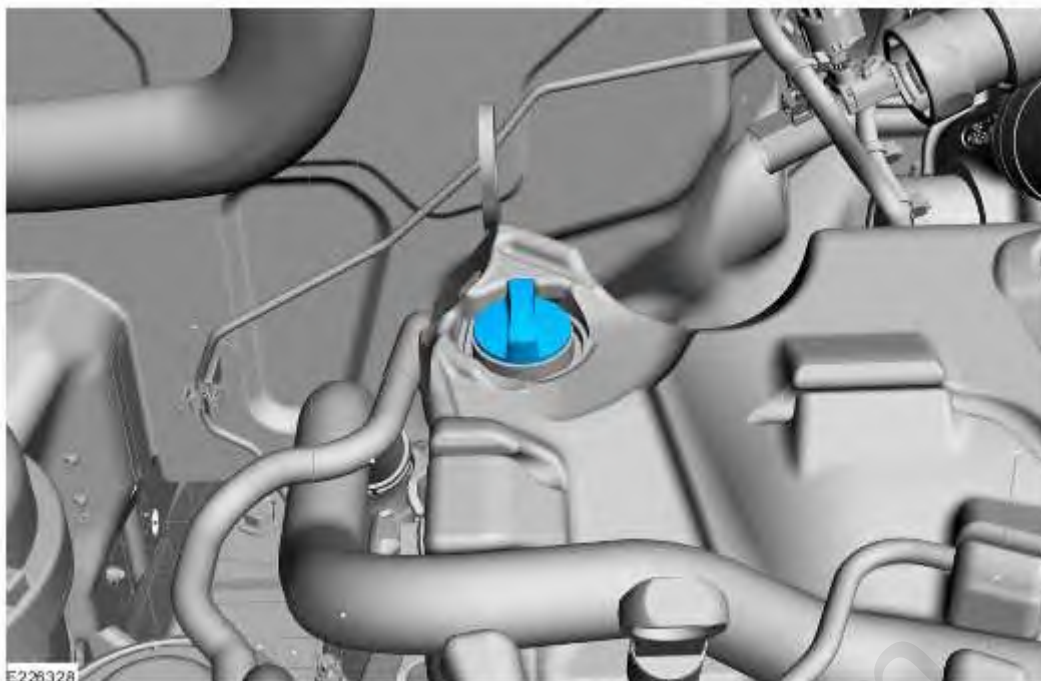


7. Torque: 10 Nm

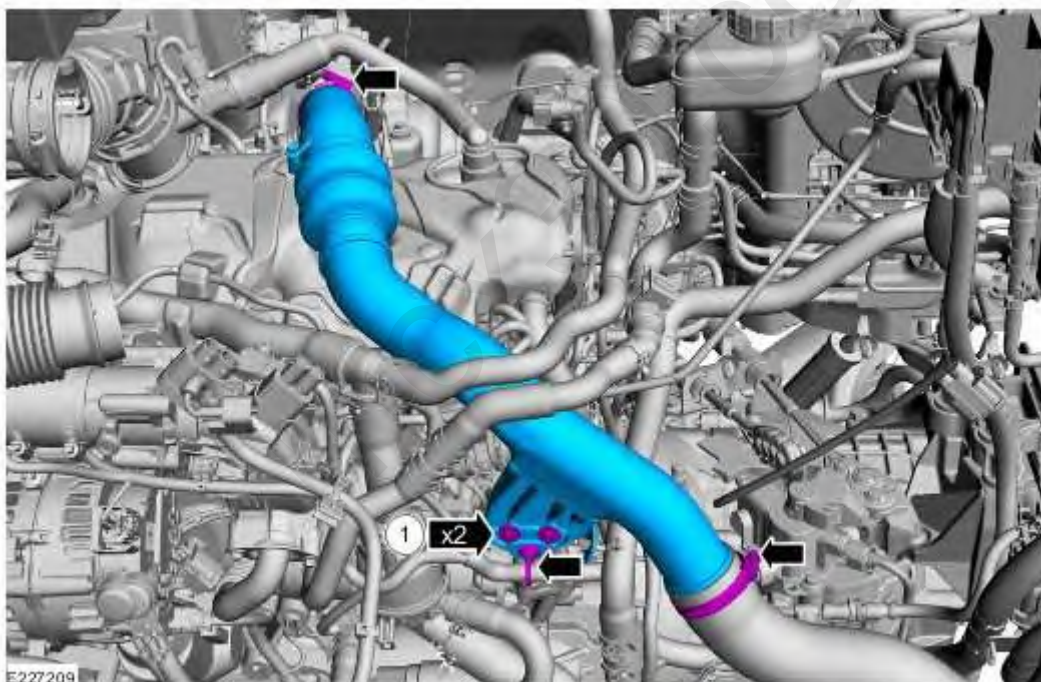

RHD FWD

8.

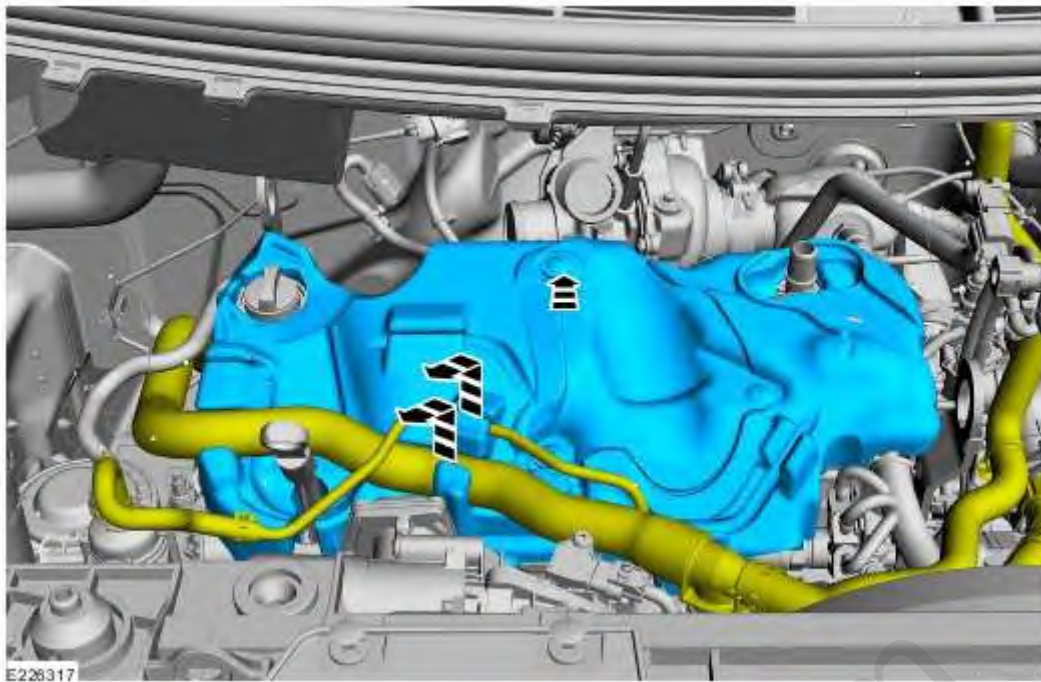


All vehicles


9. Left-hand side only.

Refer to: [Headlamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).

10.

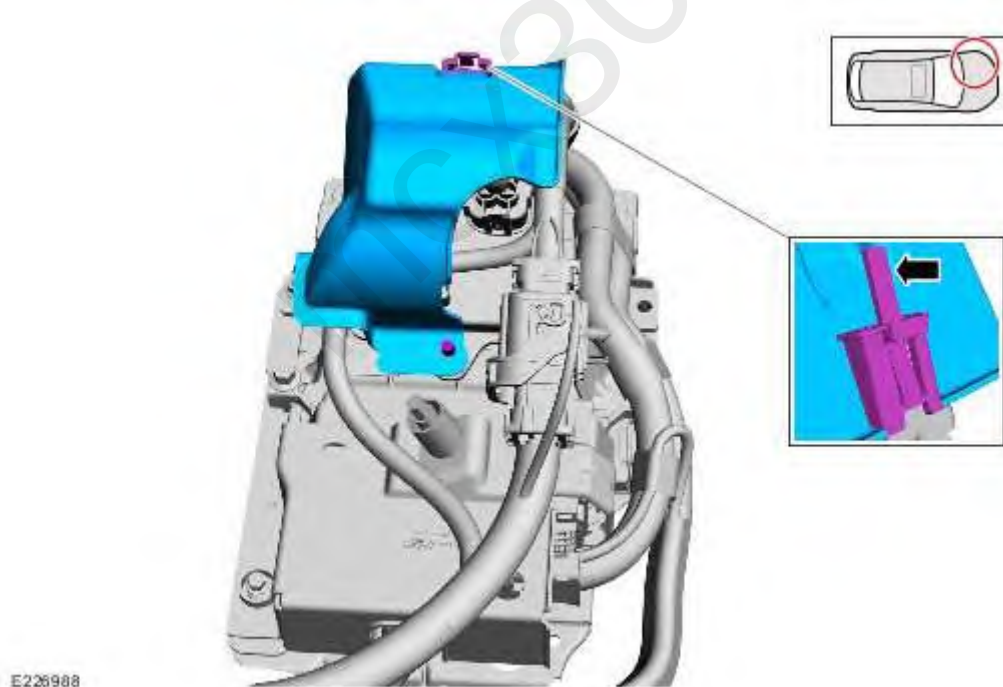


11. *Torque:* 8 Nm

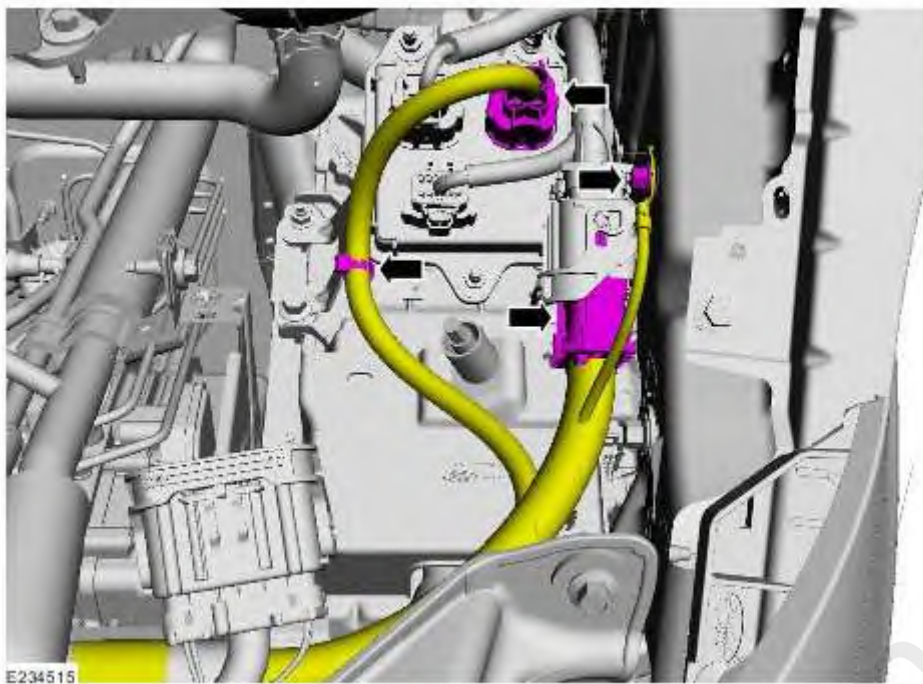


12. If equipped.


Use the General Equipments: [Center Punch](#), [3.5 mm Drill Bit](#)

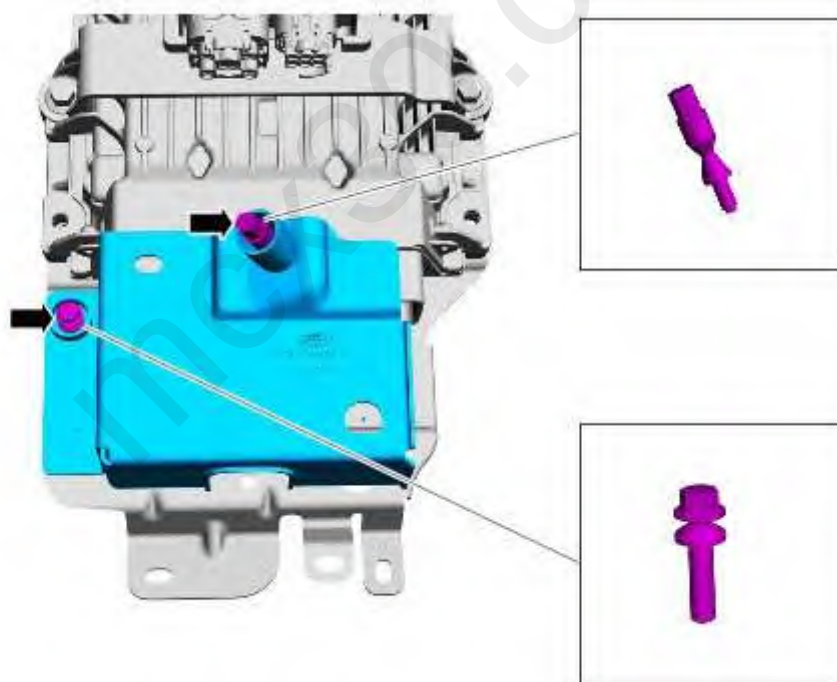


13.

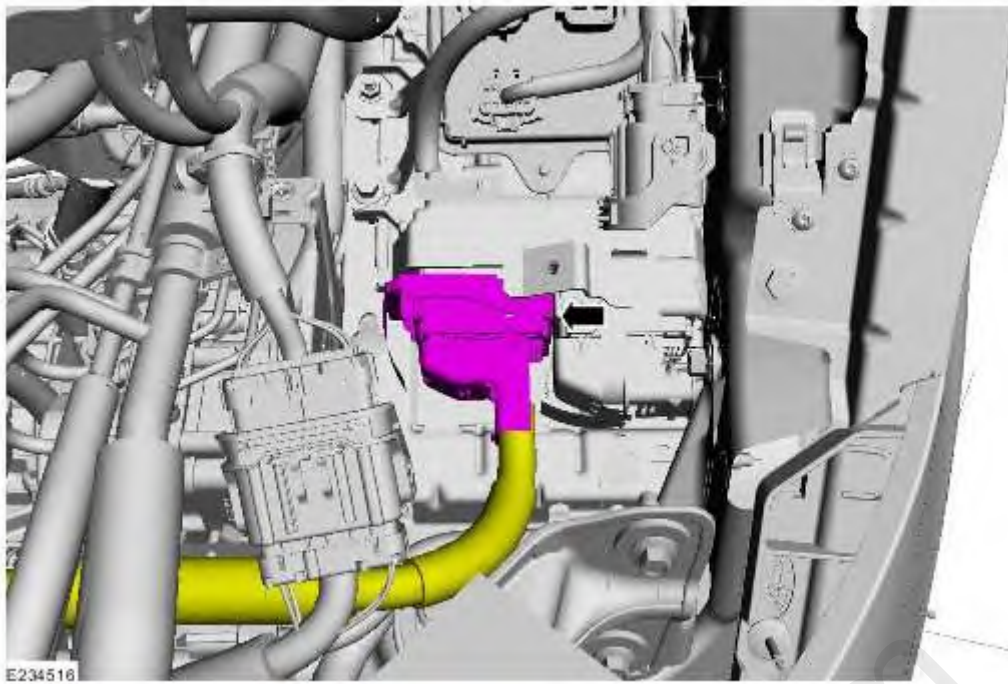

14.

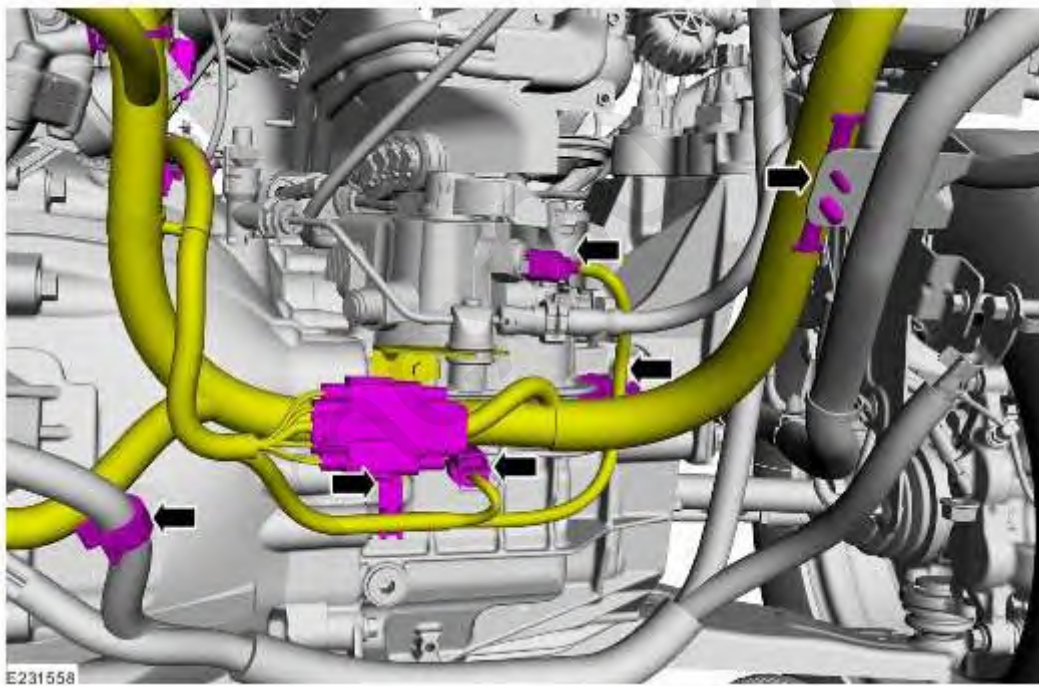


15.

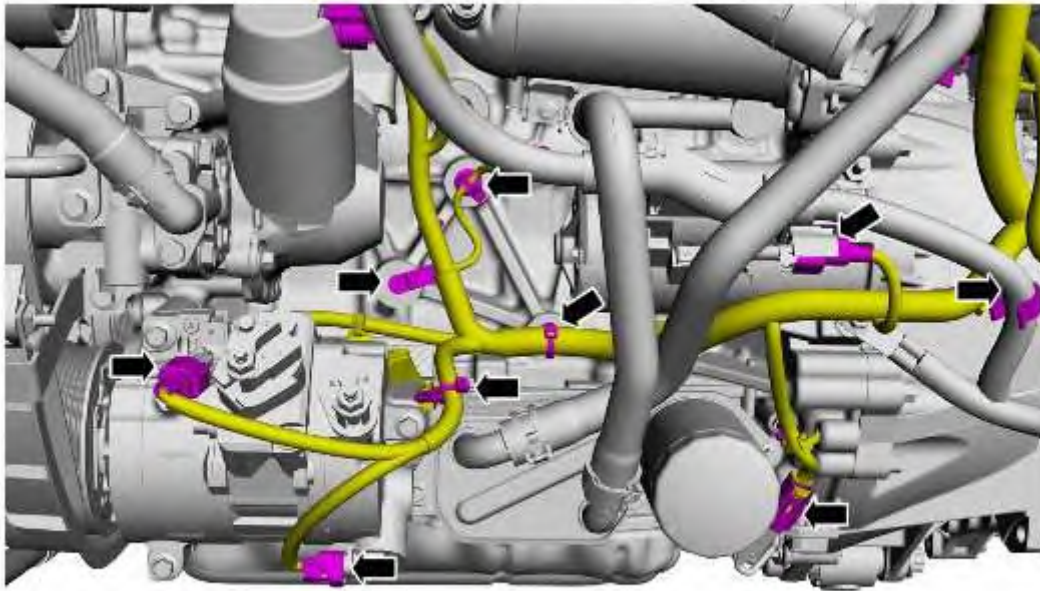


E231559

16.

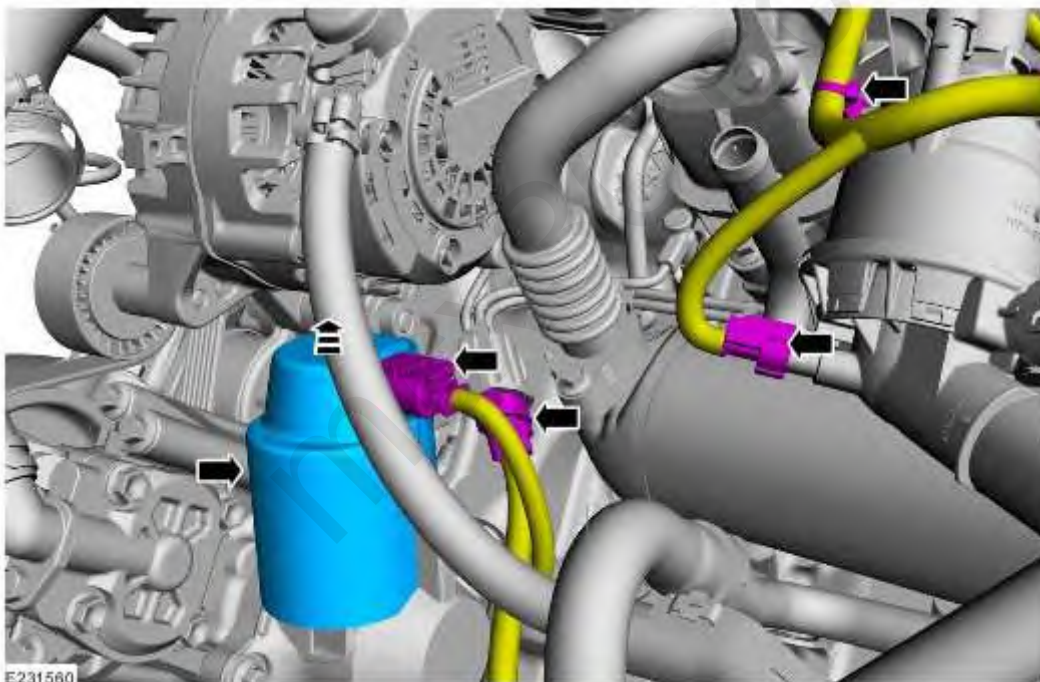


E231560


17.

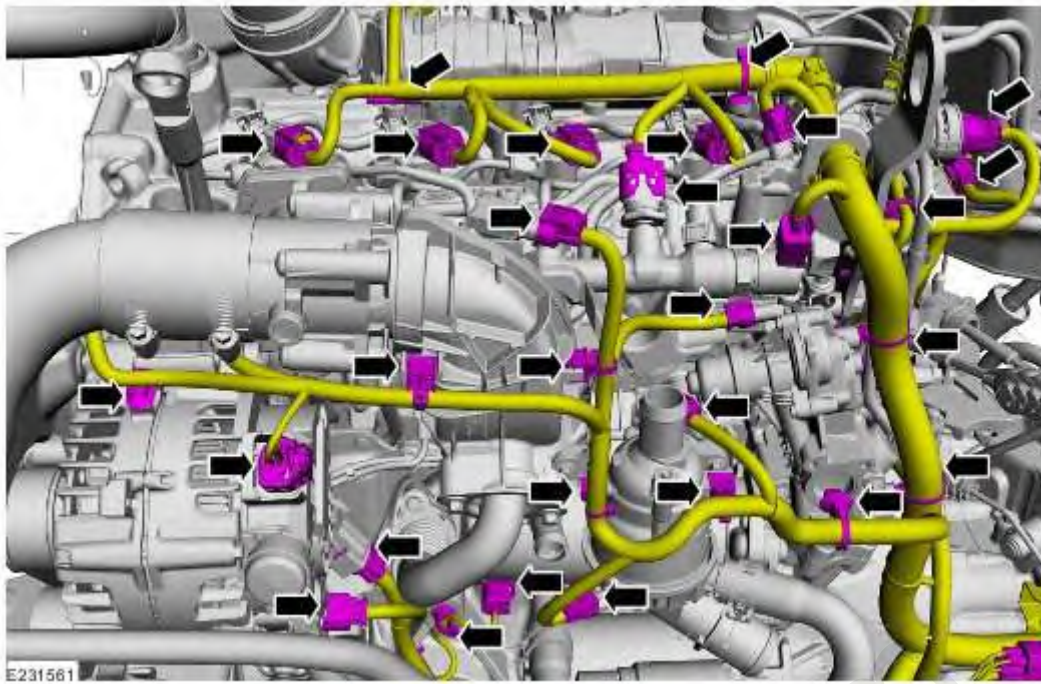


18.

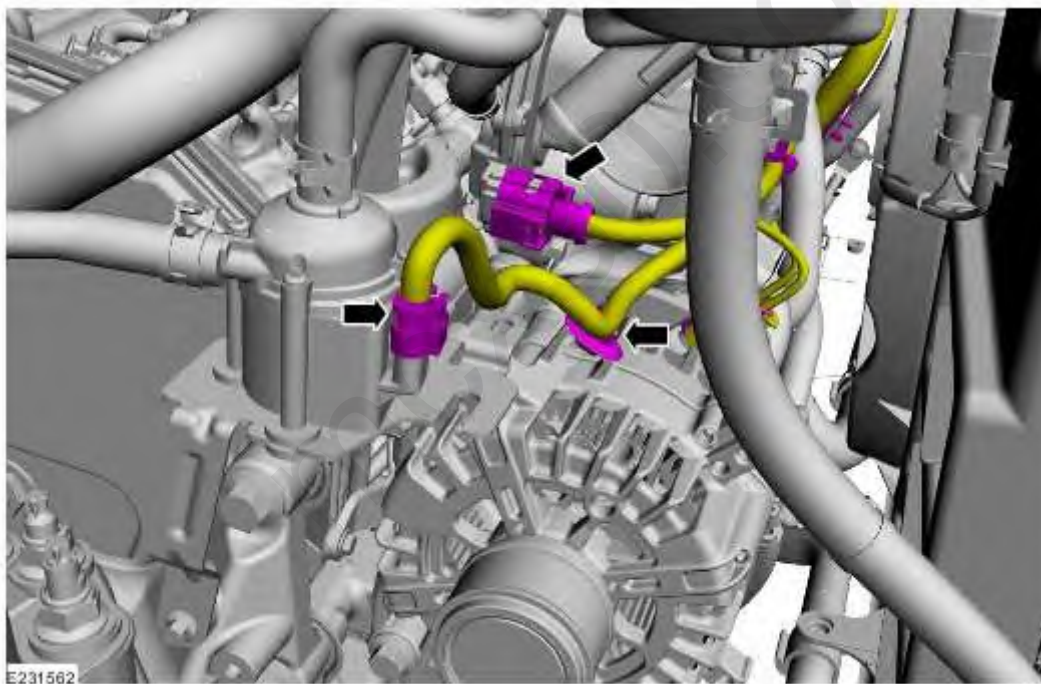


19.

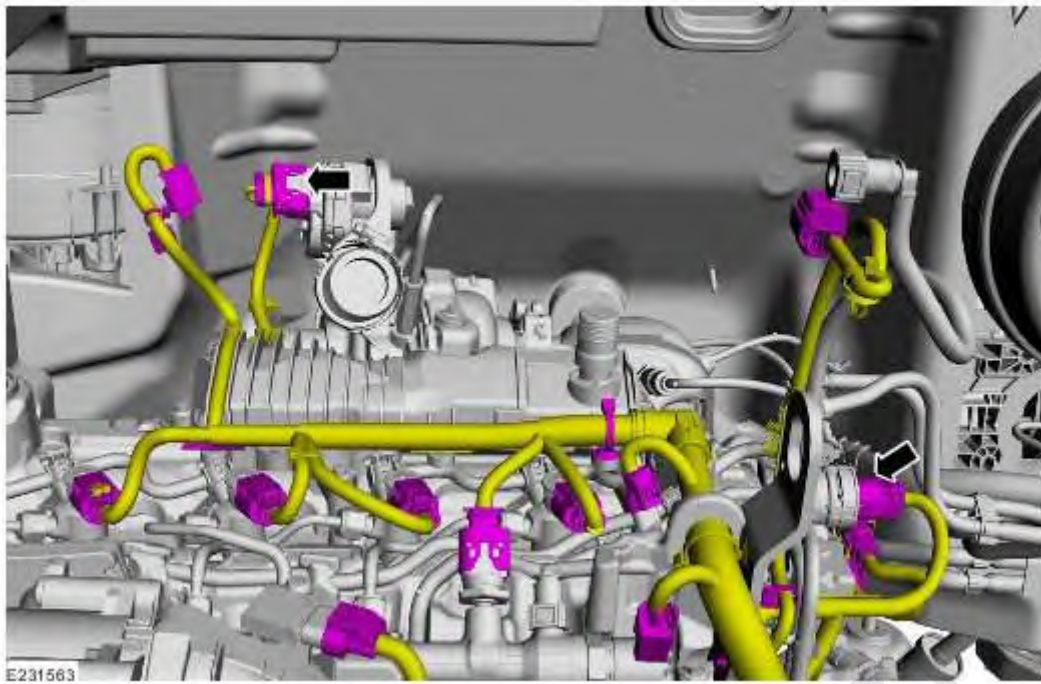


20.

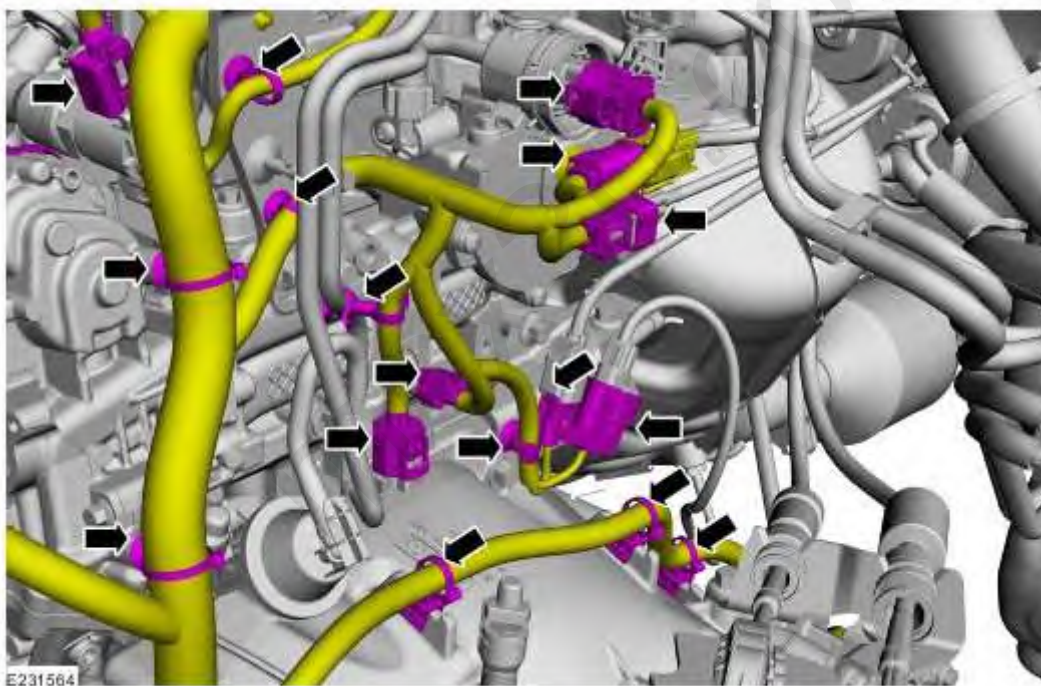

21.

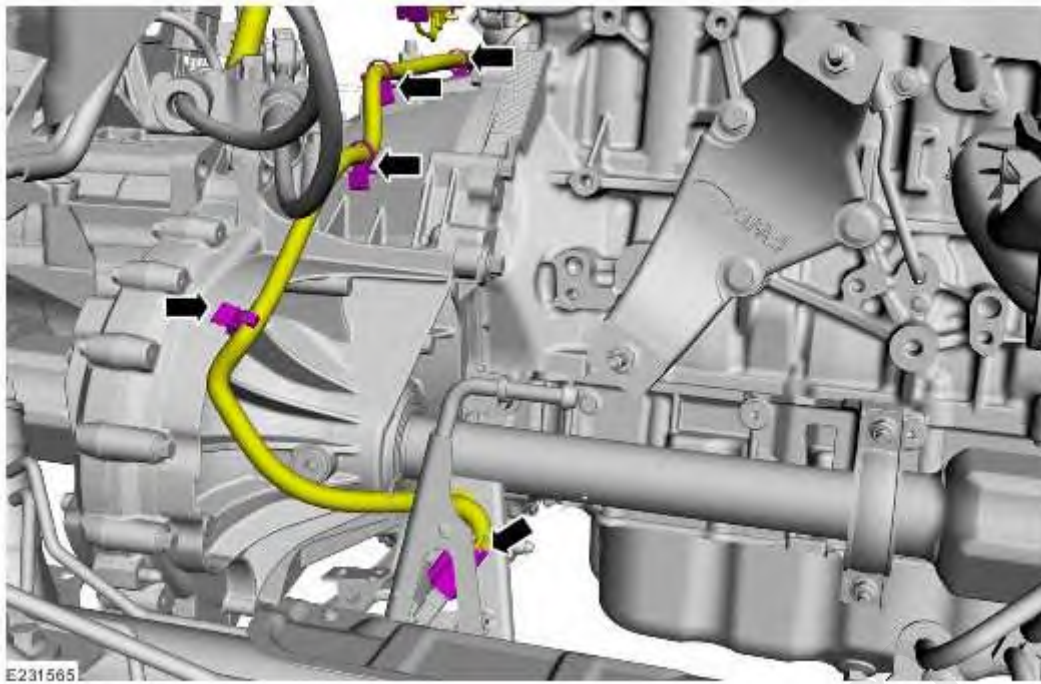


22.

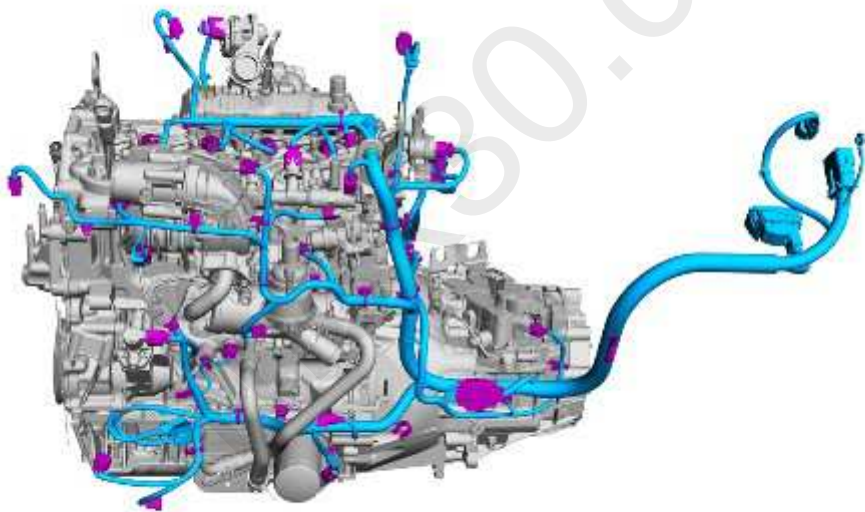

Installation

1. To install, reverse the removal procedure.
2. Tighten the shear bolt until the head is sheared off.

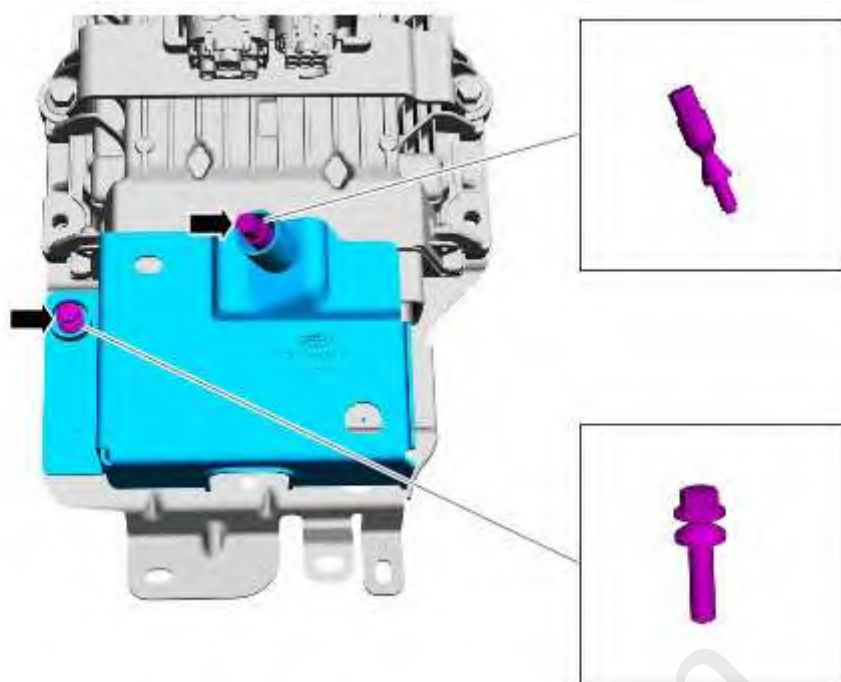

E171101

mcx30.com