


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. 1. If equipped.

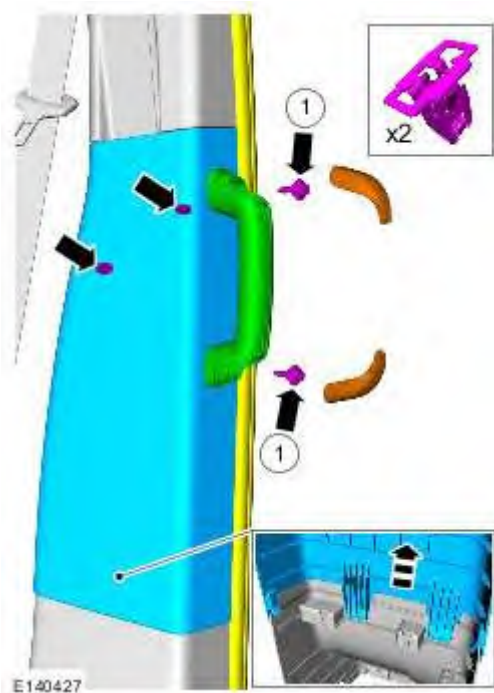

2. *Torque*: 35 Nm



3. 1.



4. Torque: 10.5 Nm



Installation

1. To install, reverse the removal procedure.