

Removal and Installation

General Equipment

Ford approved diagnostic tool

Removal

NOTICE:



Modules are not interchangeable between vehicles.




When installing a new junction box, make sure that the contents match those of the removed junction box.

1. **NOTE:** This step is only necessary when installing a new component.


Download the module information to the diagnostic tool using the Programmable Modules Installation routine.

Use the General Equipment: [Ford approved diagnostic tool](#)


2. Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
- 3.

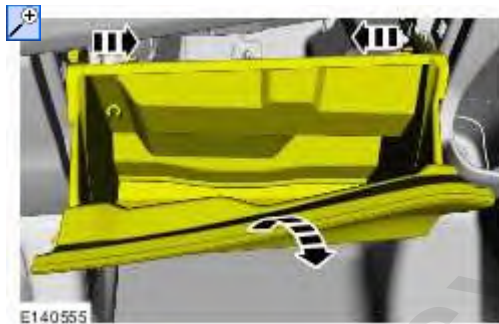

- 4.

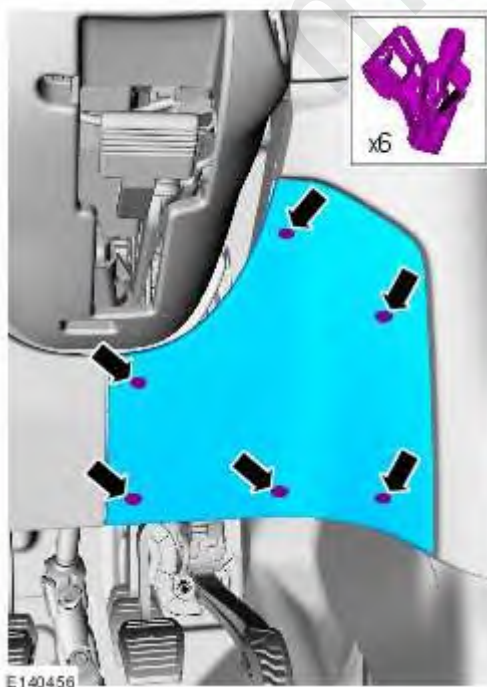


5.

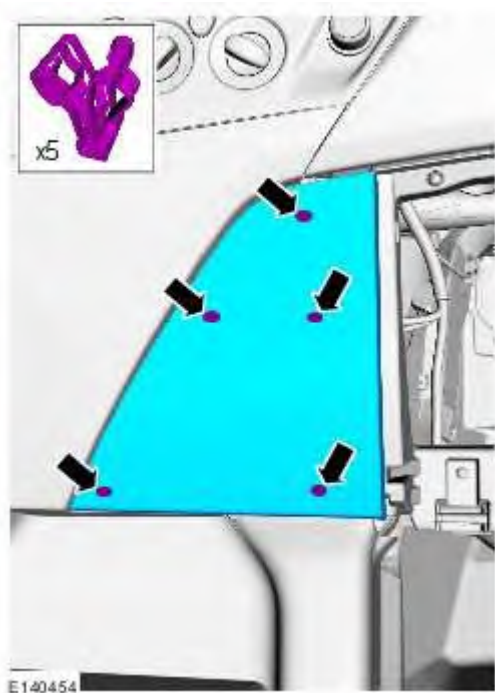

6.




7.

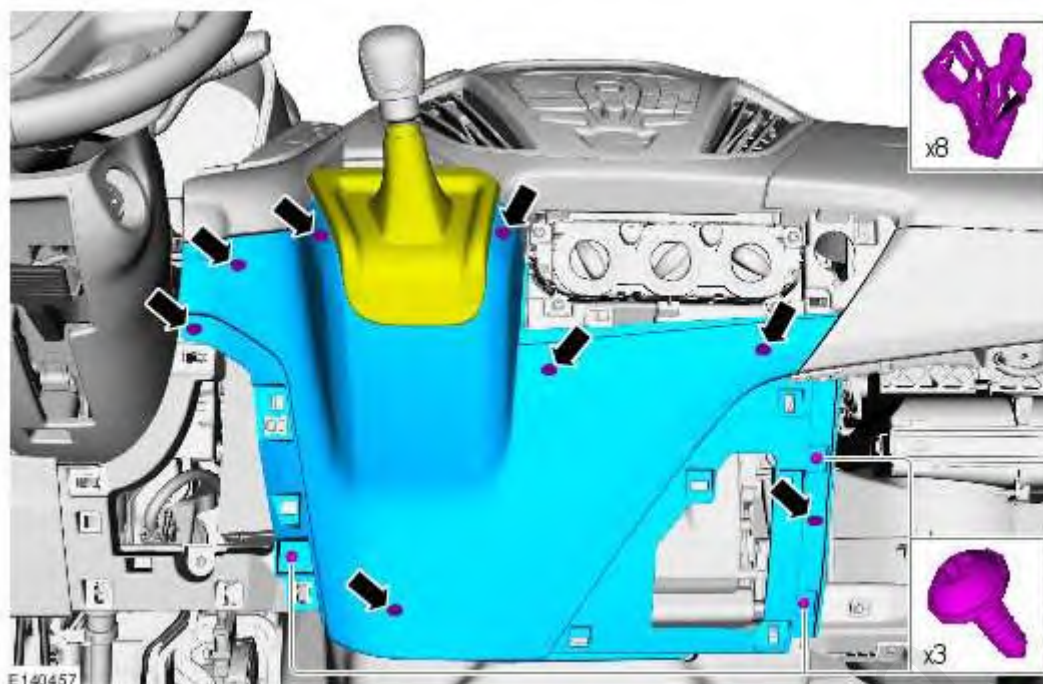


8.





9.

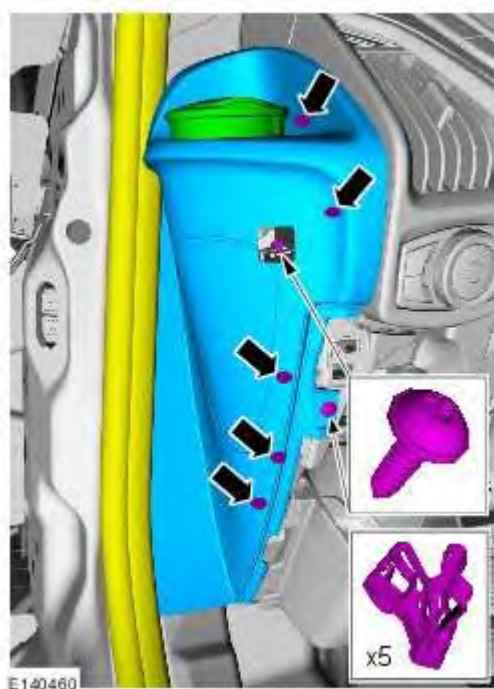

10.

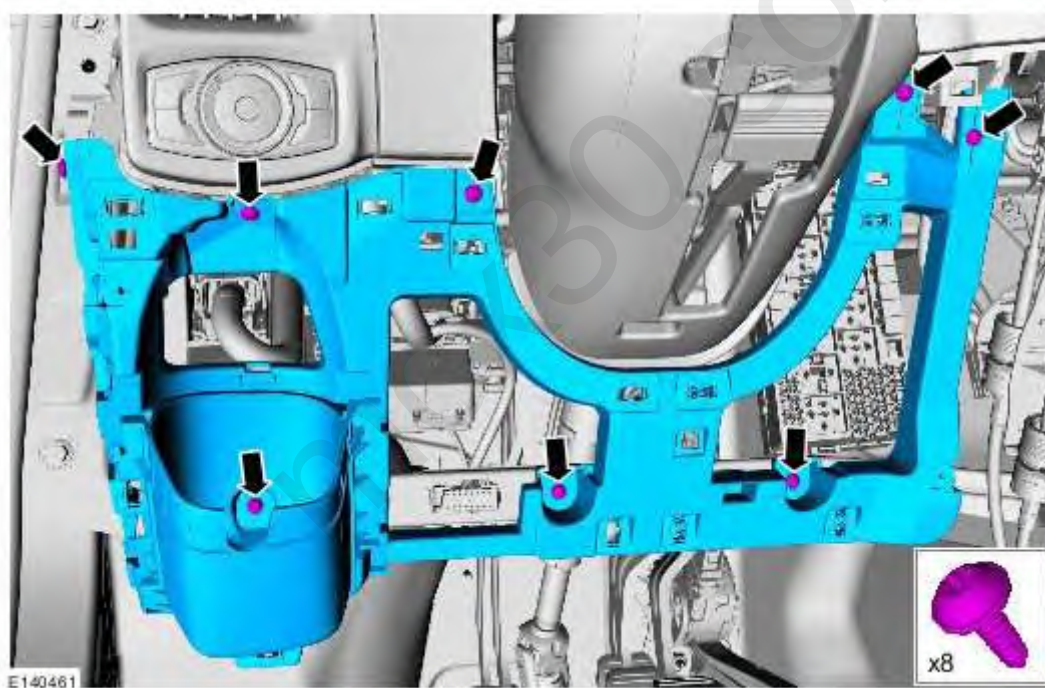

11.

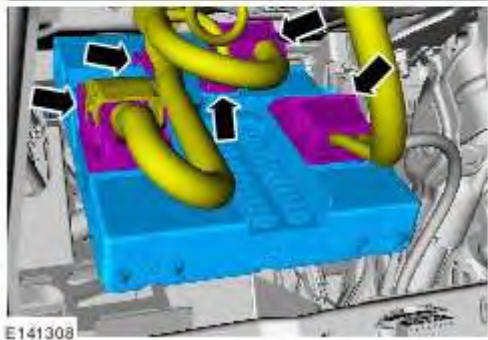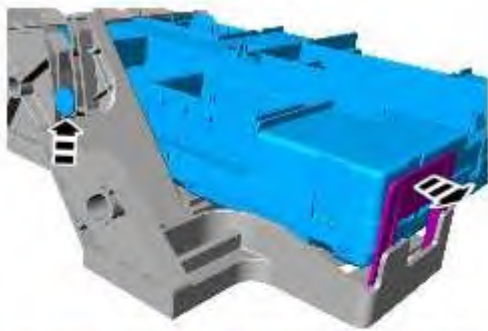

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** This step is only necessary when installing a new component.

Upload the module information from the diagnostic tool to the module using the Programmable Modules Installation routine.

Use the General Equipment: [Ford approved diagnostic tool](#)