


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Front Bumper Cover](#) (501-19 Bumpers, Removal and Installation).
2. *Torque: 25 Nm*

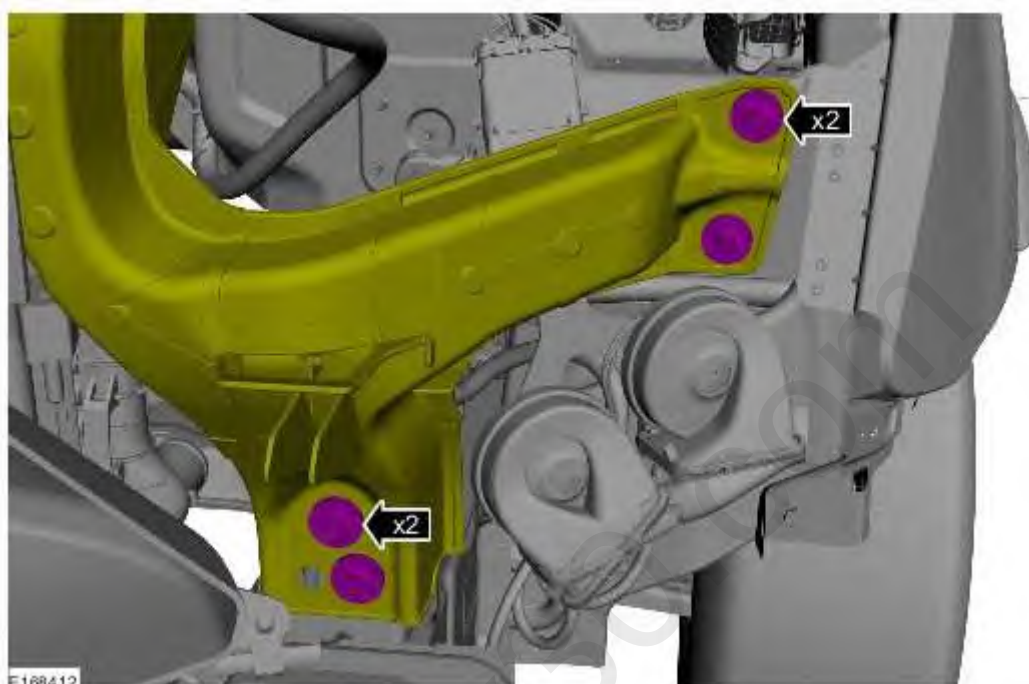


3.

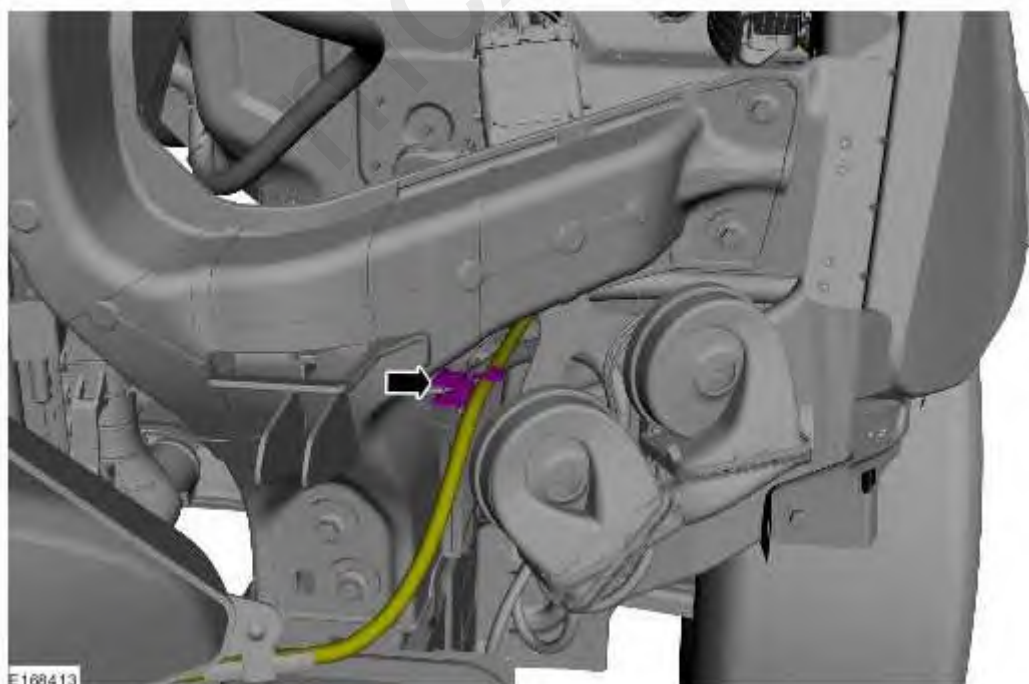


4.

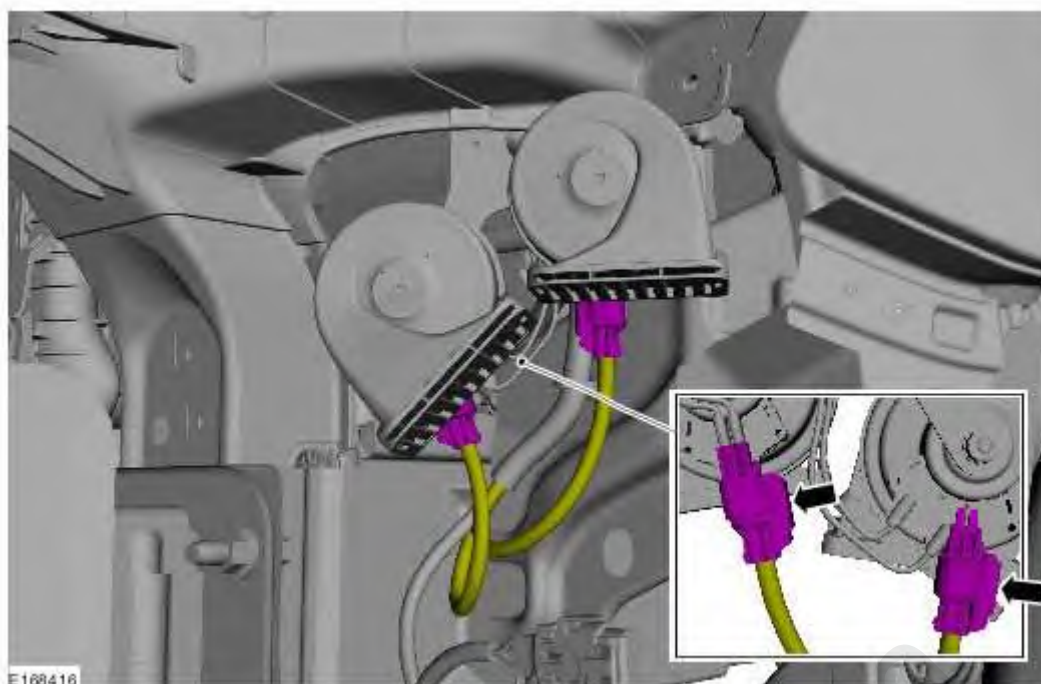


5. Torque: 25 Nm

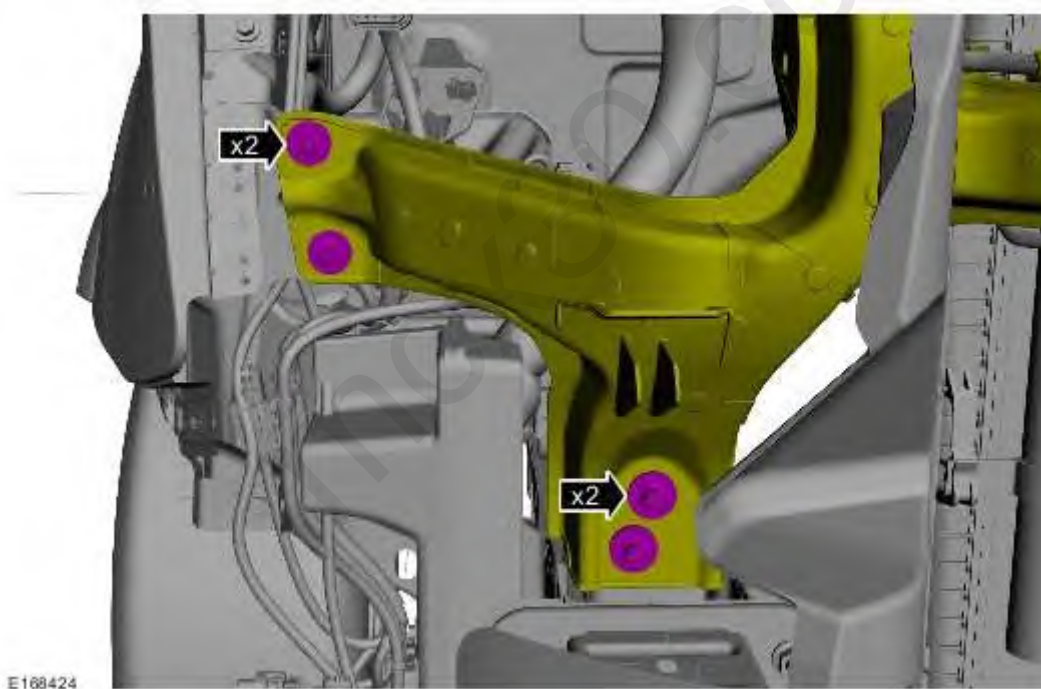


6.

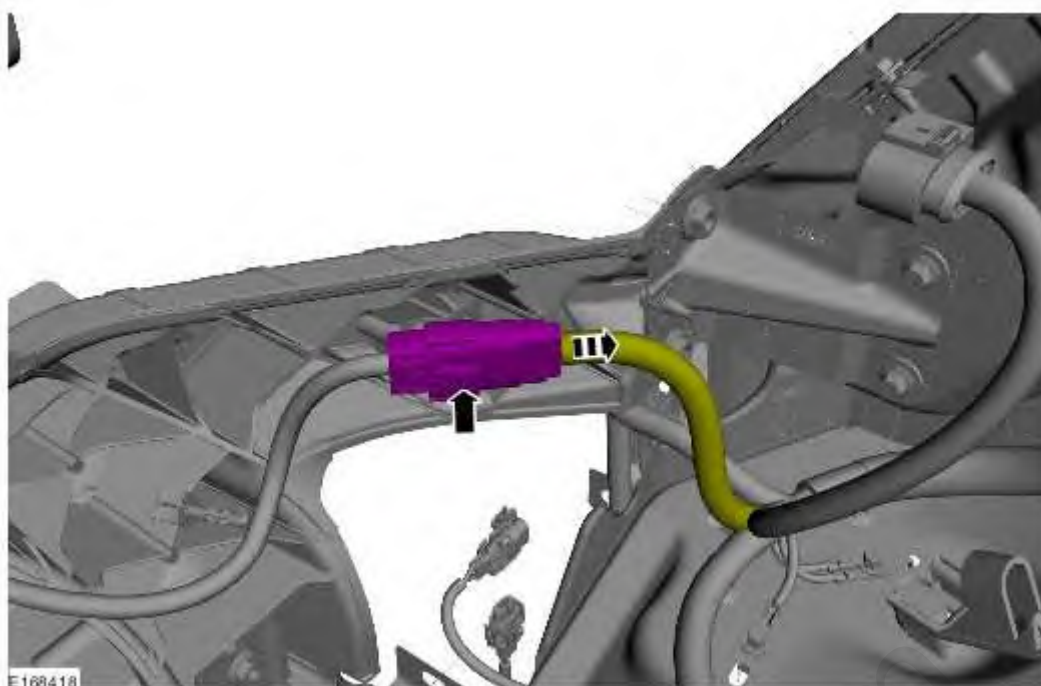


7.

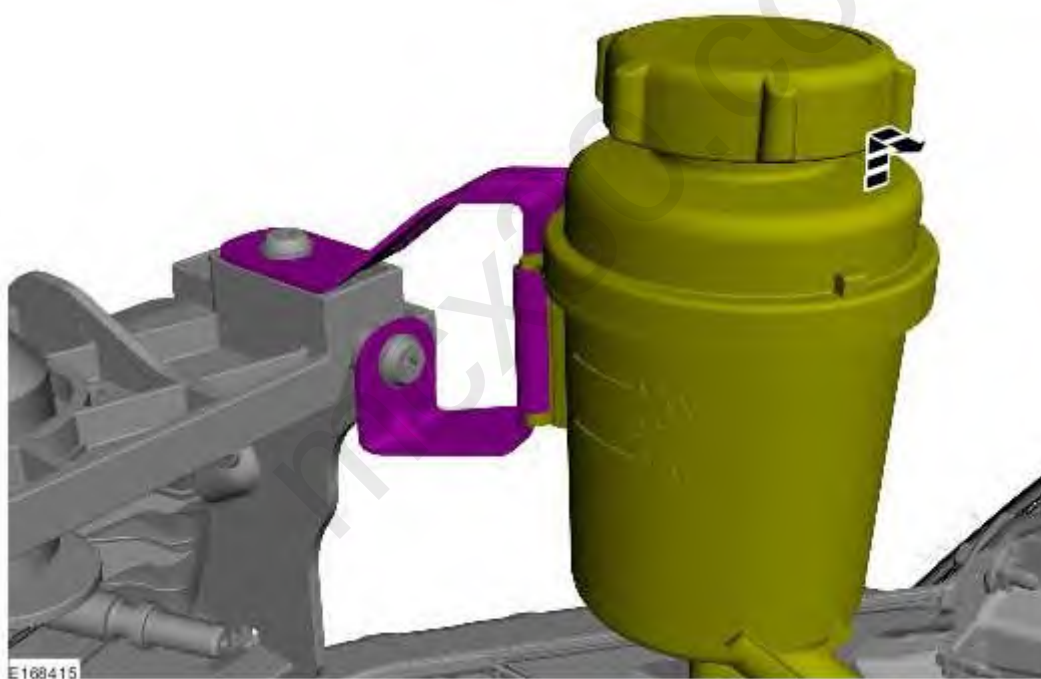


8.

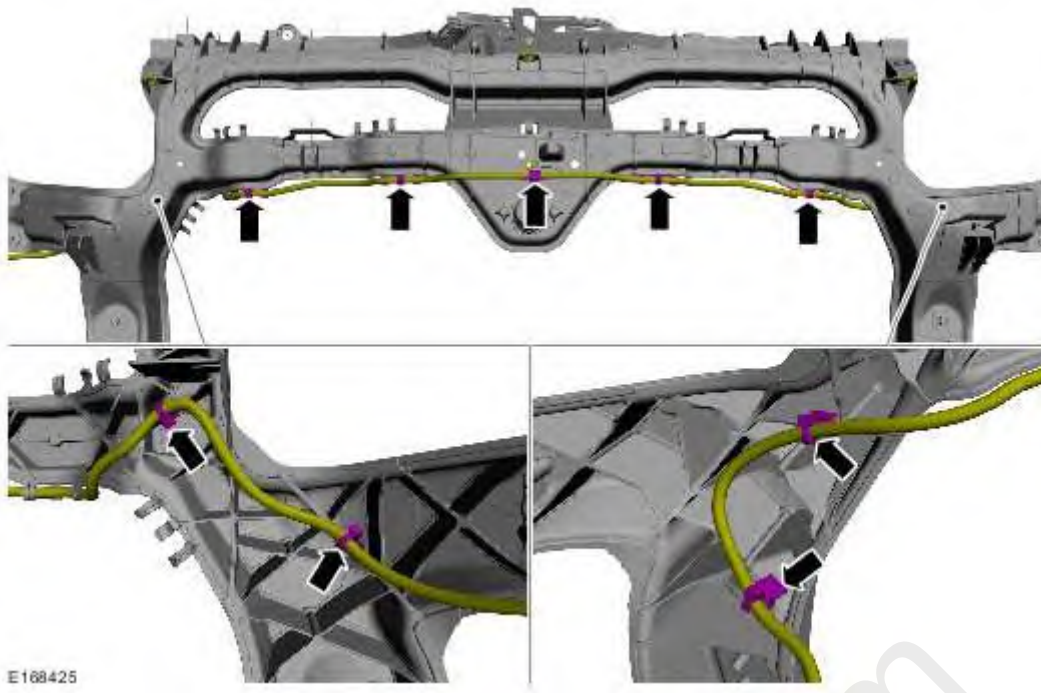

9. On both sides.

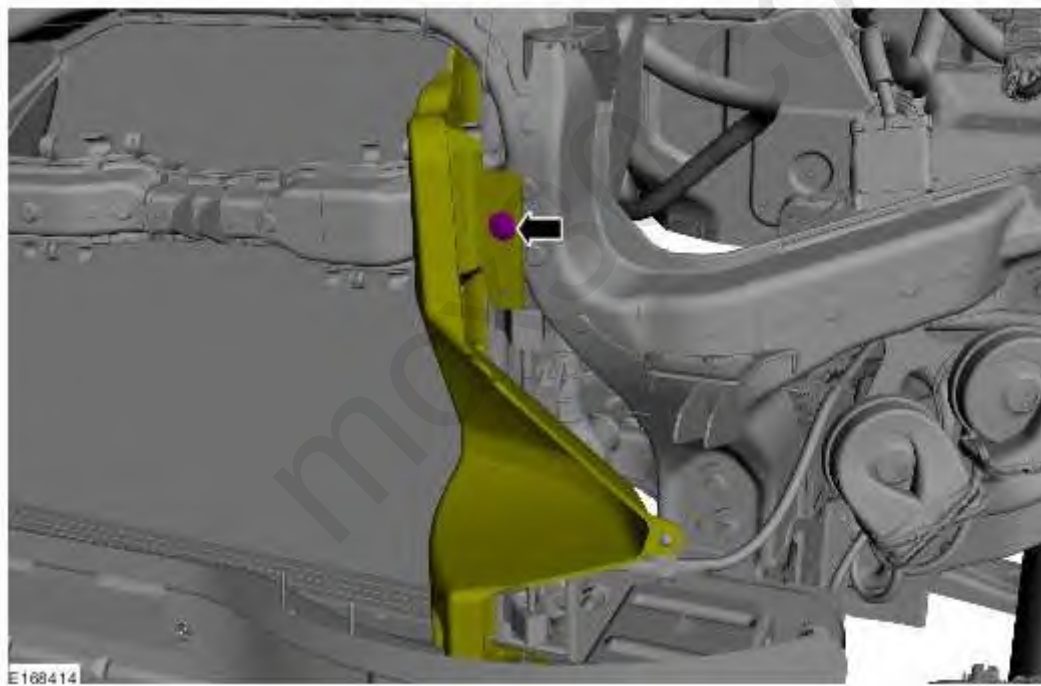

10. NOTE: This step requires the aid of another technician.

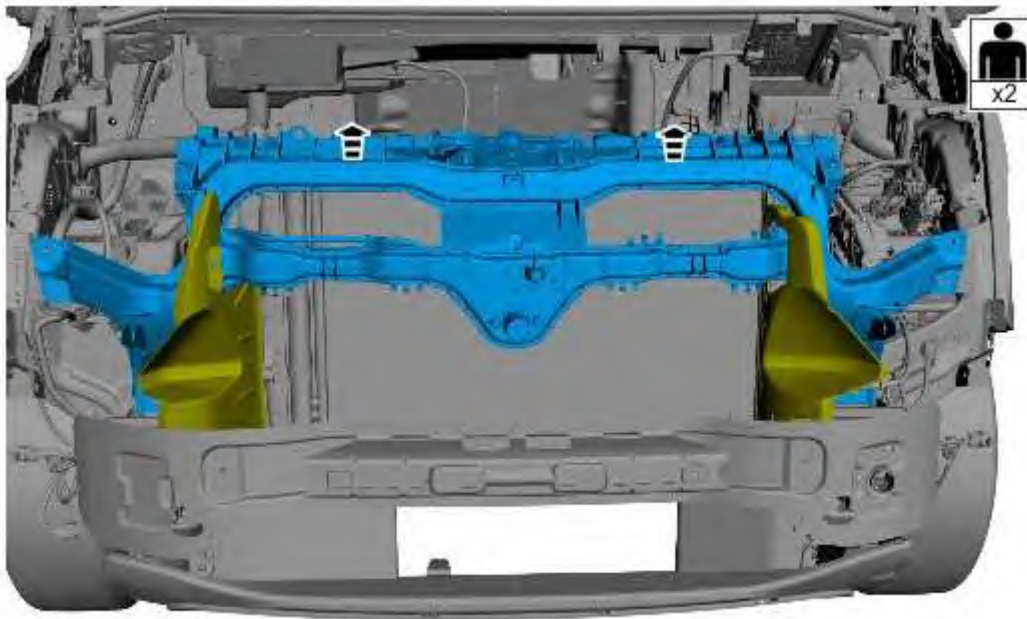

E188417

NOTE: The following steps are only necessary when installing a new component.

11. Refer to: [Hood Lock Cylinder](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
12. Refer to: [Hood Latch](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
13. Refer to: [Horn](#) (413-06 Horn, Removal and Installation).

Installation

1. To install, reverse the removal procedure.