

Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.


1.



2.

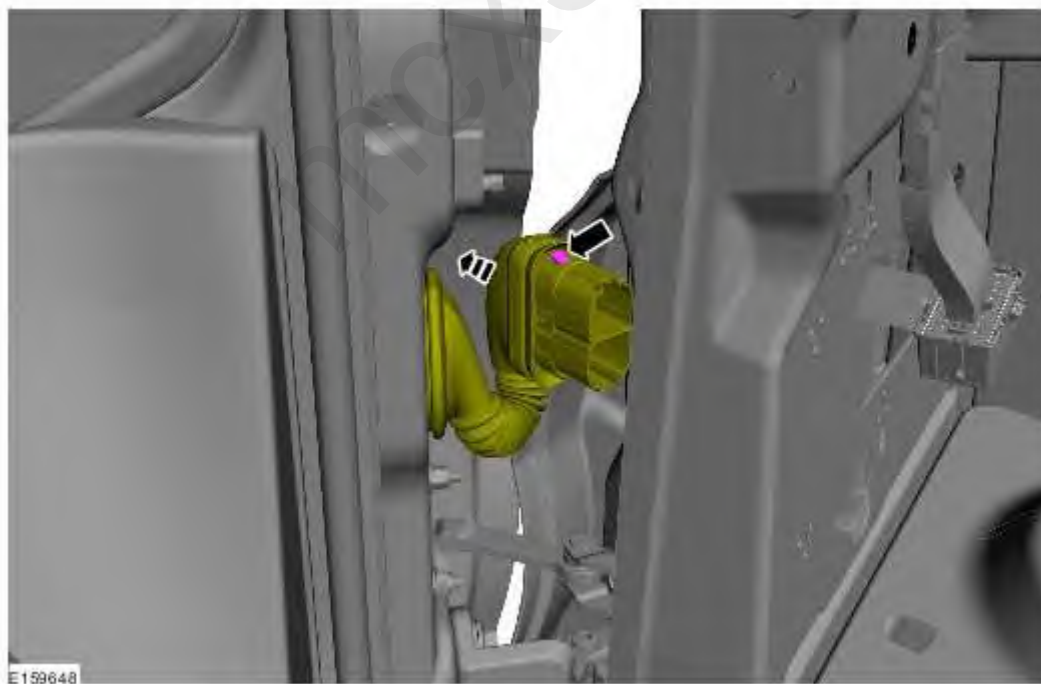


3. Torque: 30 Nm

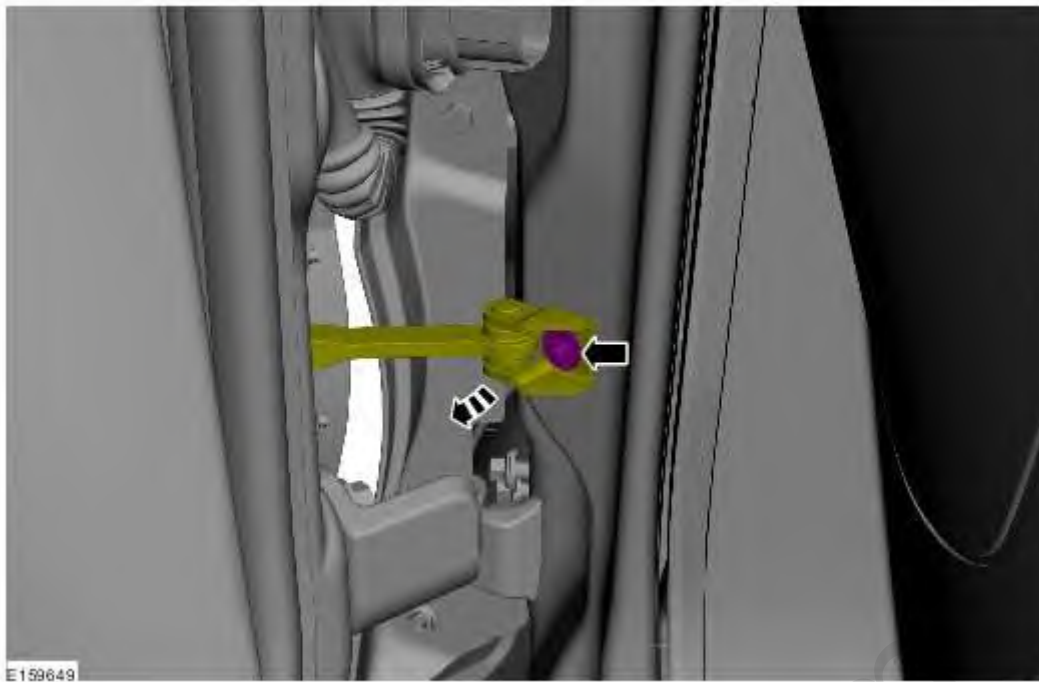

4. NOTE: Make sure that no component falls off during removal.
NOTE: This step requires the aid of another technician.

Torque: 25 Nm

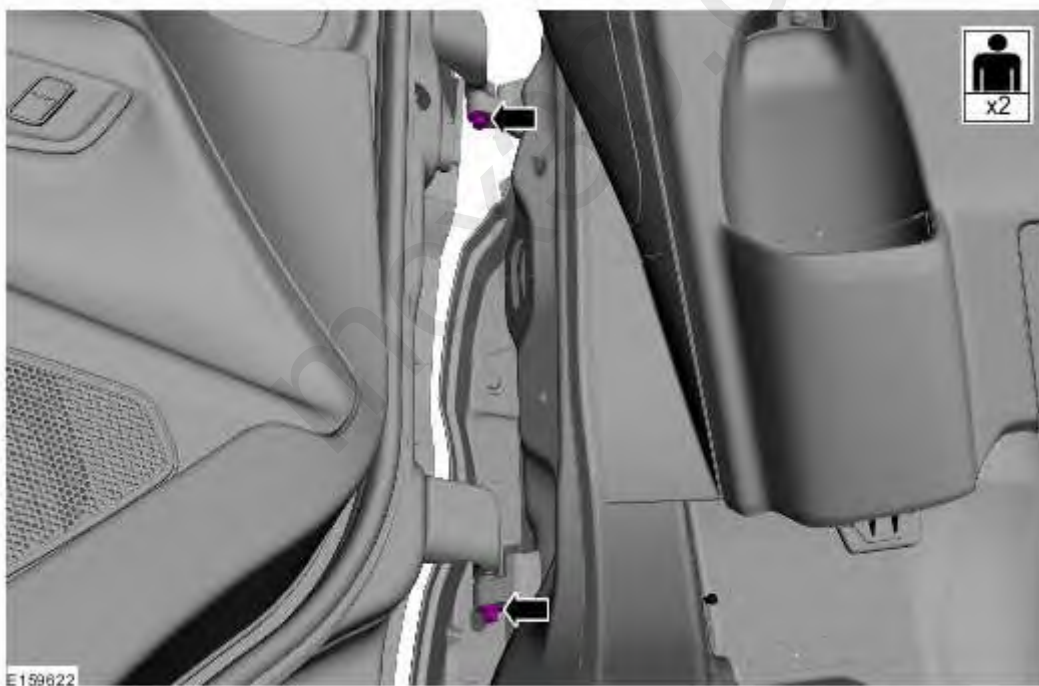

5. NOTE: This step requires the aid of another technician.



E159823

Installation

1. To install, reverse the removal procedure.