


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Liftgate Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
- 2.

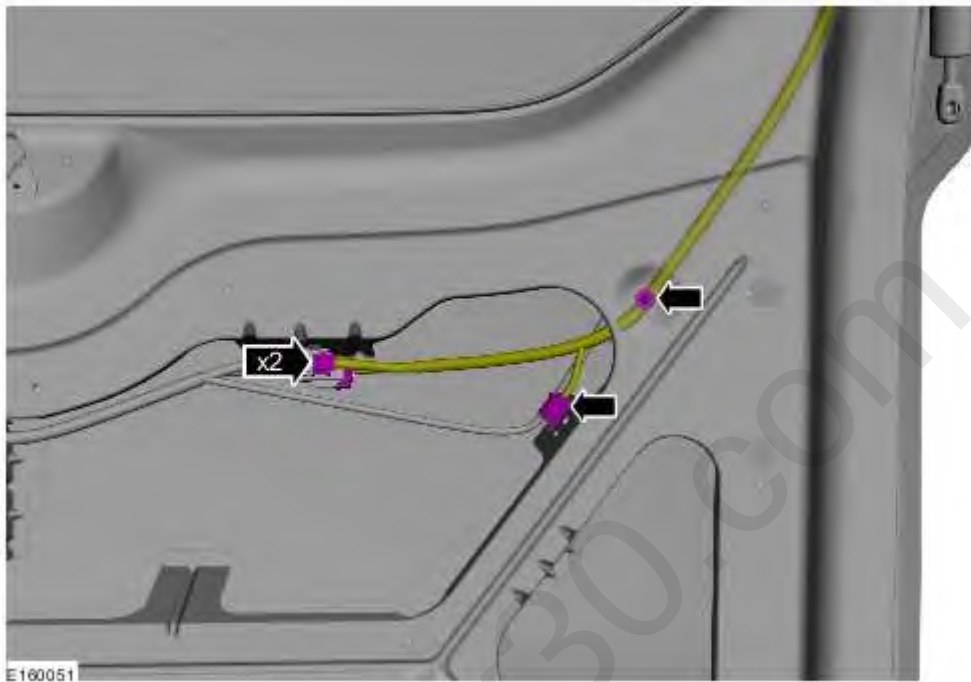


- 3.

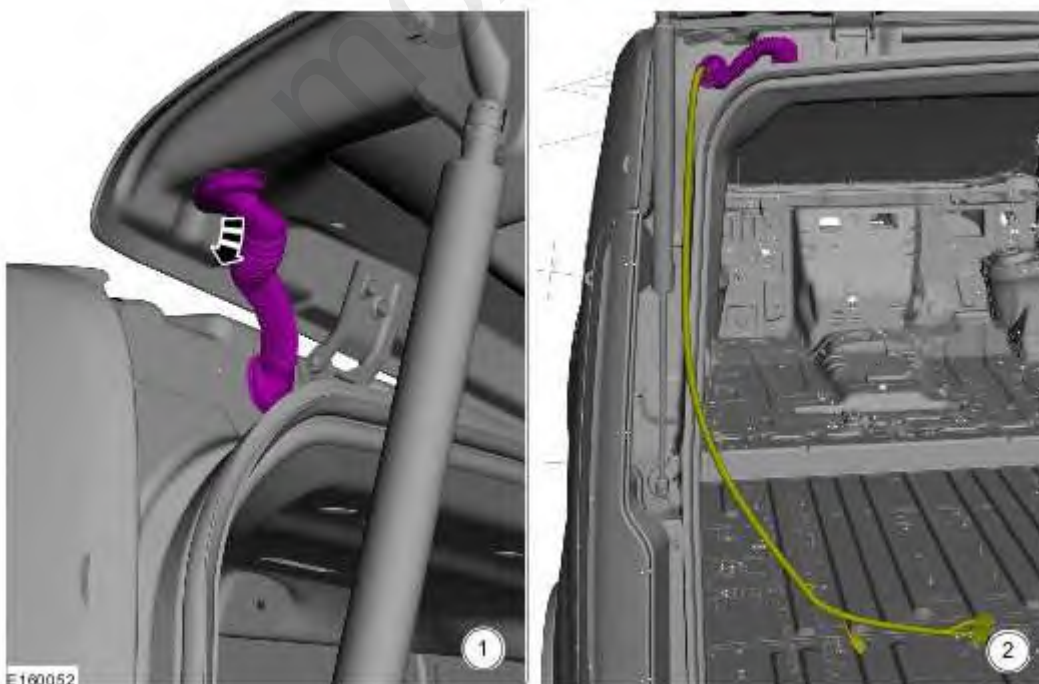

4. NOTE: This step requires the aid of another technician.

On both sides.

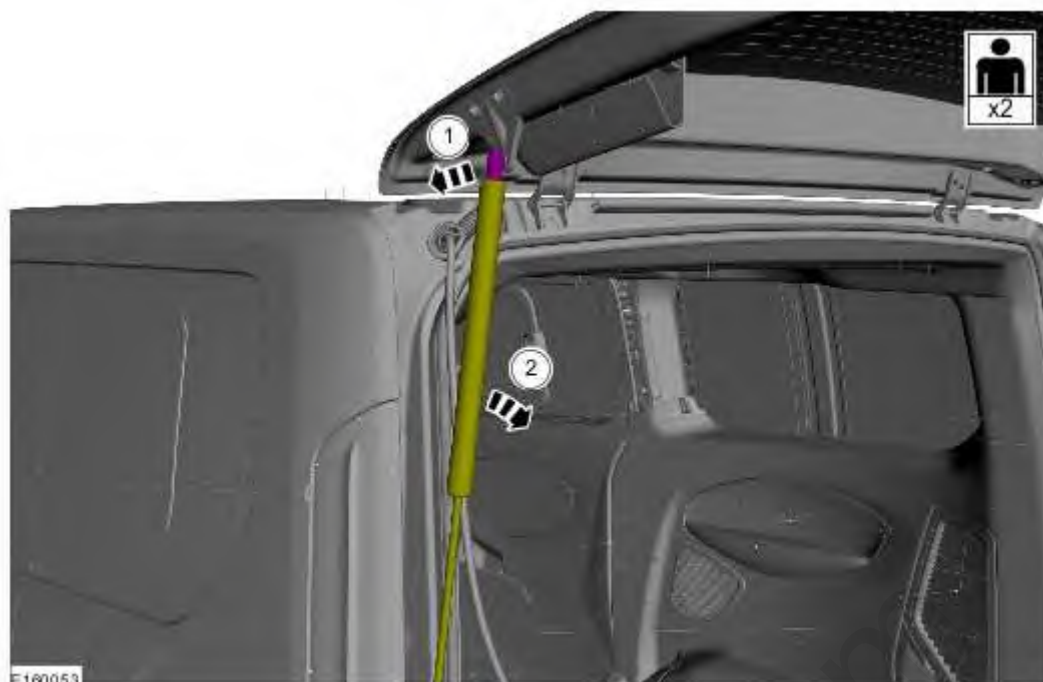

5. **NOTE:** This step requires the aid of another technician.

Torque: 25 Nm



Installation

1. To install, reverse the removal procedure.