

Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.

1.




2. Torque: 11 Nm

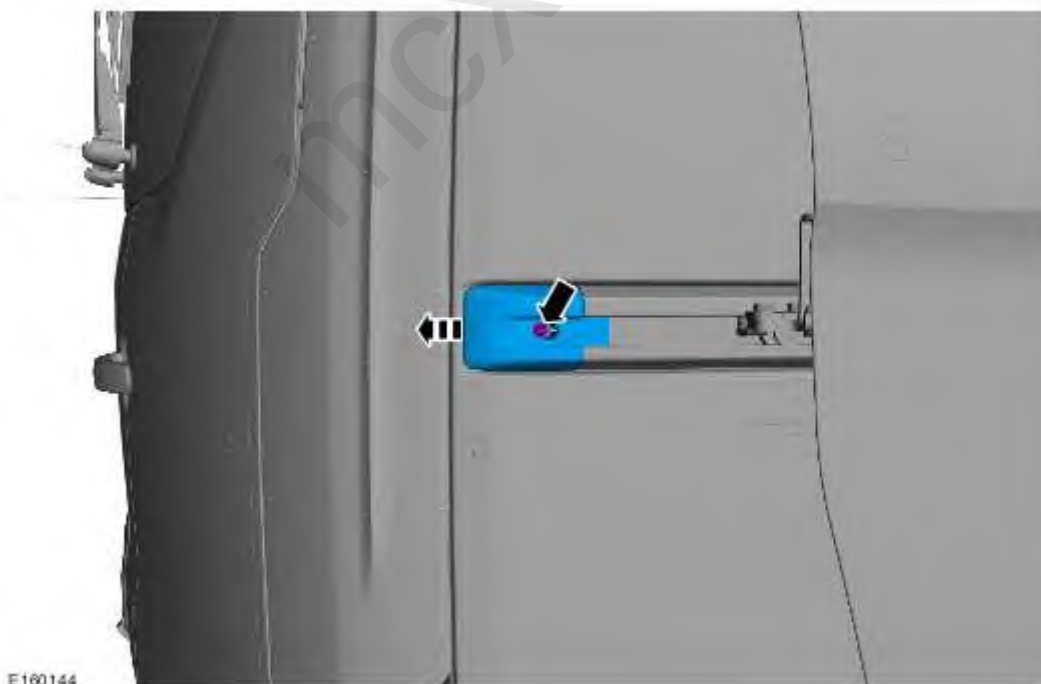


3. Torque: 9 Nm




4.

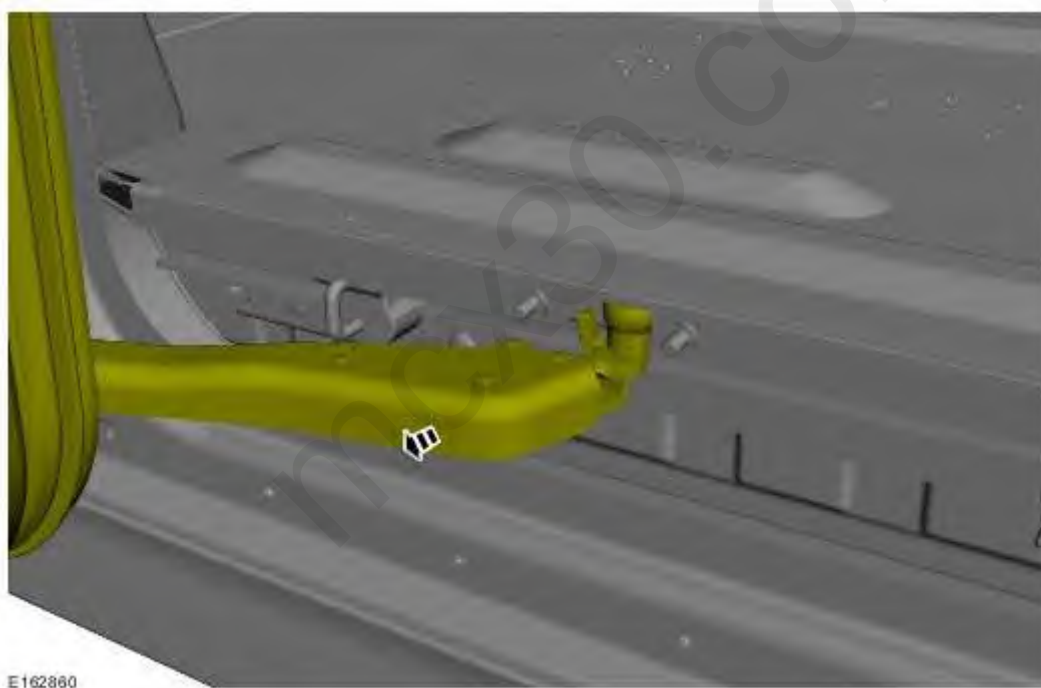

5.

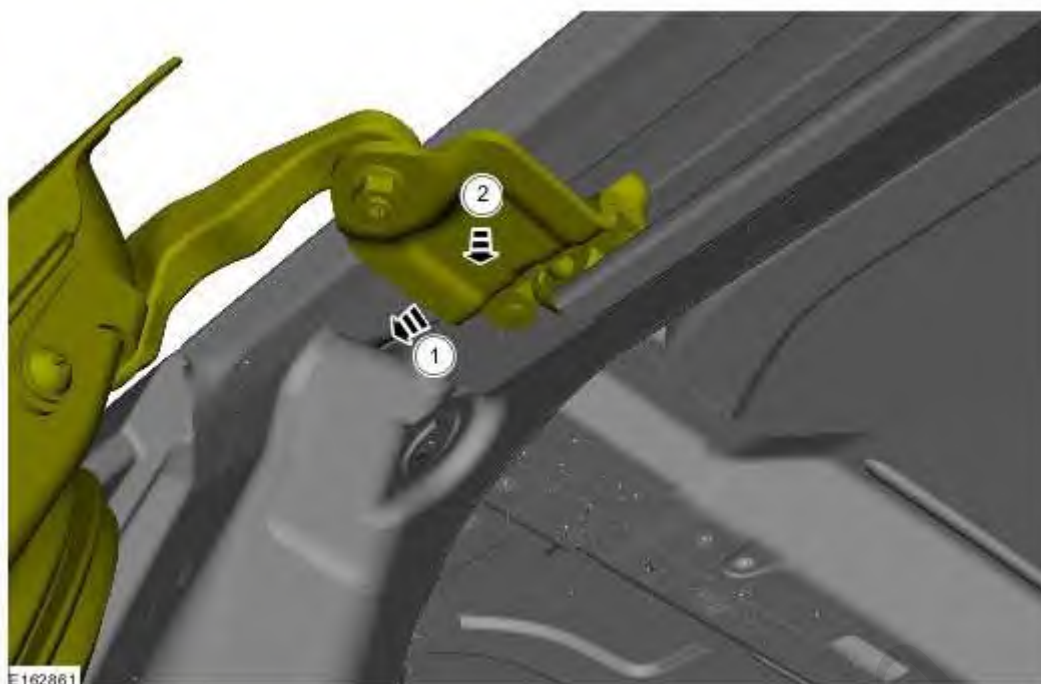

6.

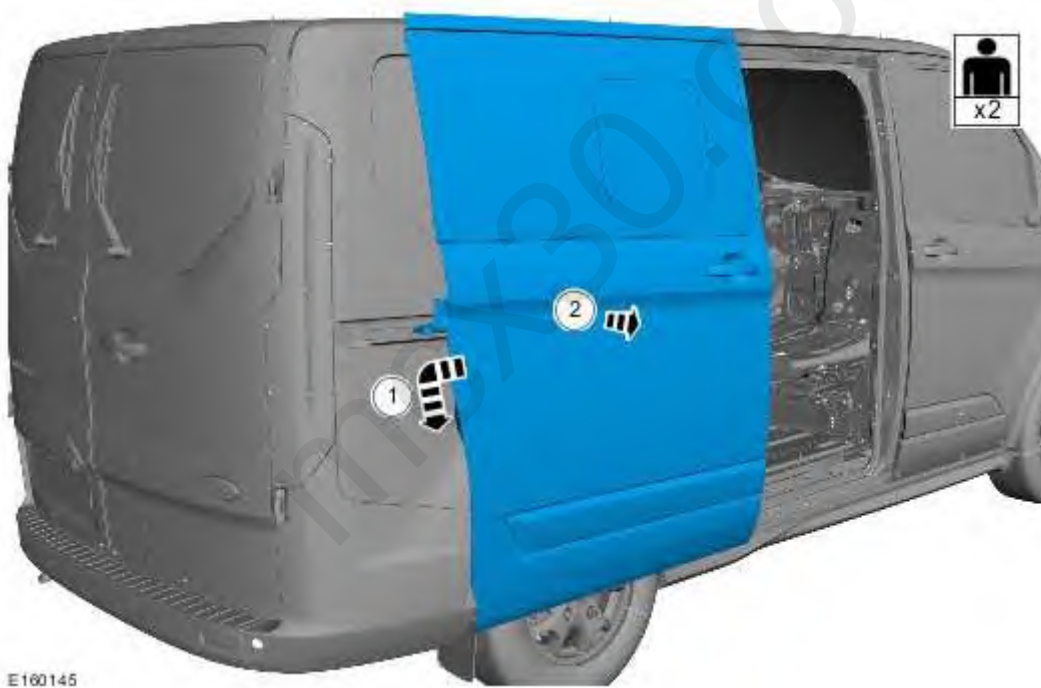

Installation

1. To install, reverse the removal procedure.