


Removal and Installation

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. On both sides.

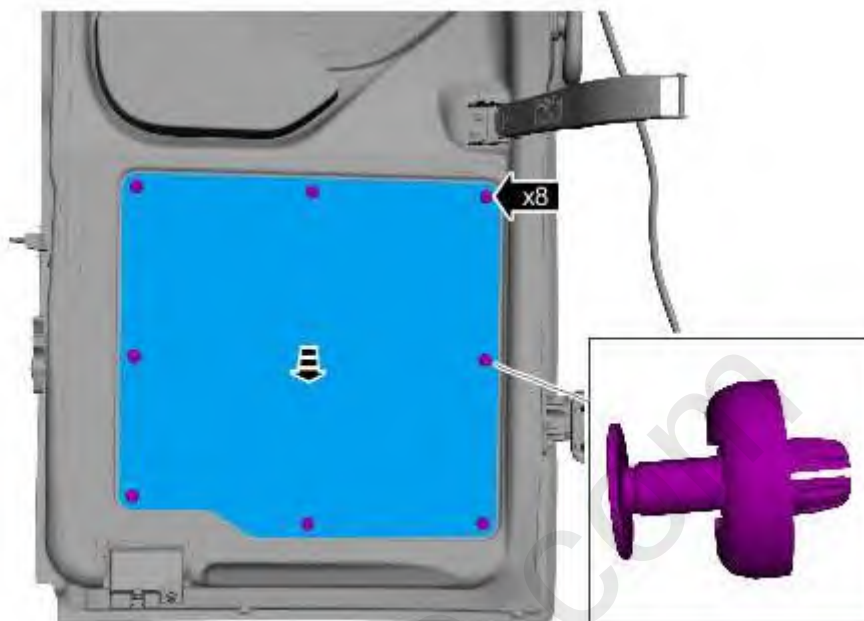

E160313


2. On both sides.

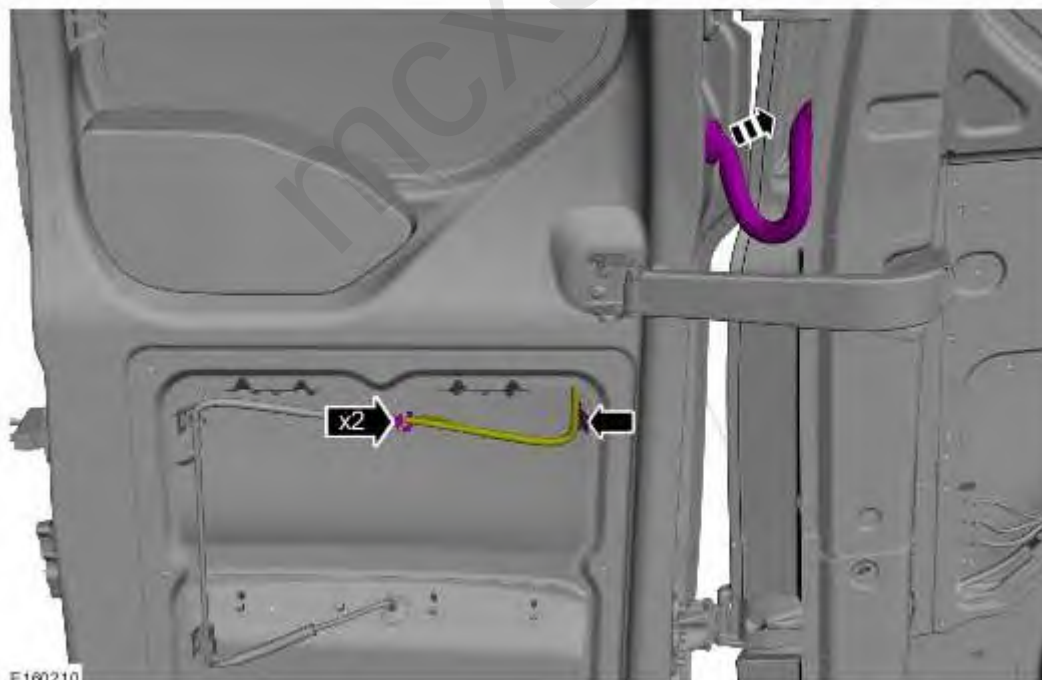

E160210

3. On both sides.

Torque: 25 Nm

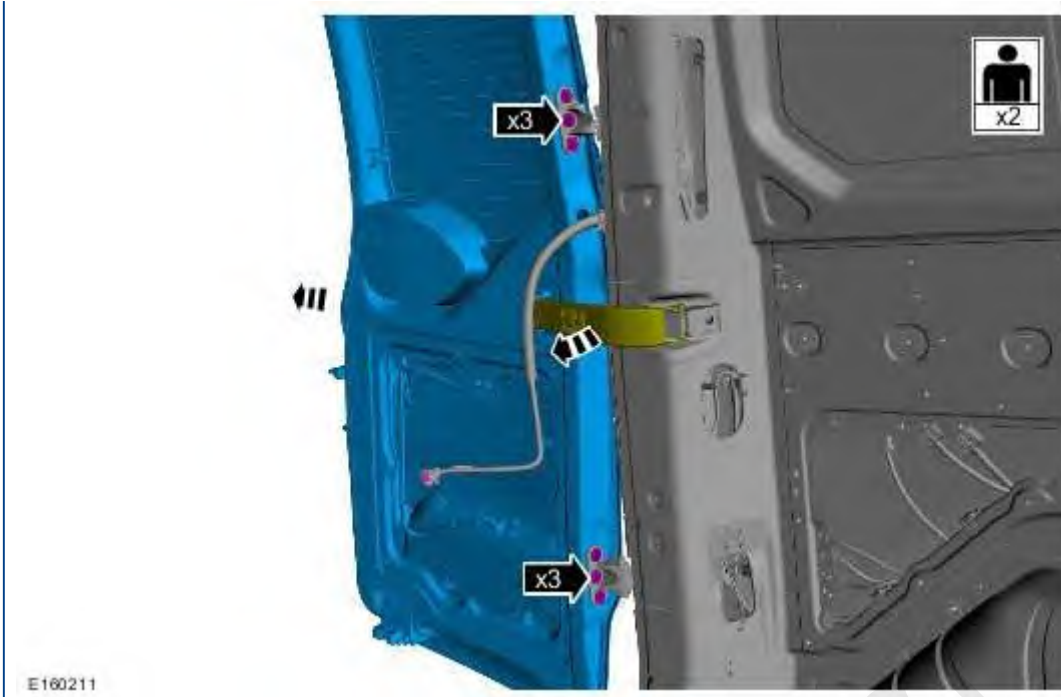

Installation

1. To install, reverse the removal procedure.