


Removal and Installation

General Equipment

Flat Headed Screw Driver

Removal

1. Use the General Equipment: Flat Headed Screw Driver

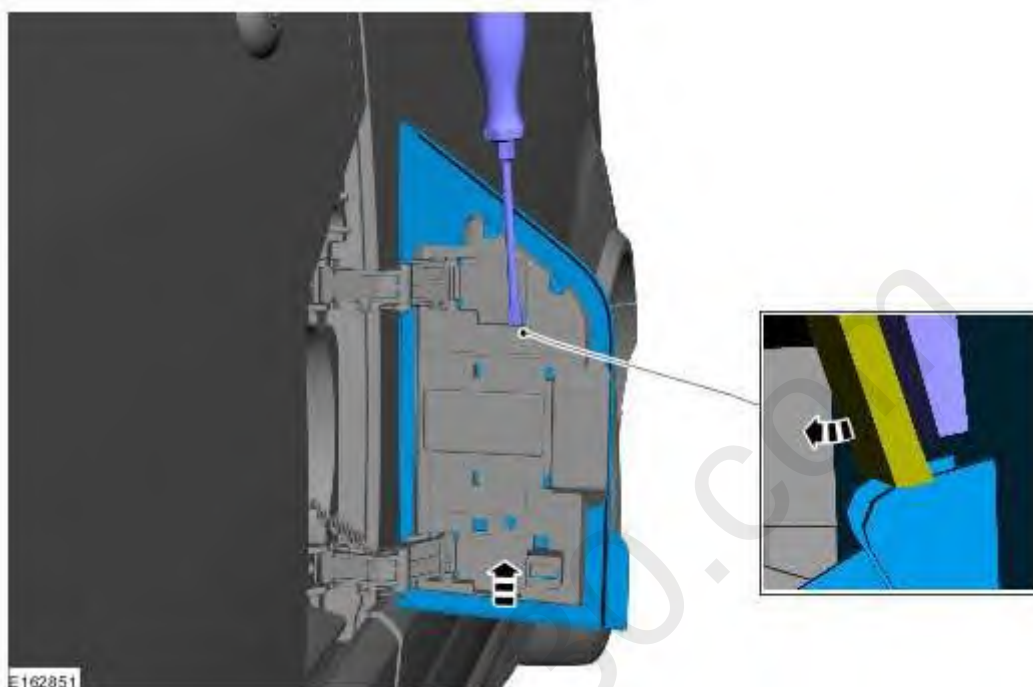

Installation

1. To install, reverse the removal procedure.