


## Removal and Installation


### Removal

1. If equipped.

*Torque: 10.5 Nm*

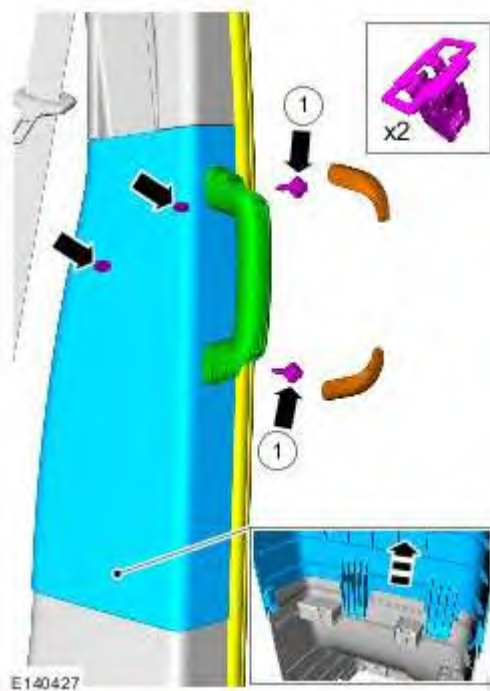

- 2.

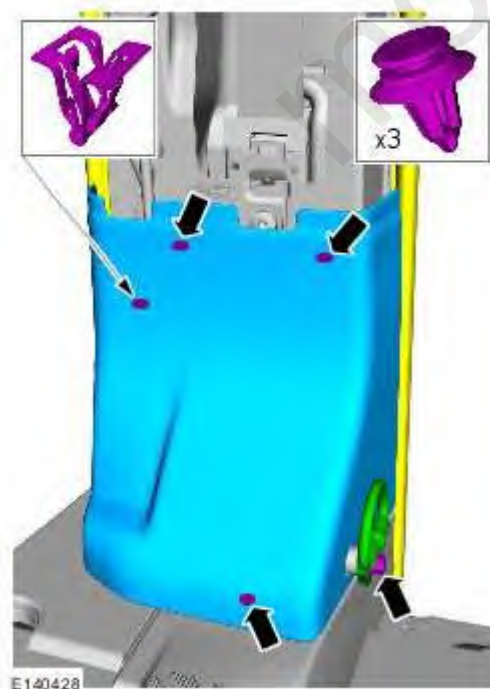

3. *Torque: 35 Nm*



4. 1. Torque: 10.5 Nm



## Installation

1. To install, reverse the removal procedure.